




# Packard Bell ms-Hera c Disassembly

Disassembly useful to replace different internal component

Written By: Smilzo



## Step 1 — Packard Bell ms-Hera c Disassembly

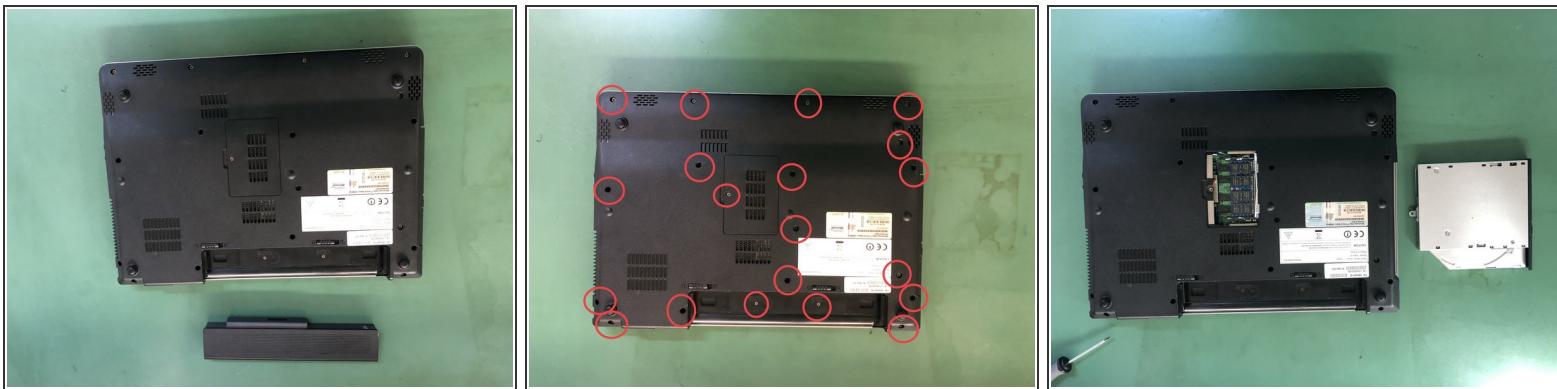

- Remove the battery
- Unscrew the red marked screws with a Phillips screwdriver
- Remove the DVD reader

## Step 2



- Pry in the red marked spots to release the keyboard
- Unplug the keyboard connector

## Step 3



- Unplug the 3 connectors on the motherboard
- Remove the 2 screws holding the display in place
- Use a thin tool to pry up the back cover of the laptop on the side

## Step 4



- Remove the back cover
- Remove the HDD
- Remove the screws that hold the motherboard

## Step 5



- Remove the marked screws and connectors
- Disconnect the display connector
- Remove the display

## Step 6



- Remove the fan
- Remove the heatsink
- Remove the screws on the connector

## Step 7



- Remove the screws to remove the motherboard

To reassemble your device, follow these instructions in reverse order.