


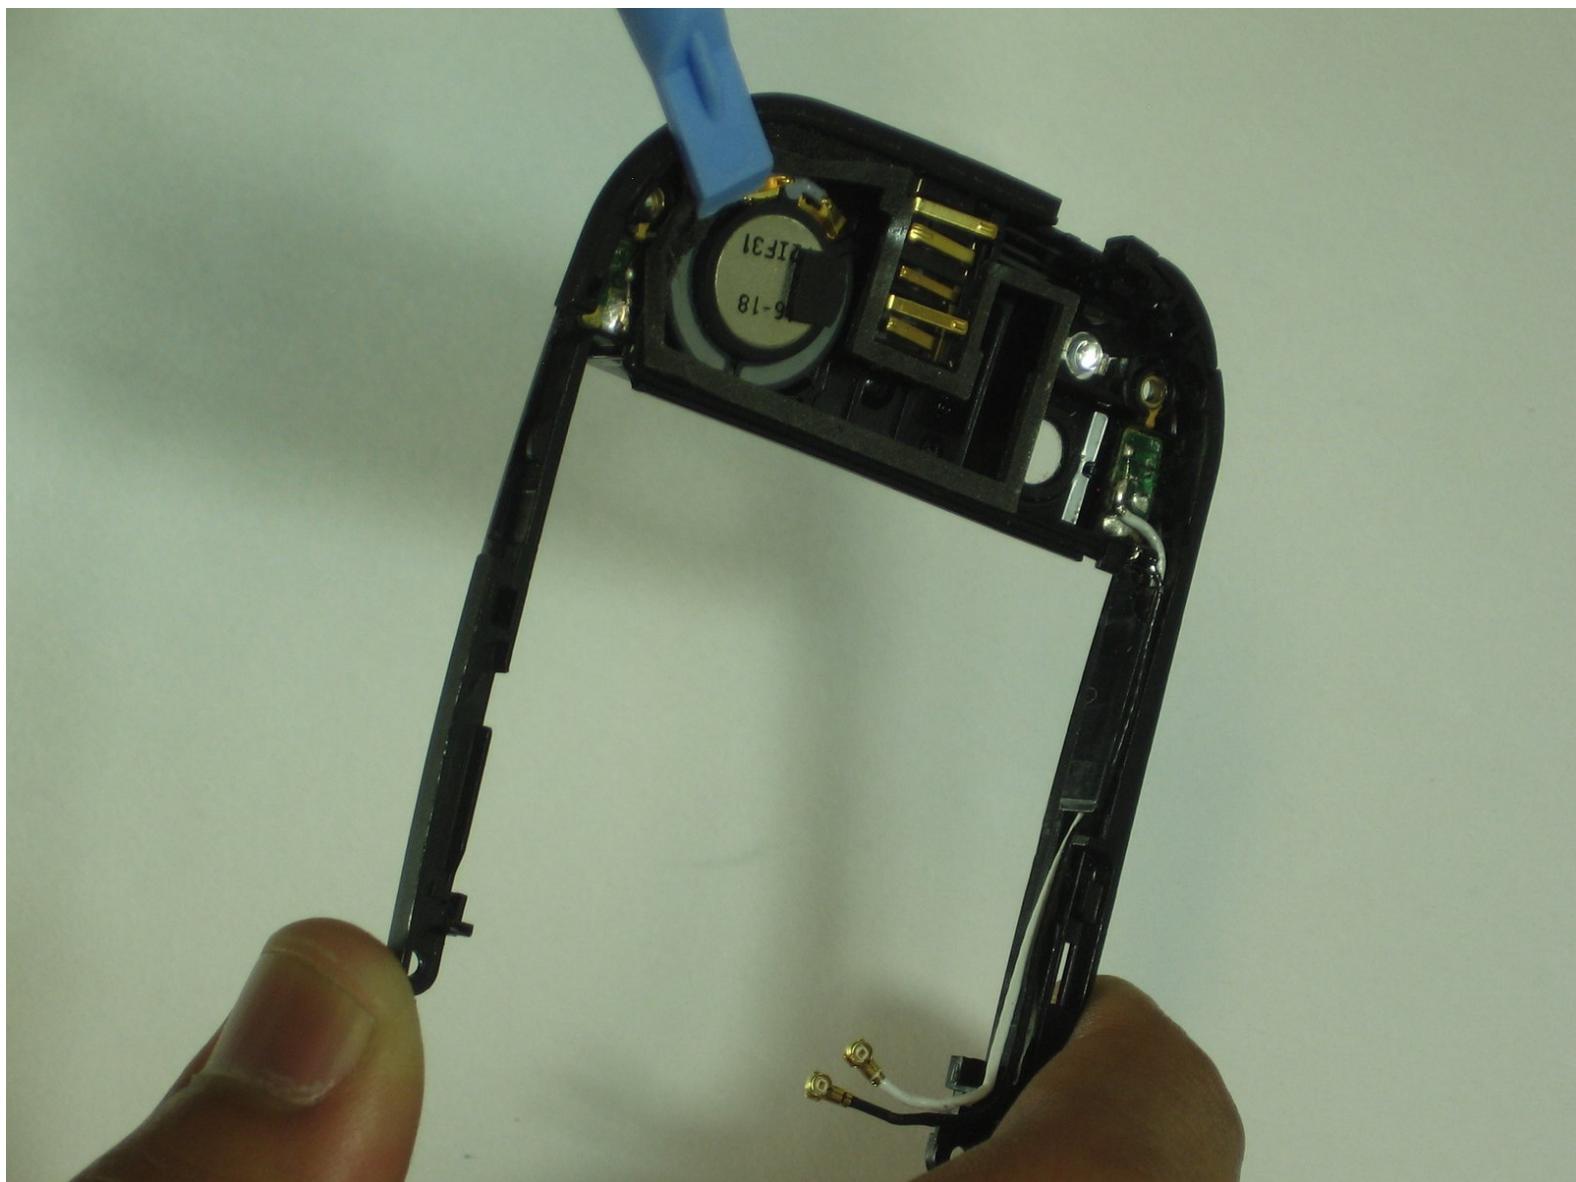

# Palm Pre Speaker Replacement

Guide to replacing the Palm Pre speaker.

Written By: noha



 **TOOLS:**

- [Spudger \(1\)](#)
- [T4 Torx Screwdriver \(1\)](#)

## Step 1 — Battery





- Make sure your Palm Pre is turned off before disassembling the phone.
- Snap off the back panel to reveal the battery.

## Step 2





- Carefully pull up on the tab to remove the current battery.

## Step 3 — Speaker

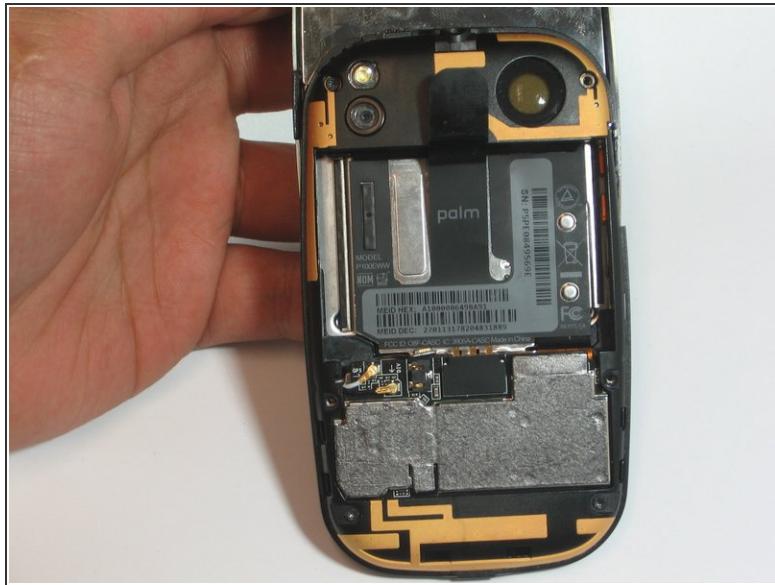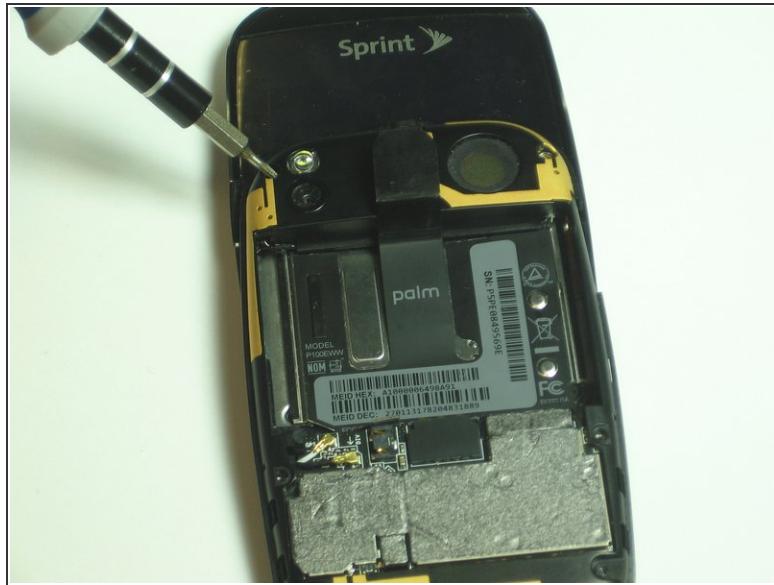


- Use the t4 screwdriver to remove all 6 of the 3.6mm long screws.

## Step 4

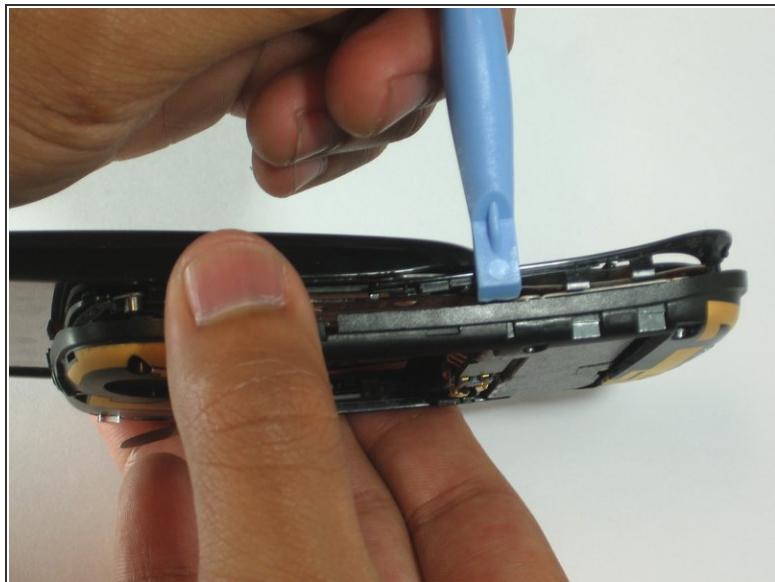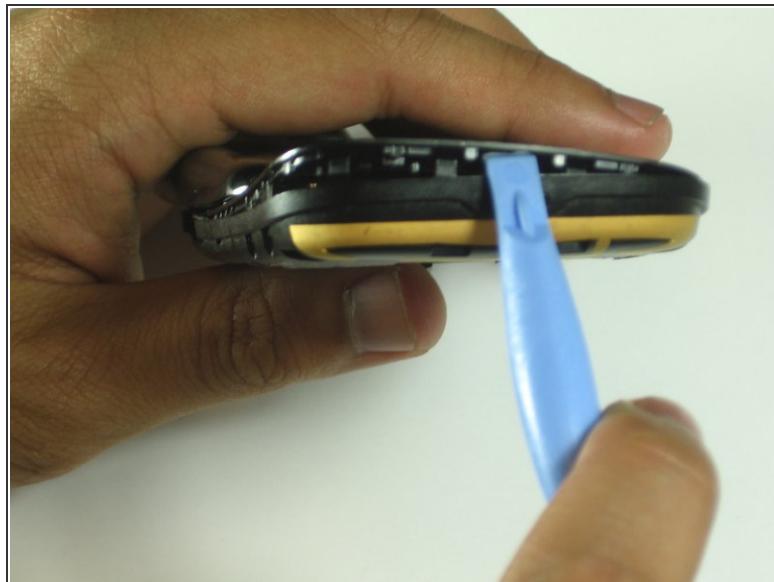


- Use the spudger to locate the crease at the bottom of the keyboard.
- Carefully work your way around the phone separating the back frame from the keyboard.

## Step 5

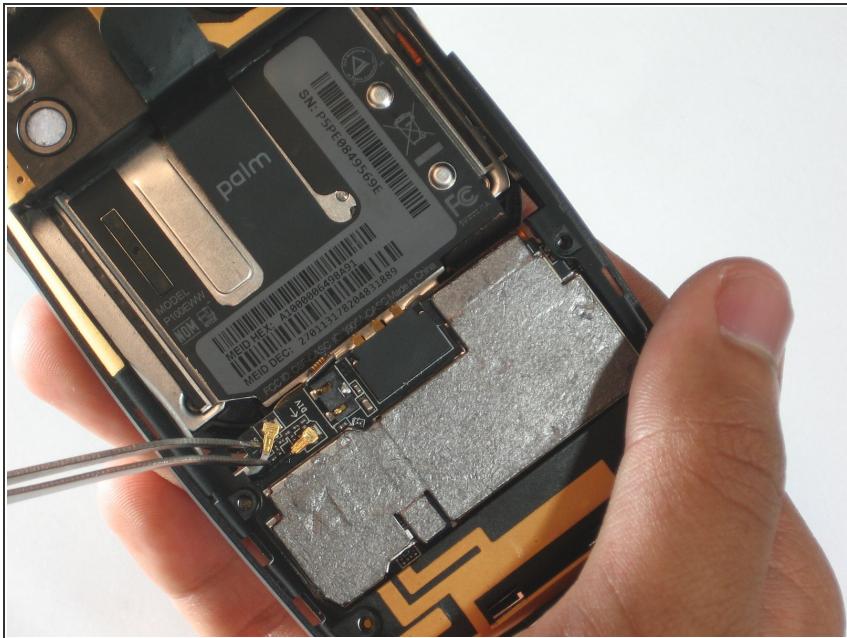

- Use tweezers to remove the DIV and GPS antennas from the back of the keyboard.

## Step 6

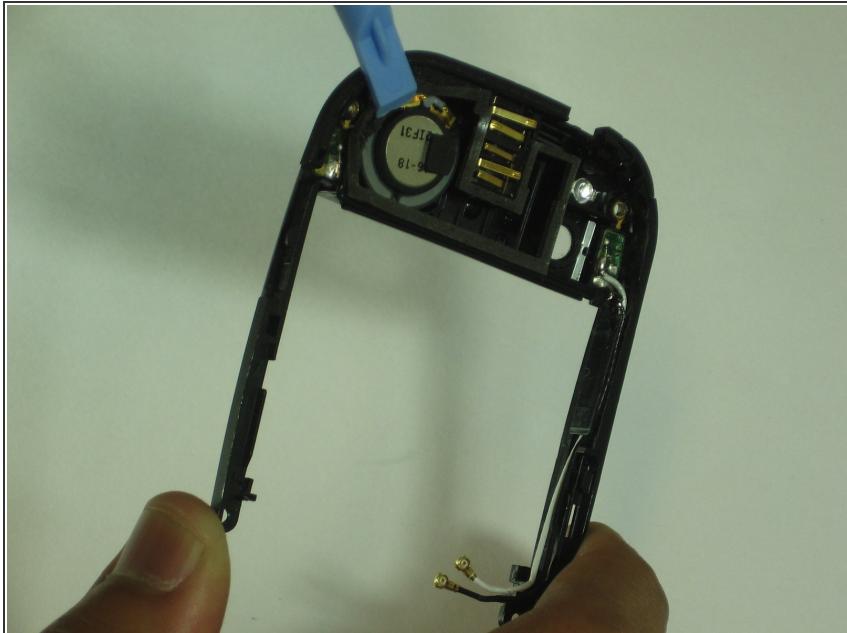

- Use the spudger to pry out the speaker. It is magnetically connected so do not be afraid to use the necessary force.  
**⚠** Make sure to take note of the orientation of the speaker for re-installation.
- Make sure not to puncture the screen on the outside of the back frame.

To reassemble your device, follow these instructions in reverse order.