




Palm Treo 600 Keyboard Replacement

Written By: Clement Poisson

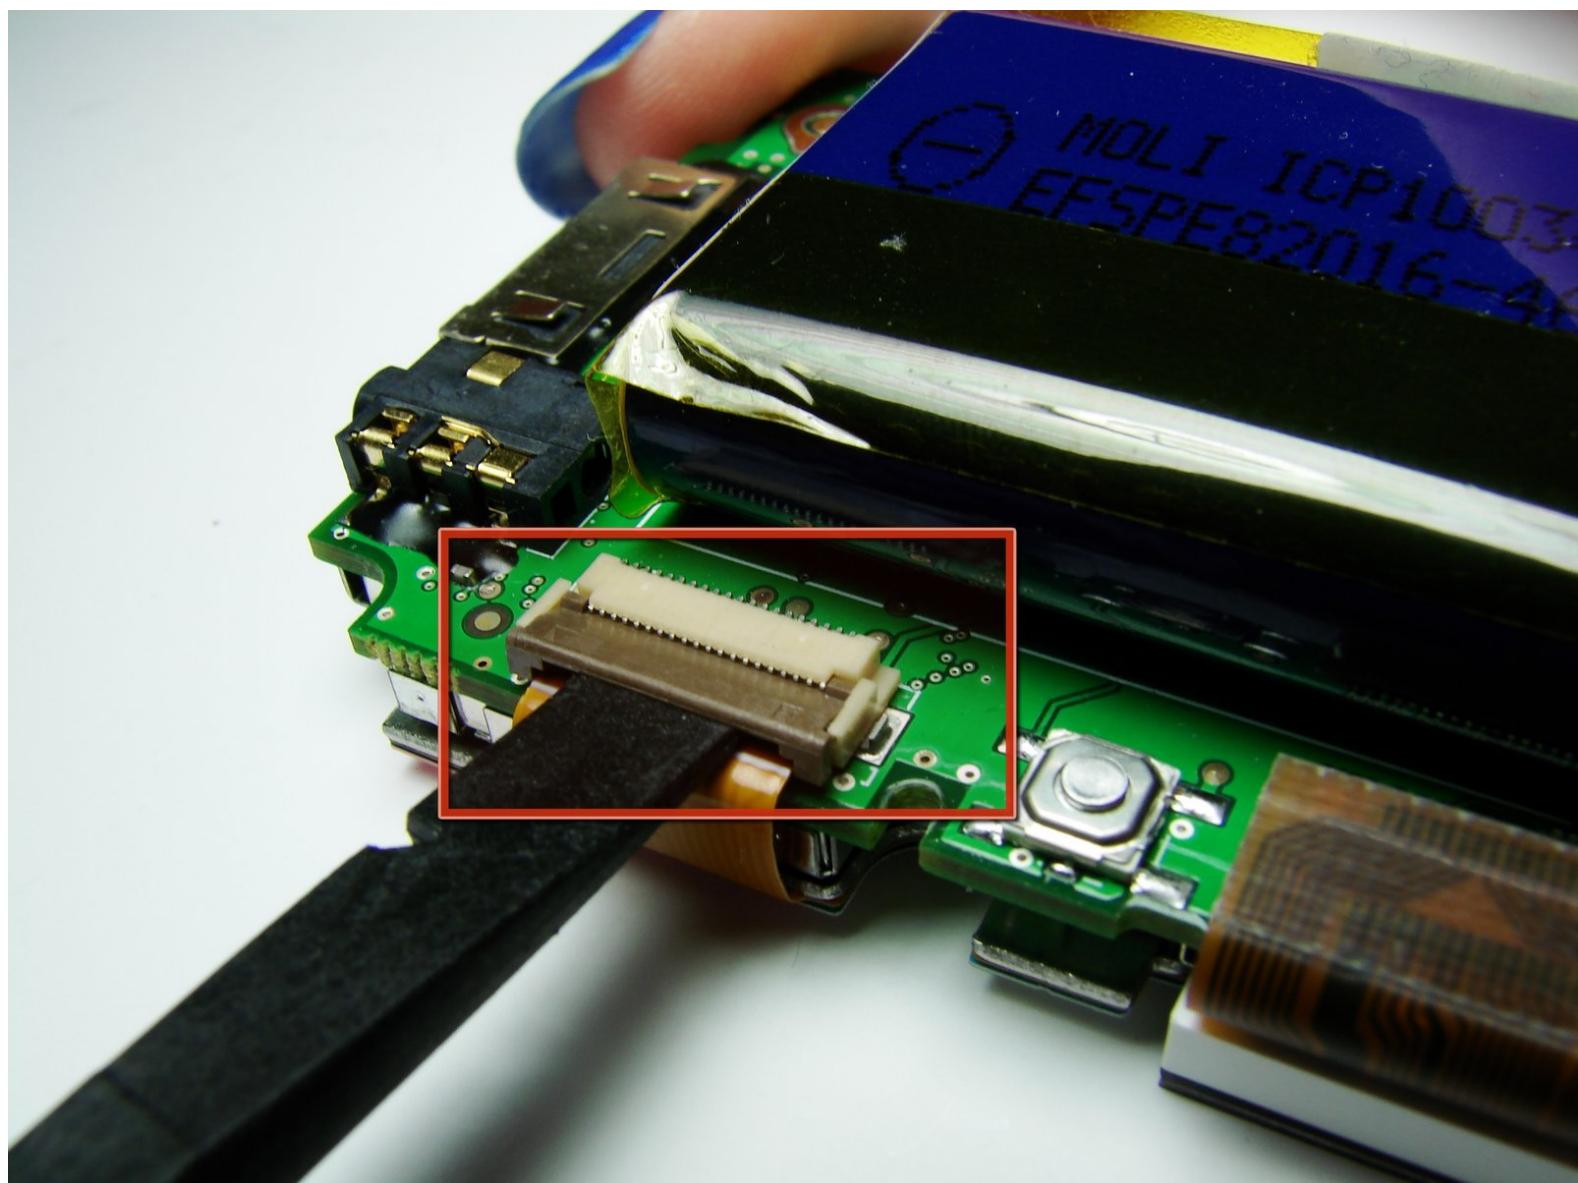

INTRODUCTION

Replace the keyboard!!

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)

Step 1 — Back Case



- On the back of the device, locate the 3 rubber plugs, and use a plastic spudger to remove them.


Step 2



- Use the T6 Torx Screwdriver to remove all 4 screws.

(i) You have to first remove the Stylus to access the 4th screw.


Step 3

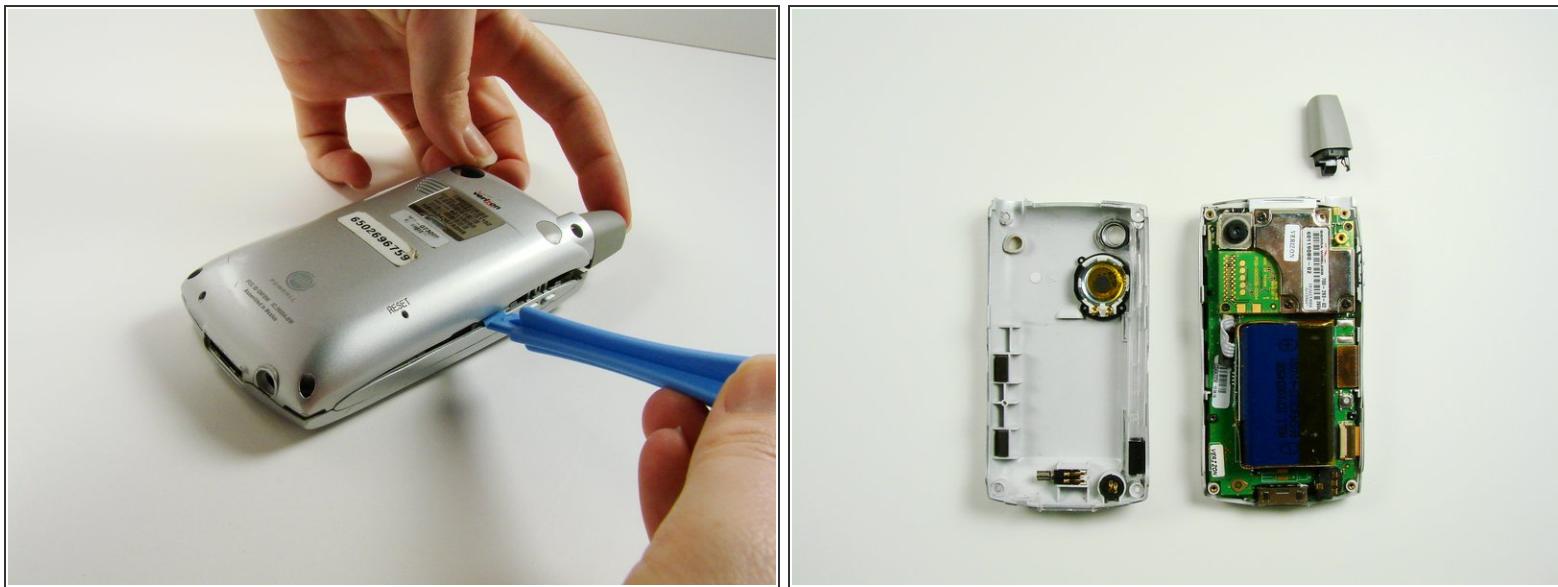

- Using a plastic opening tool, carefully separate the front and back cases.

(i) Note: The antenna will detach from the phone.


Step 4 — Front Case

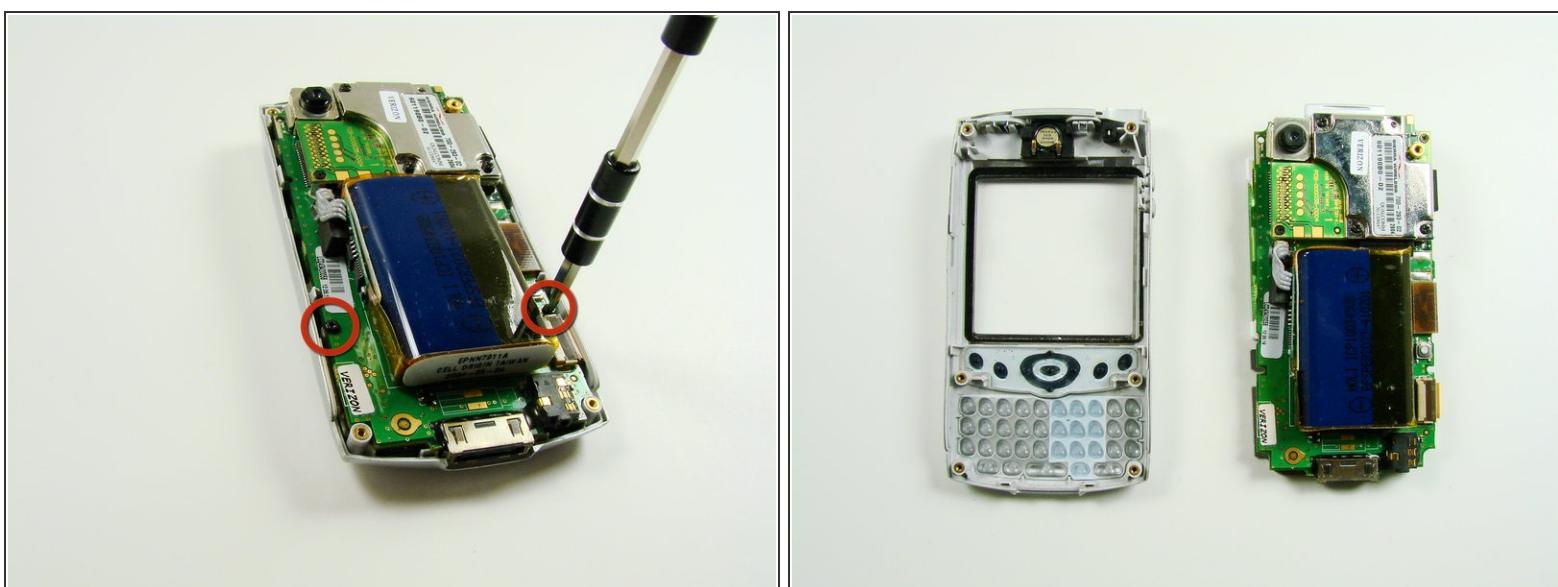

- Using a T6 Torx Screwdriver, remove the two screws.


(i) The motherboard will now be loose from the front case.

Step 5 — Keyboard

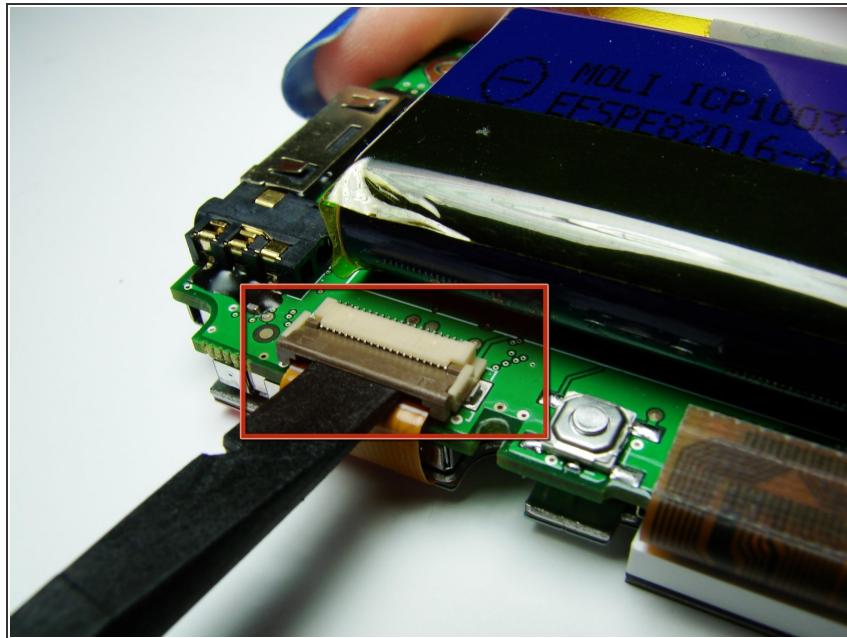

- Using the spudger, flip open the clasp that holds the data ribbon in place.

Step 6

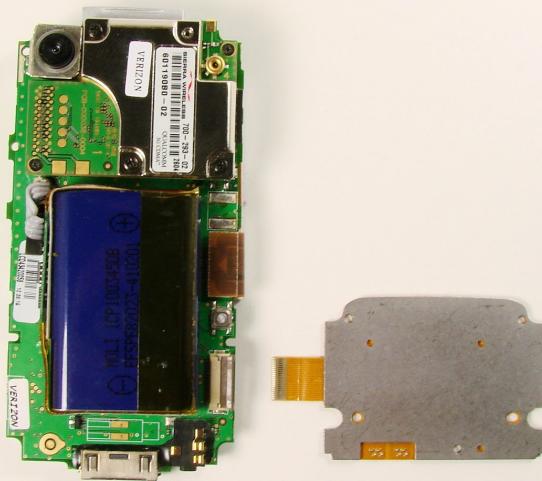

- Pull out the ribbon.

(i) The keyboard will disconnect from the phone.

To reassemble your device, follow these instructions in reverse order.