




# Palm Treo 600 Speaker Replacement

Written By: Clement Poisson

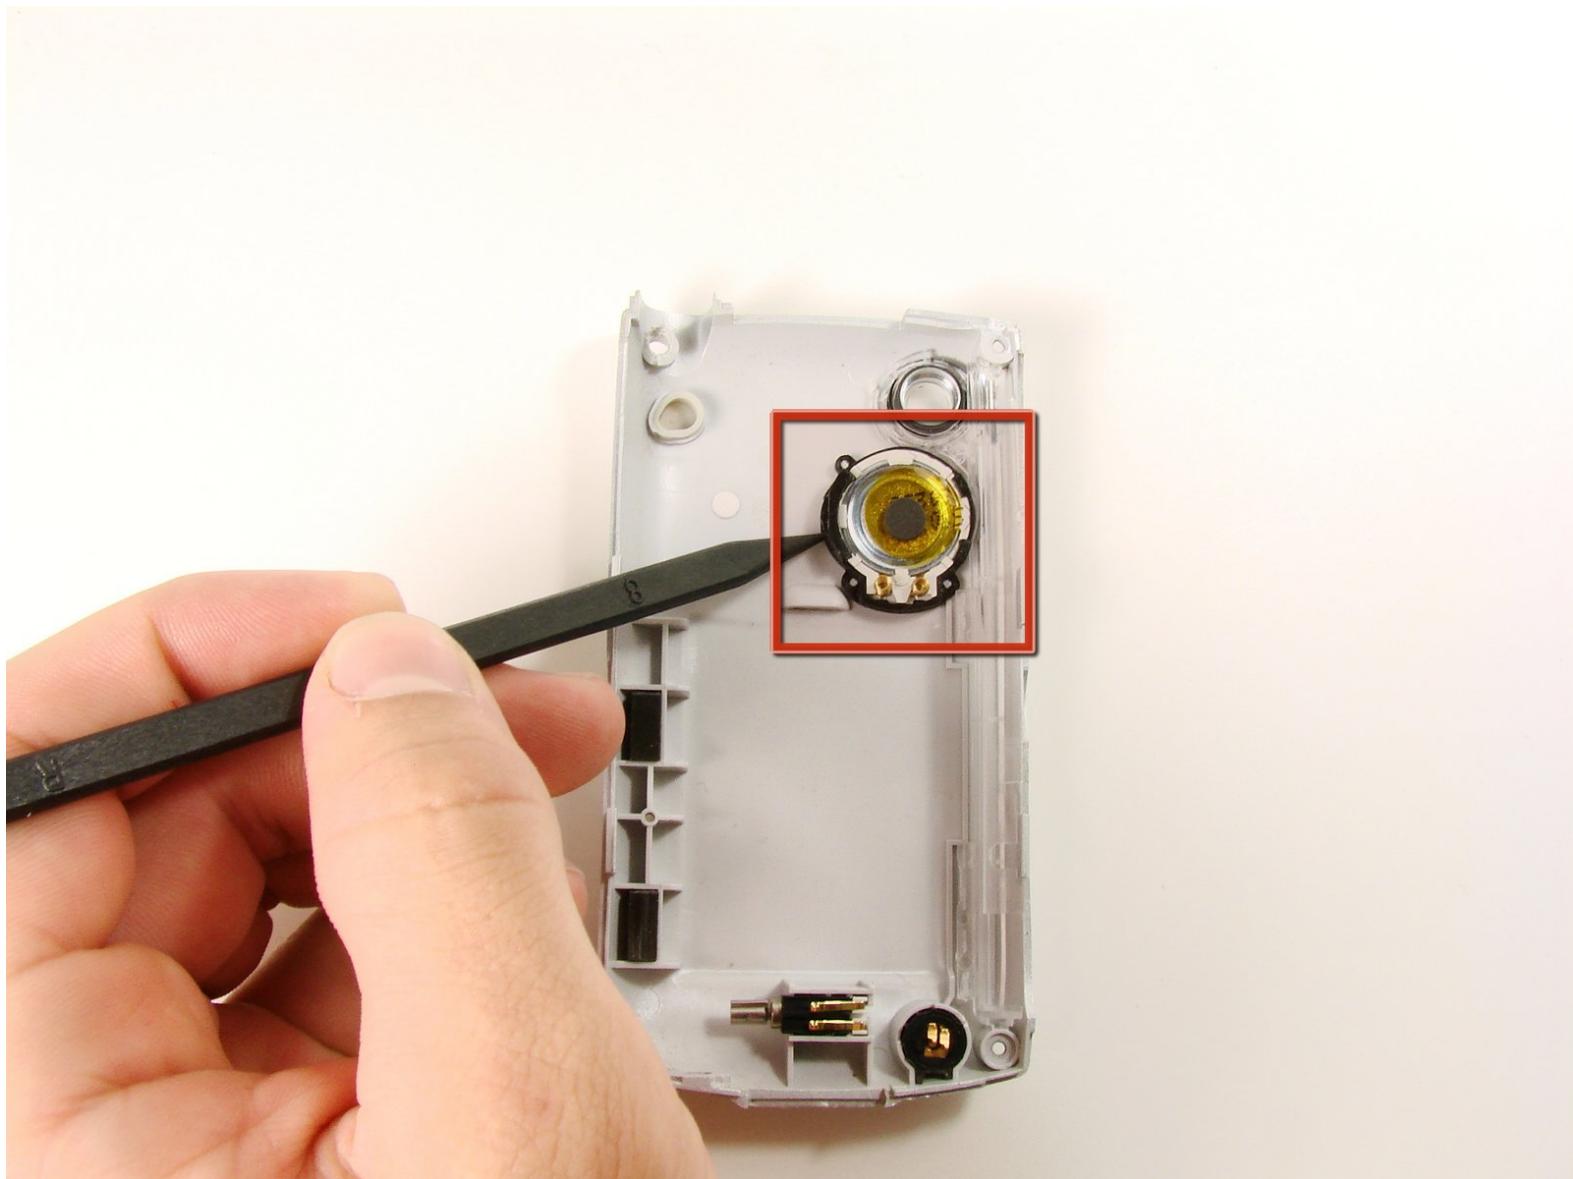

# INTRODUCTION

Replace the speaker

## TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)

## Step 1 — Back Case



- On the back of the device, locate the 3 rubber plugs, and use a plastic spudger to remove them.


## Step 2



- Use the T6 Torx Screwdriver to remove all 4 screws.

*(i)* You have to first remove the Stylus to access the 4th screw.


## Step 3

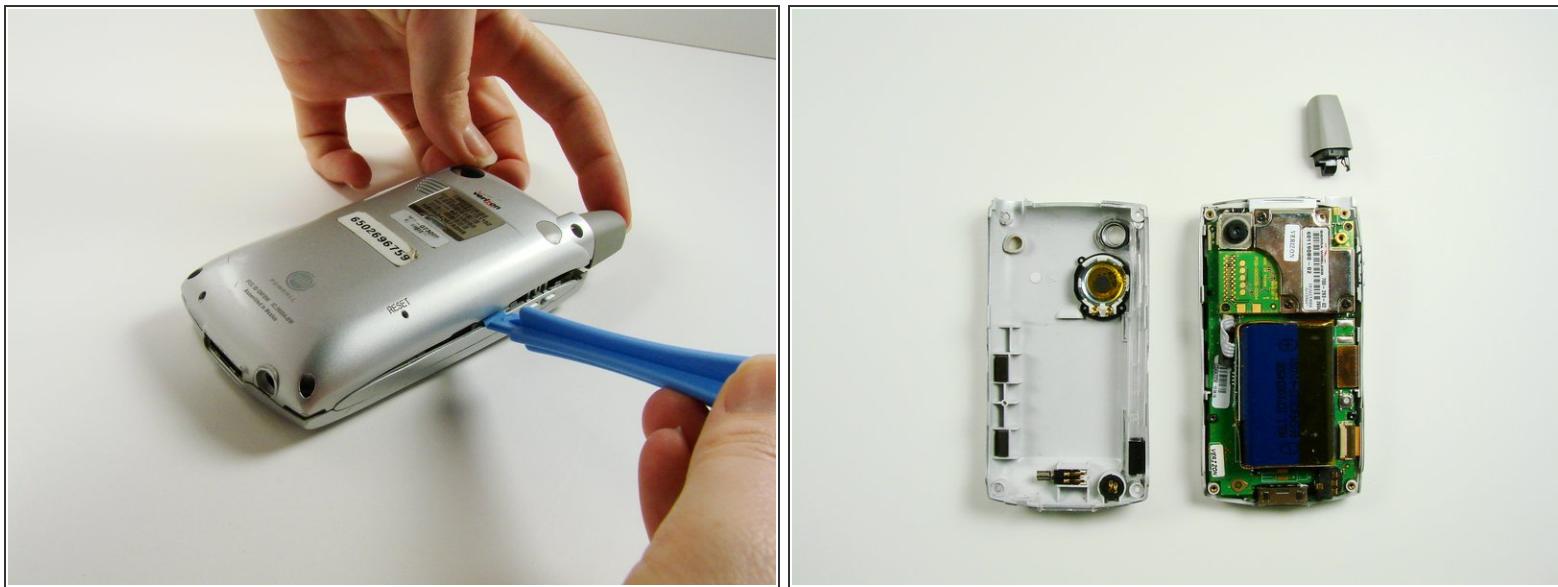

- Using a plastic opening tool, carefully separate the front and back cases.


***(i) Note:*** The antenna will detach from the phone.

## Step 4 — Speaker

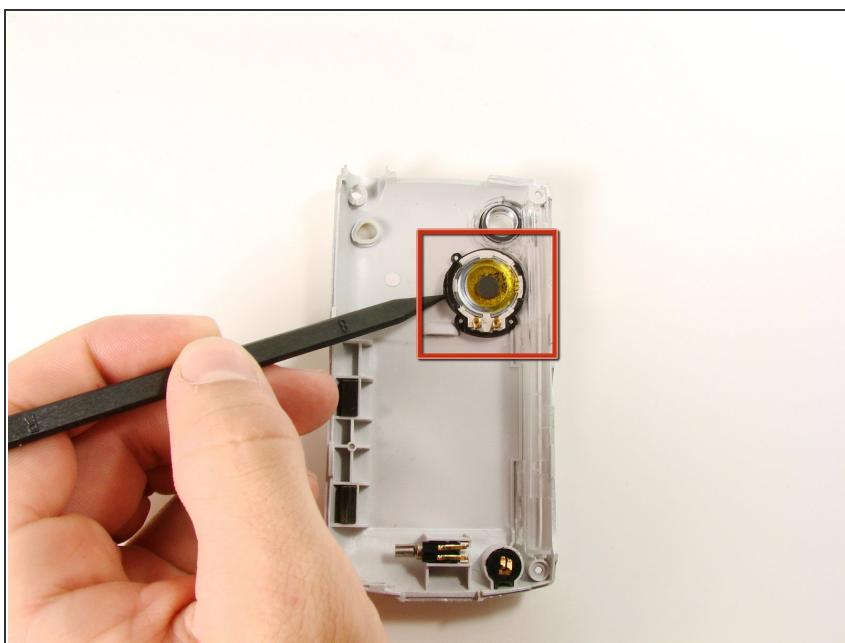

- Using the spudger, pull the speaker straight up.

## Step 5

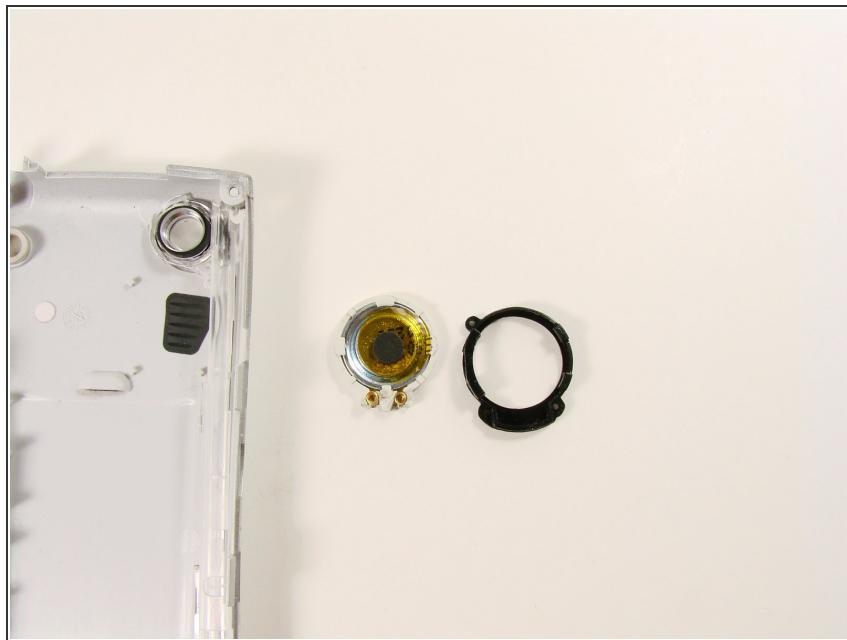

- Gently pull the rubber coating off of the speaker.

To reassemble your device, follow these instructions in reverse order.