



Panasonic Compact Shaver ES4815 Battery Replacement

A guide to replace batteries for a Panasonic Compact Shaver ES4815.

Written By: muhammad samsulsham



INTRODUCTION

If your shaver is not working, the first troubleshooting step is to check for dead batteries. Replacing the batteries is very easy, and it just takes a few steps.



PARTS:

- AA, Alkaline Battery (2)

Step 1 — Battery



- Twist the release cap to expose the batteries.

Step 2



- Remove the batteries.

To reassemble your device, follow these instructions in reverse order.