



Panasonic D-snap SV-AV50 Battery Replacement

This guide contains instructions for installing the battery in the Panasonic D-snap SV-AV50 camera.

Written By: Zoe Hinck



This document was generated on 2019-10-01 08:02:21 AM (MST).

INTRODUCTION

You will remove the battery when it needs to be charged. You should also remove the battery and SD card before opening the camera to access the screen, motherboard, flash, lens, or any other internal part of the camera.

Step 1 — Battery



- Slide the bottom panel in the direction of the arrow on the panel.

Step 2



- Pull/lift open the battery cover in the direction directly away from the camera.

Step 3



- Push the small gray plastic tab away from the battery in order to release the battery.

Step 4



- Pull the battery out of the camera.

To reassemble your device, follow these instructions in reverse order.