



Panasonic DECT 6.0 Button Replacement

You will be able to fix broken or jammed buttons on your Panasonic DECT 6.0 with this guide.

Written By: Jacob



INTRODUCTION

In this guide we will show you how to open your Panasonic home phone, and replace/un-jam any buttons on your phone.

TOOLS:

- [JIS Driver Set \(1\)](#)

Step 1 — Jammed/Broken Buttons




- Remove the outside covering.
- Remove batteries/energy source and place it somewhere safe.
- Unscrew any screws you see on the inside of the casing. (make sure to remember what screws go where).

Step 2




- Start to carefully detach the back of the phone case off.
- Go up and down each sides slowly prying it off.
- Make sure not to damage anything inside during this step.

Step 3

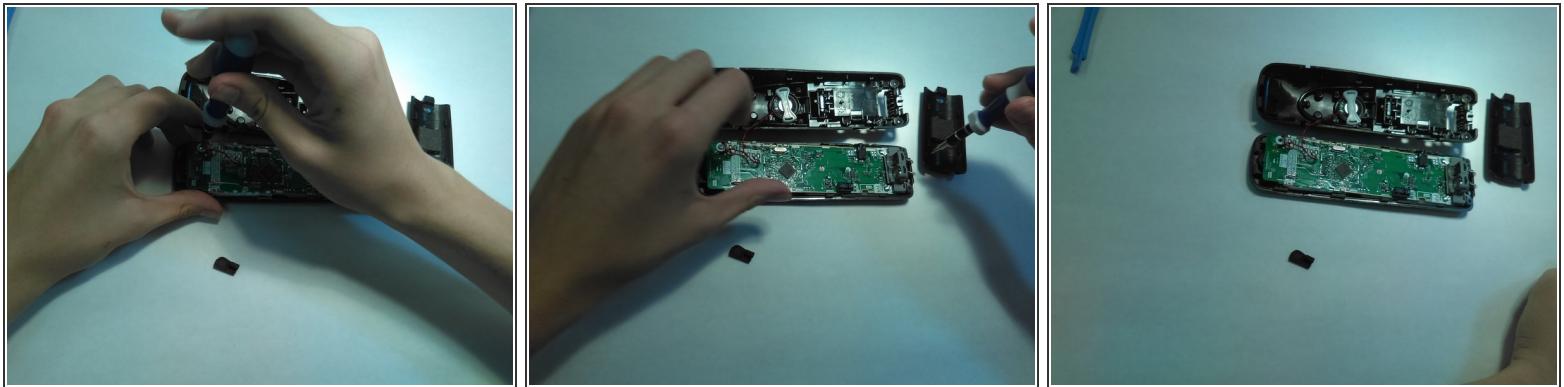


- Unscrew the inside screws, and make sure not to damage the circuitry.
- Place the screws somewhere safe and remember where they go.

Step 4

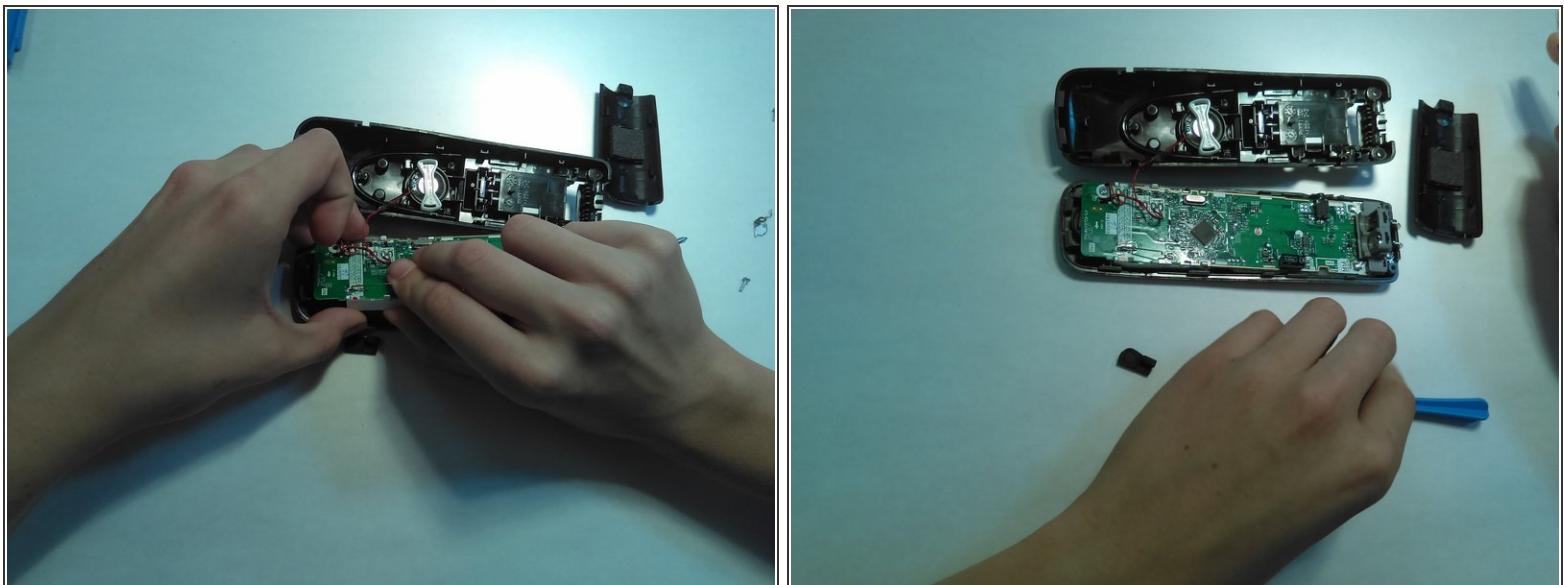

- Look at all of the parts and try to identify what you are working with.
- Remove any loose parts you are not going to be fixing.

Step 5

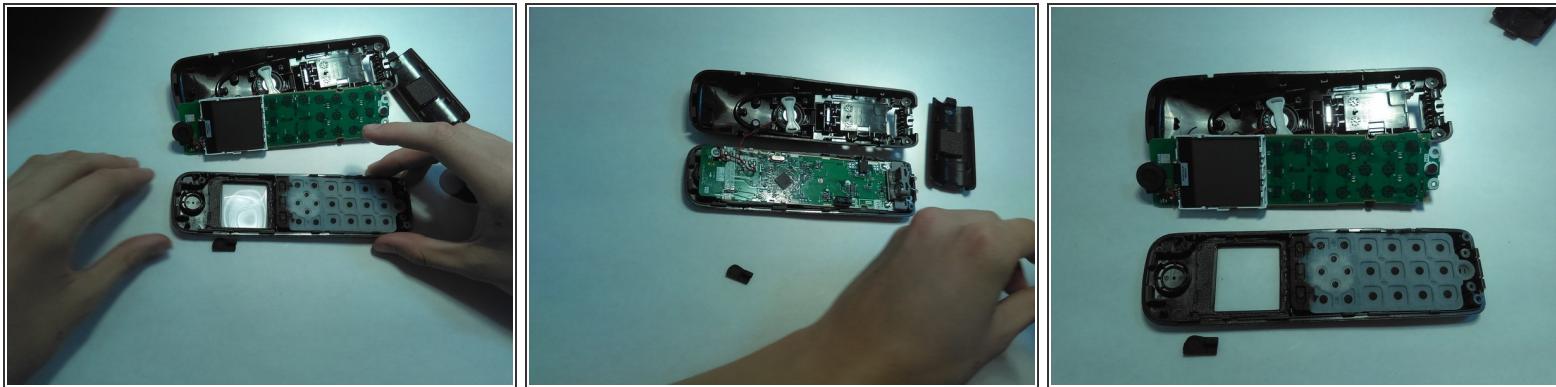

- Carefully remove the circuitry and cords without disconnecting anything.
- Get all parts that you are not fixing out of the way, and get to the buttons in the front.

Step 6



- Identify the broken/jammed button.
- Replace the button and make sure to put the button back how you found it.

To reassemble your device, follow these instructions in reverse order.