



# Panasonic DMP-BD89 Disk Tray Cover Replacement

How to replace the disk tray cover of the Panasonic DMP-BD89.

Written By: David Sun



## INTRODUCTION



This guide will teach you how to replace or remove the disk tray cover.

## Step 1 — Disk Tray Cover



- First, before powering off, press the eject button to open the tray.

## Step 2

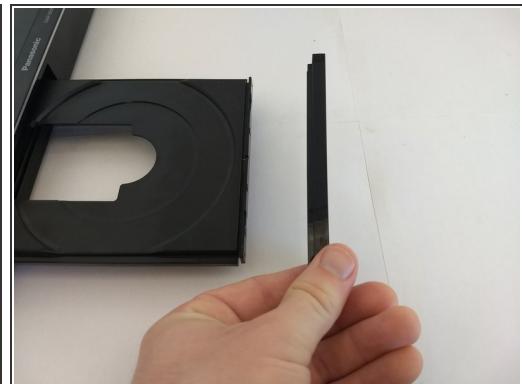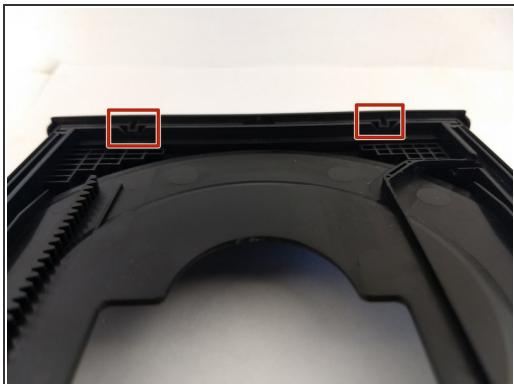

- Remove the front cover of the tray.
- Do so by gently pushing it out, away from the player, ensuring the pictured tabs clear the tray.
- Then slide it vertically up and away.

## Step 3



- Press eject button to close the tray.
- Make sure to unpower and unplug device before continue work on other fixes.

To reassemble your device, follow these instructions in reverse order.