



# Panasonic DMP-BD89 Exterior Cover Replacement

How to replace the exterior cover of the Panasonic DMP-BD89.

Written By: David Sun



 **TOOLS:**



- Phillips #1 Screwdriver (1)

## Step 1 — Disk Tray Cover



- First, before powering off, press the eject button to open the tray.

## Step 2

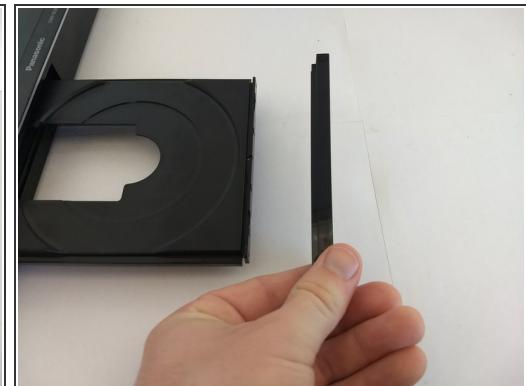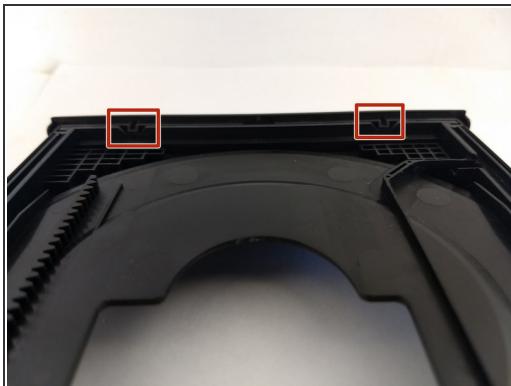


- Remove the front cover of the tray.
- Do so by gently pushing it out, away from the player, ensuring the pictured tabs clear the tray.
- Then slide it vertically up and away.

## Step 3



- Press eject button to close the tray.
- Make sure to unpower and unplug device before continue work on other fixes.

## Step 4 — Exterior Cover

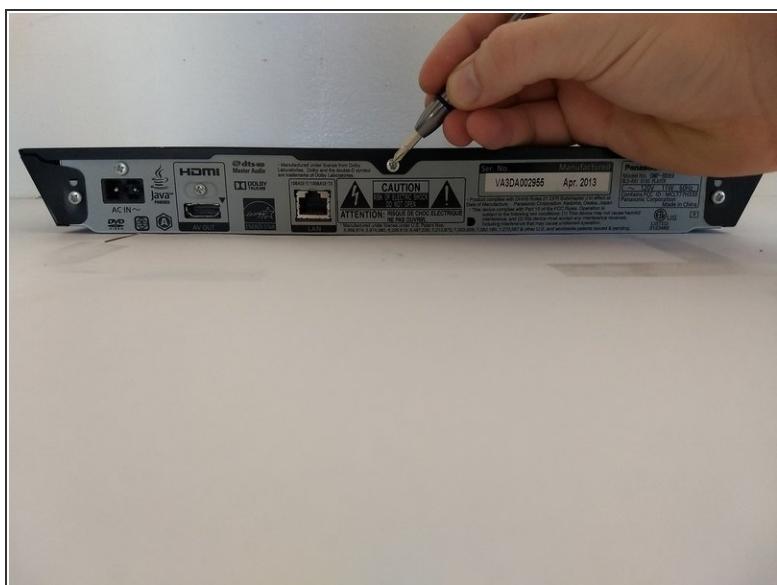

- Using a Phillips #1 screwdriver, unscrew the back three screws.

## Step 5



- Slide the top panel horizontally to remove it.

## Step 6



- Locate 6 tabs across the device.
- 2 are on the bottom, 1 is on the left and right, and 2 are on the inside.

## Step 7



- Pop the 6 markers out.
- Then take off the cover.

To reassemble your device, follow these instructions in reverse order.