



# Panasonic DVD-RV31 Player Outer Case Replacement

First step to gaining access to the components of the DVD player.

Written By: Kevin



 **TOOLS:**

- Phillips #2 Screwdriver (1)

## Step 1 — Disk Tray Cover



- Eject the disk tray from the DVD player before removing power supply.

## Step 2



- Evenly lift upward on the disk tray front cover (not slanted, as pictured). This will allow for easier disassembly of the player.

## Step 3 — Outer Case



- Remove 3 screws running along back edge of case cover.
- Remove 2 screws from each side of case cover.

## Step 4



- Grab edges of cover, pull outward slightly, and pull straight up.

To reassemble your device, follow these instructions in reverse order.