




Panasonic DVD-RV31 Player Right Function Board Replacement

Removing the function board.

Written By: Kevin

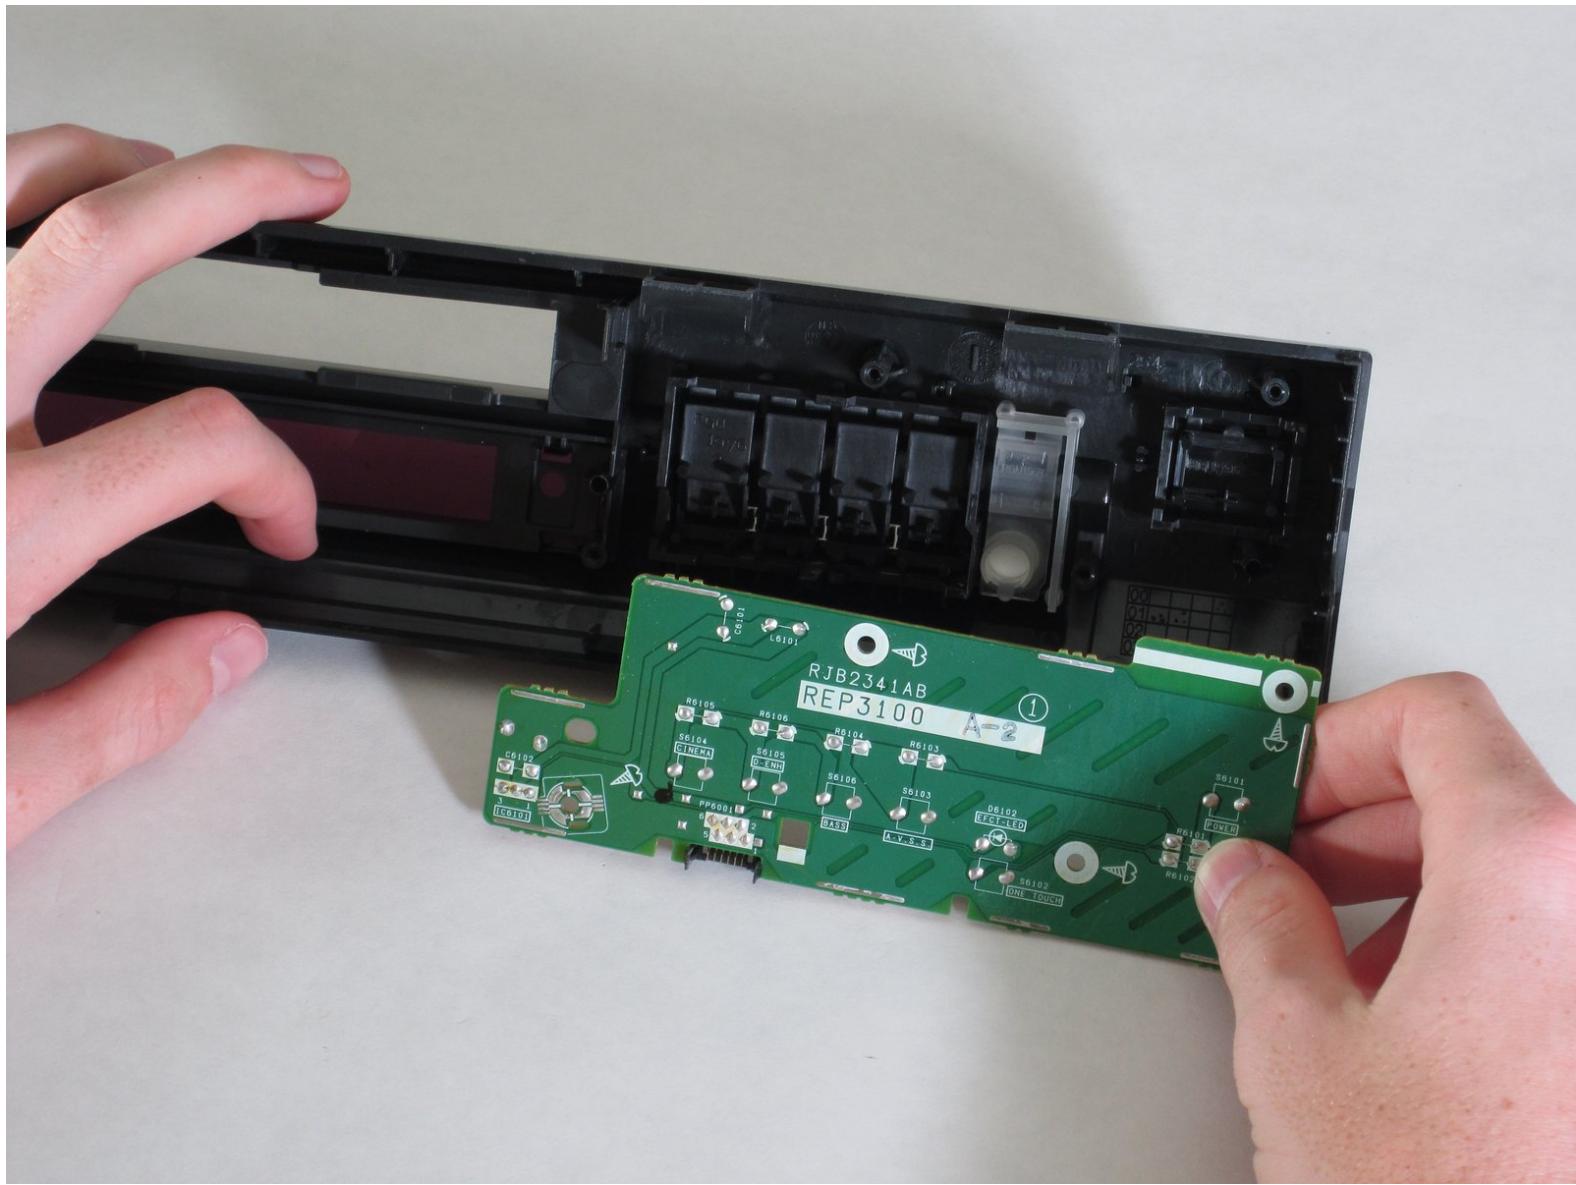

INTRODUCTION

Use this guide to remove the right function board from the front panel of the DVD player.

TOOLS:

- Phillips #2 Screwdriver (1)

Step 1 — Disk Tray Cover



- Eject the disk tray from the DVD player before removing power supply.

Step 2



- Evenly lift upward on the disk tray front cover (not slanted, as pictured). This will allow for easier disassembly of the player.

Step 3 — Outer Case




- Remove 3 screws running along back edge of case cover.
- Remove 2 screws from each side of case cover.

Step 4




- Grab edges of cover, pull outward slightly, and pull straight up.

Step 5 — Front Panel

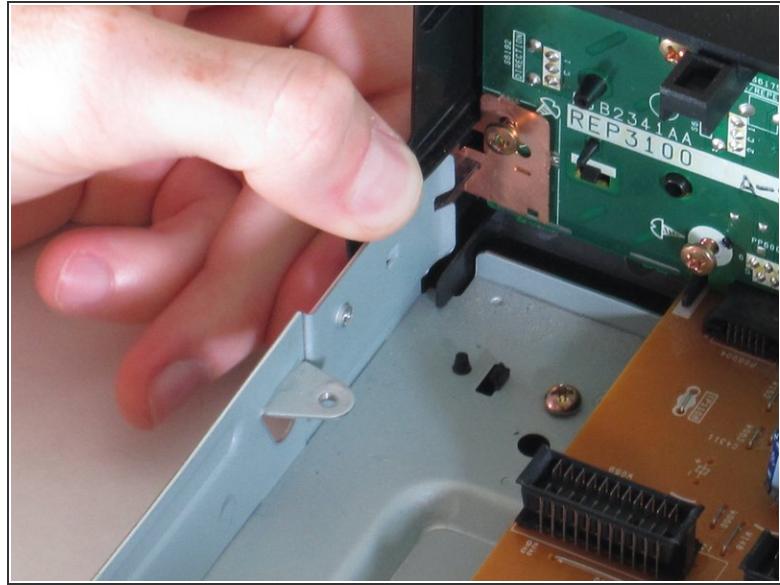


- Lift up the 5 tabs securing the front panel to the chassis. There are 3 on the bottom, and 2 on the inside edges of the panel. Panel should then lift off the player.

Step 6 — Right Function Board

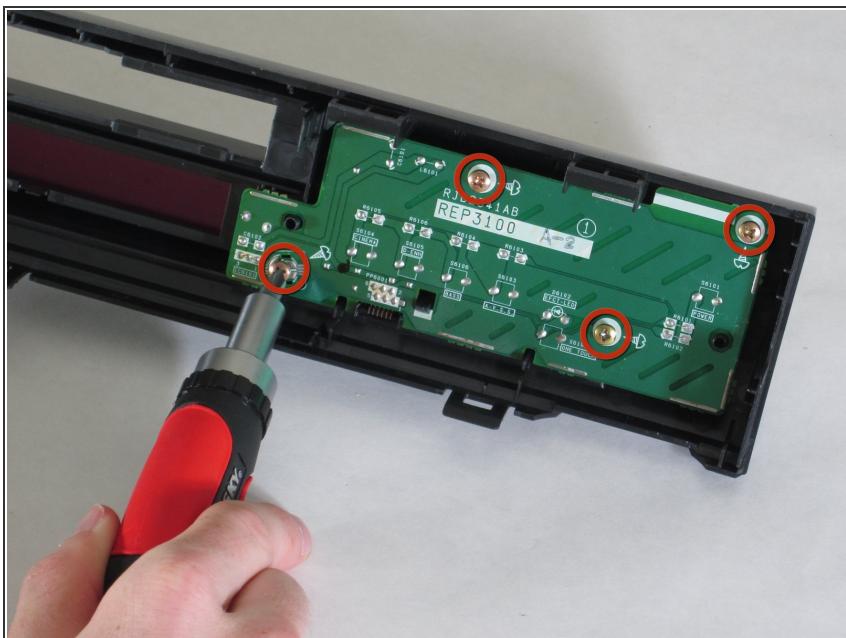

- Remove 4 screws as shown.

Step 7

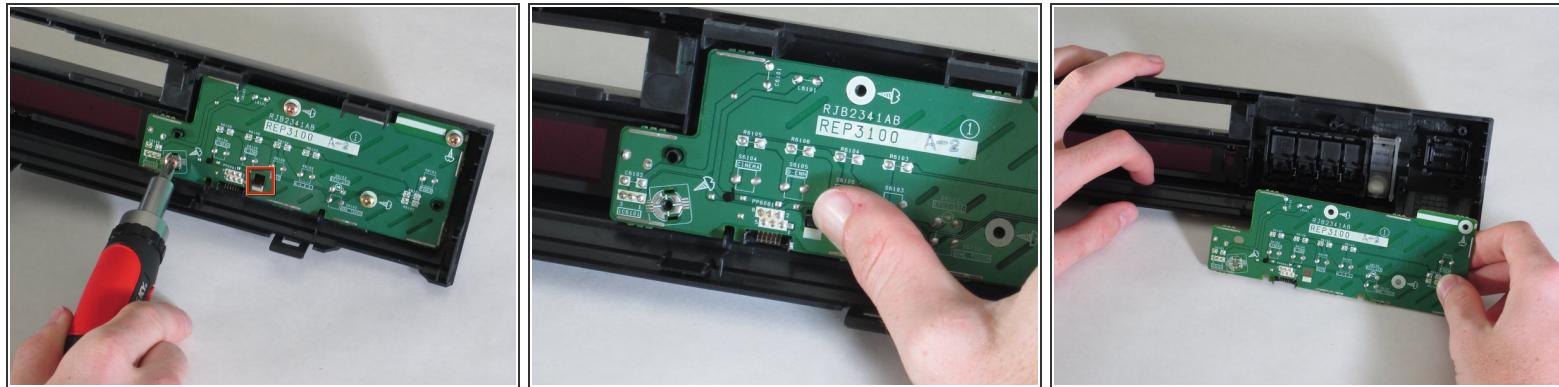

- Push in plastic retainer tab on board.
- Grasp edges of board and pull out.

To reassemble your device, follow these instructions in reverse order.