



# Panasonic ER-GN30-K Blade Replacement

Replace a dull or broken blade in a Panasonic ER-GN30-K

Written By: Jacob Hoofman



## INTRODUCTION

Is your blade not trimming like it used to? Check out this quick guide to replace it.

Note: The blade is sharp so be careful to not cut yourself.

## Step 1 — Blade



- Remove the dark transparent cap by gently pulling on it.

## Step 2



- Remove the black trimmer cap from the top of the device by gently pulling it.

## Step 3



- Remove the blade from the cap by gently pulling it from the cap.

**⚠** Even if the blade is dull or broken, it will still be sharp enough to cut skin, so be careful while you remove it.

To reassemble your device, follow these instructions in reverse order.