



# Panasonic GU87 LCD Cover removal Replacement

How to remove the LCD cover

Written By: Van



 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)
- [Tri-wing Screwdriver \(1\)](#)

## Step 1 — LCD Cover removal



- Remove the four rubber screw covers from encircled locations.
- Using a #0 tri wing screwdriver, remove the screws previously hidden below the rubber covers.
- If you have difficulties finding this screwdriver, it is commonly sold as a Nintendo Gameboy/Wii screwdriver.

## Step 2

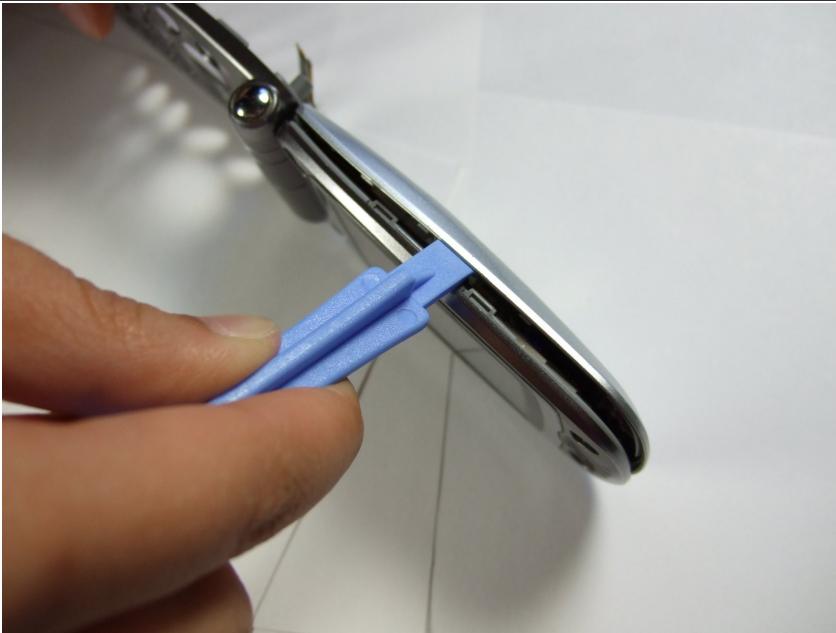

- Pry the case open using iPhone tool (as shown), fingernails, small flathead screwdriver, etc.
- Be mindful of location and magnitude of applied force, so as not to damage the case.

To reassemble your device, follow these instructions in reverse order.