



Panasonic HDC-TM90 Battery Replacement

This step-by-step guide will help a user remove the battery if faulty or in need of charge. This guide is a prerequisite for further disassembly.

Written By: Tyler Jaynes



INTRODUCTION

This repair guide will aid a user having problems with battery removal.

TOOLS:

- Fingers (1)

Step 1 — Battery



- Open the LCD screen.

Step 2



- Slide the battery release switch away from the battery.

Step 3



- While holding the switch away from the battery, push the battery out of the slot.

Step 4



- Remove the battery from the camera.

To reassemble your device, follow these instructions in reverse order.