




# Panasonic KX-TG6021M Button Pad Replacement

This guide will show you how to replace the button pad on the Panasonic KX-TG6021M. .

Written By: Leah Meador

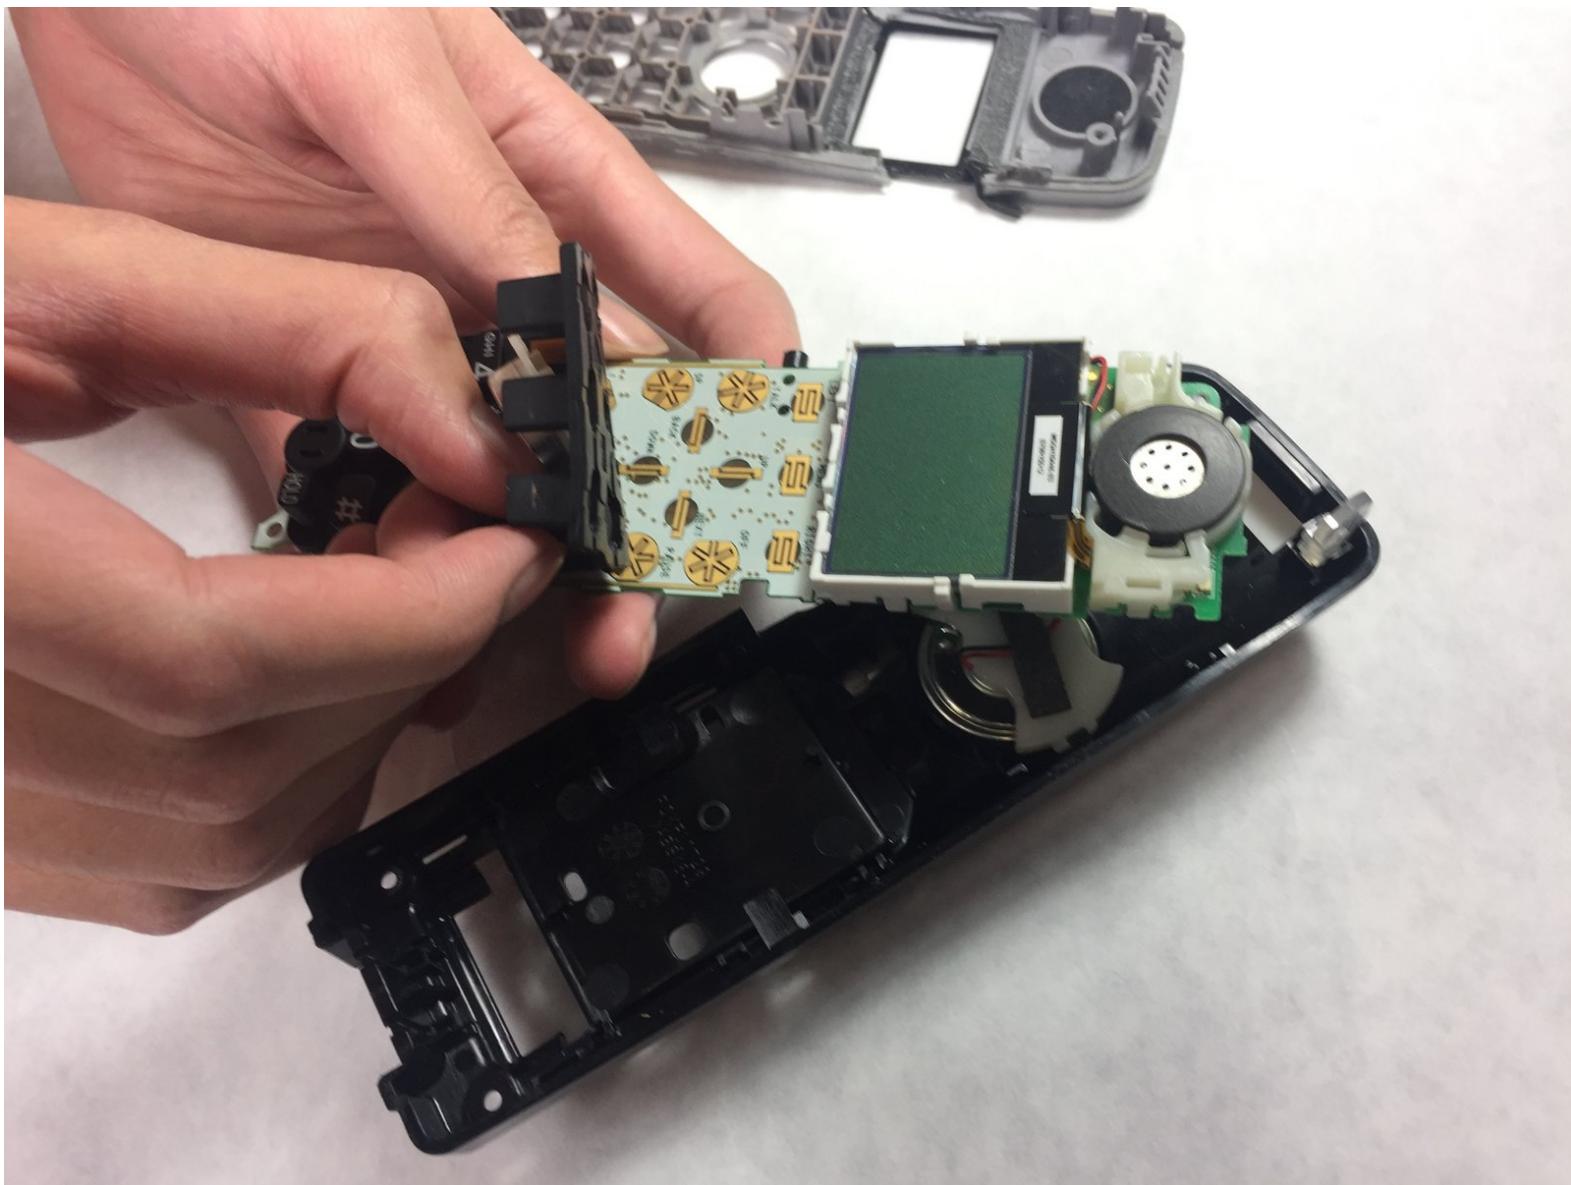

## INTRODUCTION

This guide will show you how to replace the button pad on the Panasonic KX-TG6021M.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Picks set of 6](#) (1)

## Step 1 — Battery



- Slide the back cover down towards the bottom of the phone to remove.

## Step 2



- Pull the top of the battery towards you to remove it from the phone.

## Step 3 — Replace Phone Face




- Unscrew the two screws located at the bottom of the phone.
- *(i)* Use a PH00 Phillips head to remove the 9 mm screws.

## Step 4




- Separate the back cover from the front cover by using a wedge.
- Remove the back cover from the front cover by pulling them apart.

## Step 5

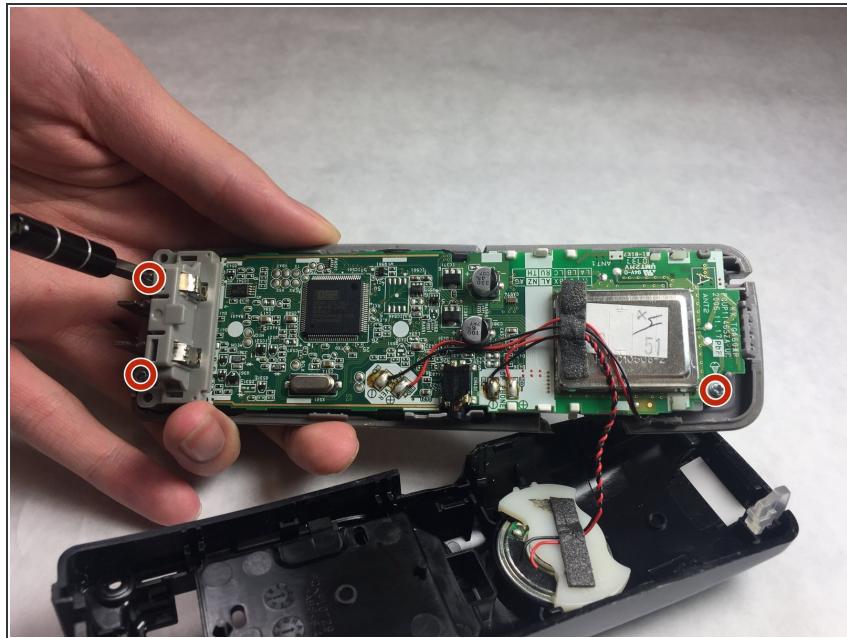

- Remove three screws on the motherboard.
- Pull the phone face off of the motherboard.

## Step 6 — Button Pad

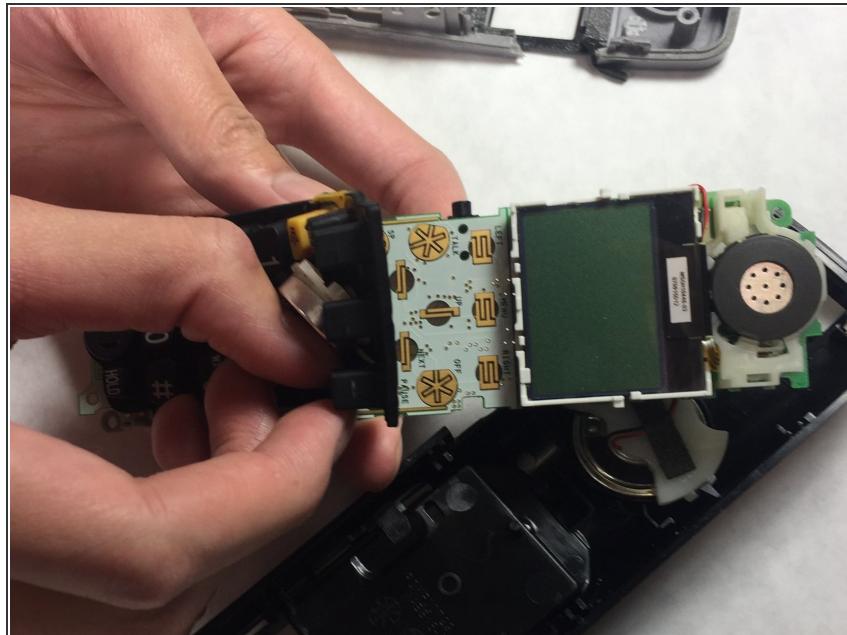

- Remove the button pad.

To reassemble your device, follow these instructions in reverse order.