




Panasonic KX-TG6021M Front Speaker Replacement

This guide will show you how to replace the front speaker of the Panasonic KX-TG6021M.

Written By: paul scruggs

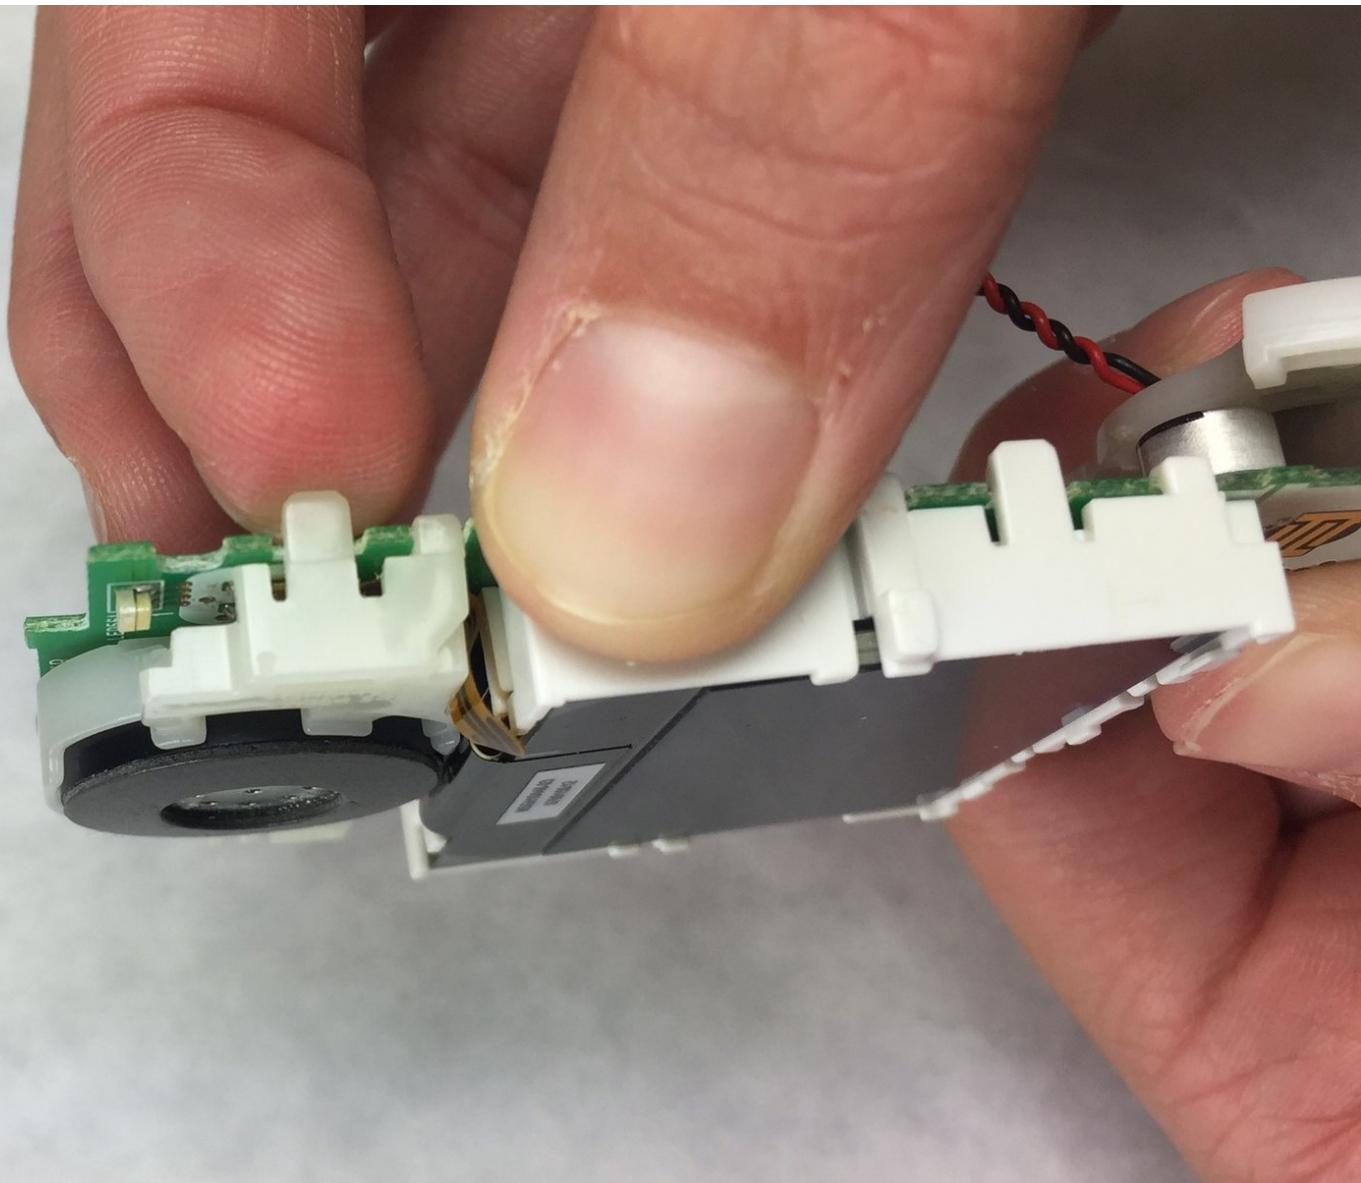

INTRODUCTION

This guide will show you how to replace the front speaker of the Panasonic KX-TG6021M.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Soldering Iron](#) (1)
- [Solder](#) (1)
- [iFixit Opening Picks set of 6](#) (1)

Step 1 — Battery



- Slide the back cover down towards the bottom of the phone to remove.

Step 2



- Pull the top of the battery towards you to remove it from the phone.

Step 3 — Replace Phone Face




- Unscrew the two screws located at the bottom of the phone.
- *(i)* Use a PH00 Phillips head to remove the 9 mm screws.

Step 4




- Separate the back cover from the front cover by using a wedge.
- Remove the back cover from the front cover by pulling them apart.

Step 5

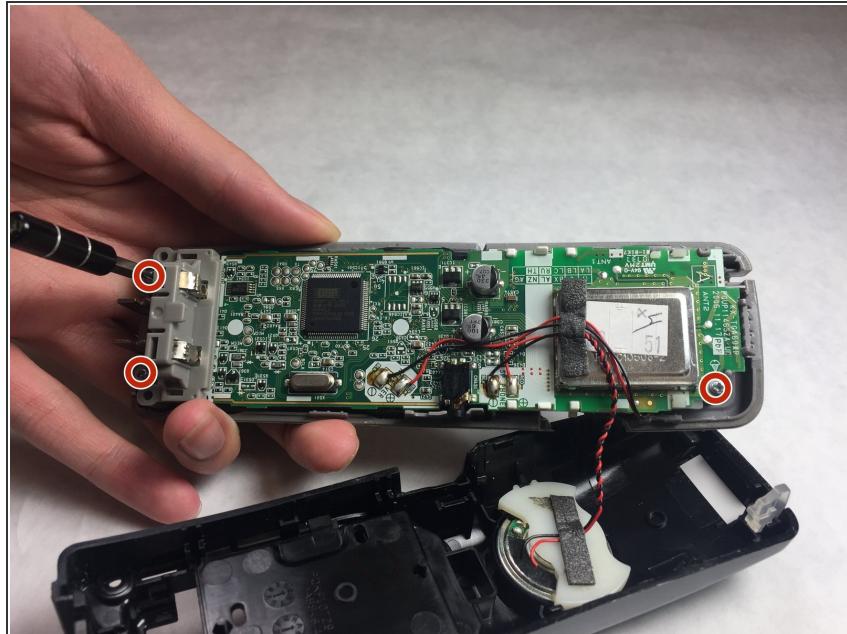


- Remove three screws on the motherboard.
- Pull the phone face off of the motherboard.

Step 6 — Front Speaker

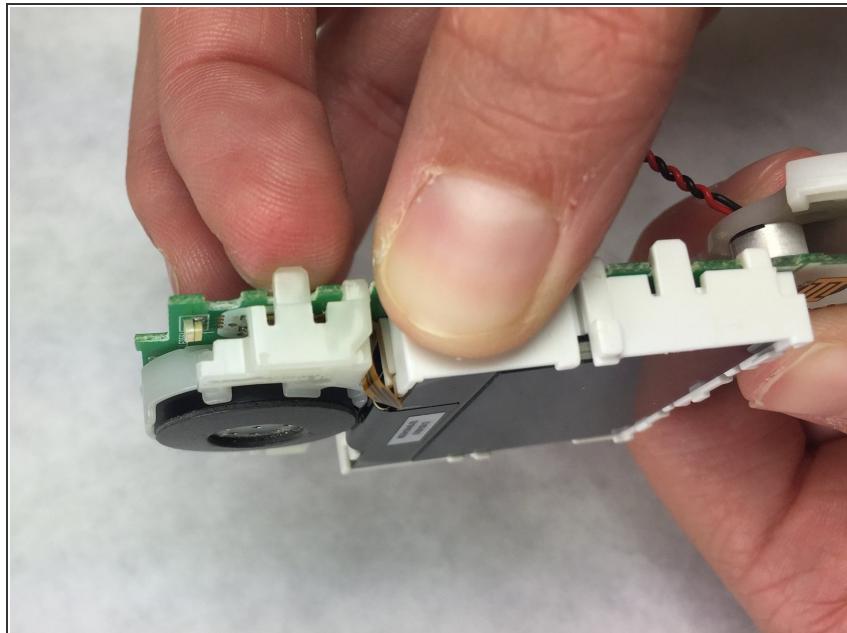


- Remove the front speaker housing by detaching it from the circuit board.

Step 7

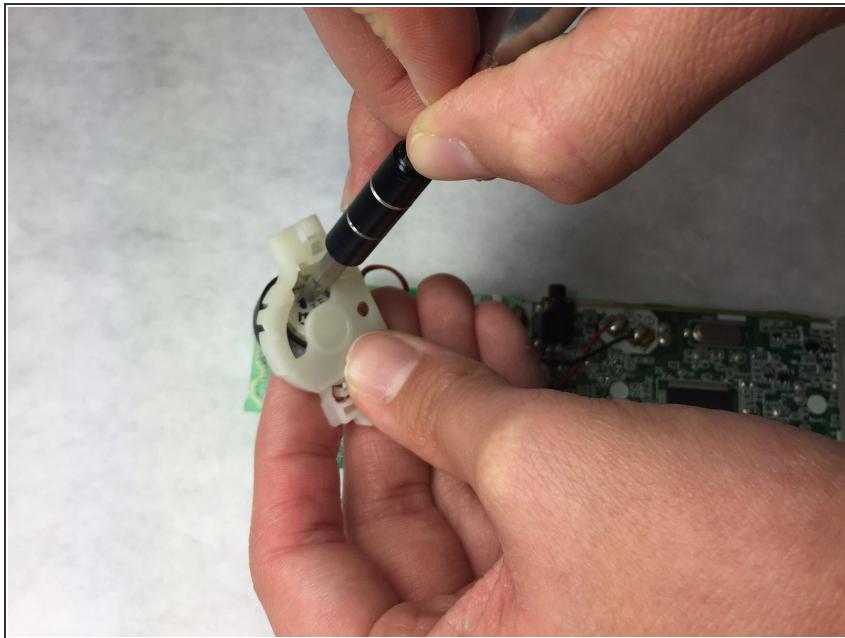

- Pop out the front speaker from the housing.

Step 8

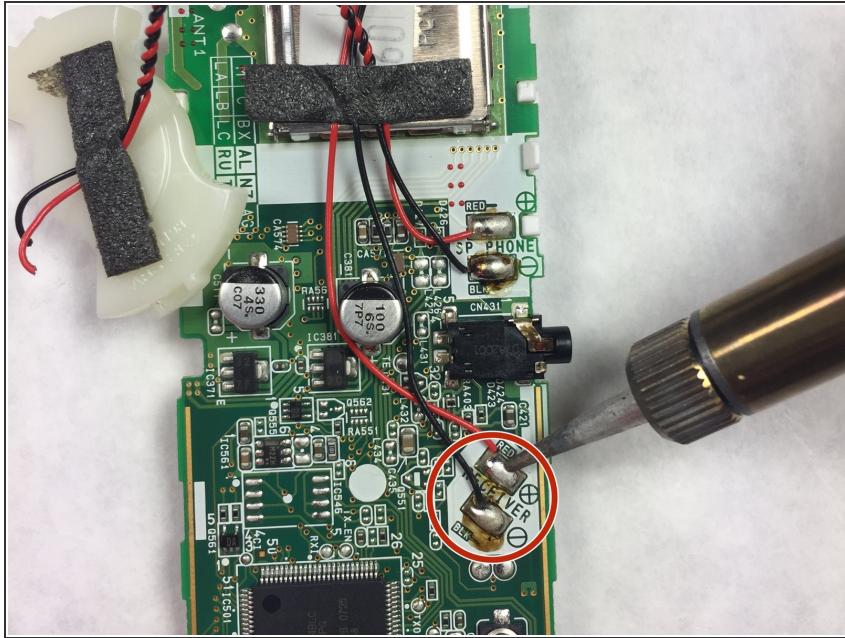

- Desolder the two connections and remove the wires from the circuit board.

To reassemble your device, follow these instructions in reverse order.