



Panasonic KX-TGA600M Keypad Replacement

This guide will cover how to replace your Panasonic KX-TGA600M keypad.

Written By: Lauren Bowman



INTRODUCTION

Use this guide to replace the keypad on your phone.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery




- On the back of the phone, remove battery cover.
- Push down on the marked indentation and pull downwards.

Step 2




- Pull out to remove the battery.

Step 3 — Keypad

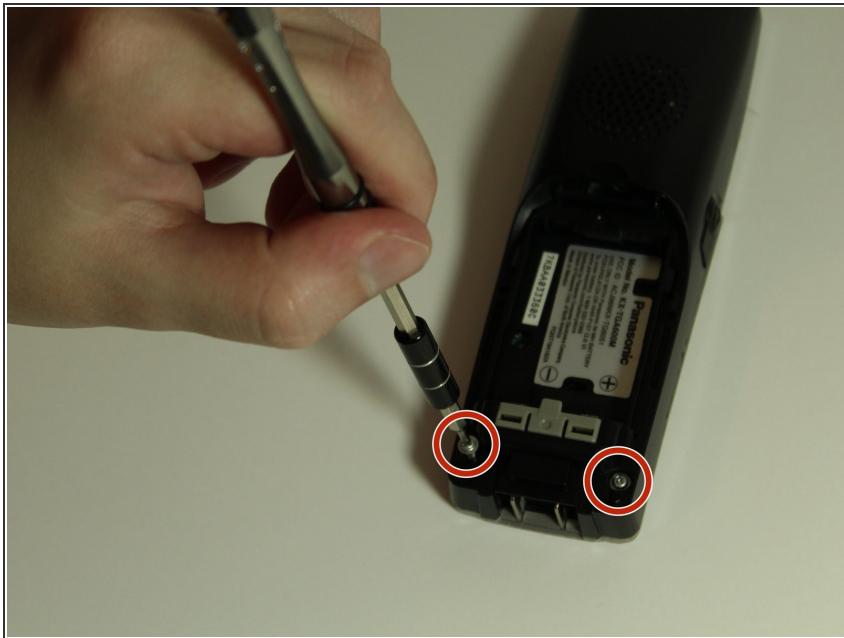


- Once battery is removed, use the Phillips #00 screwdriver to remove the two silver screws at the bottom left and right corners on the back of the phone.

Step 4

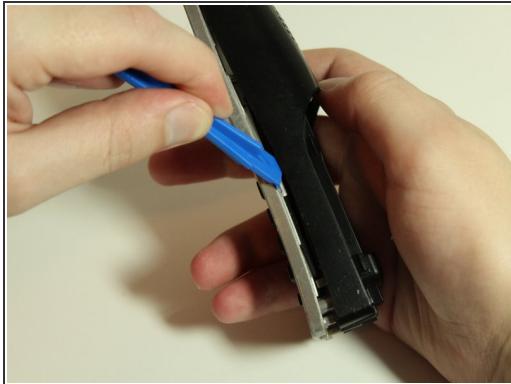


- Pull the phone apart. The plastic opening tool may be needed.
- (i)* The clear light piece will fall out, so make sure you place it next to the screws.

Step 5

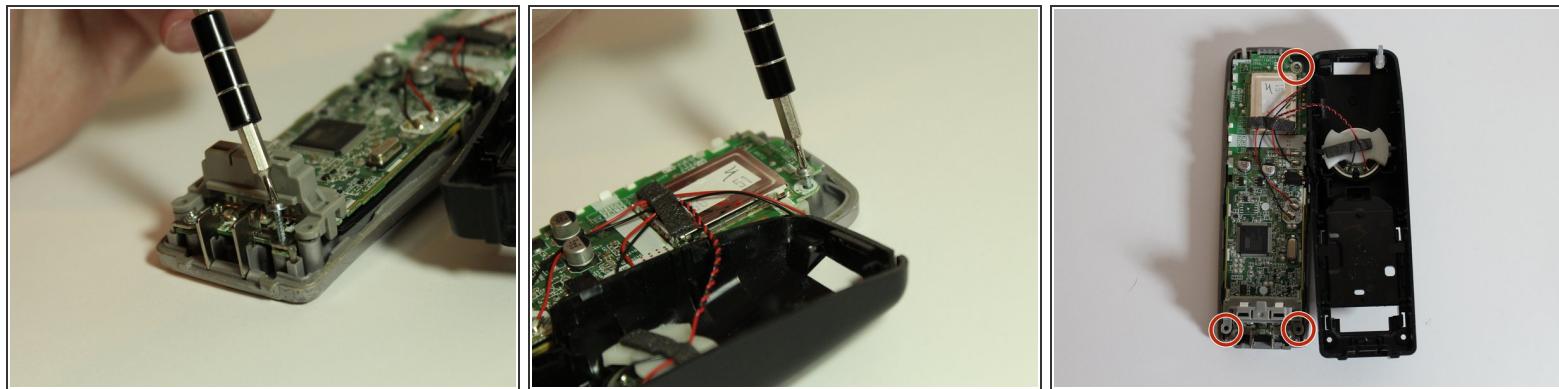

- Use the Phillips #00 screwdriver to remove the three screws holding the circuit-board in place.
- ⓘ The screws are located in the top right corner, bottom left corner, and bottom right corner.

Step 6

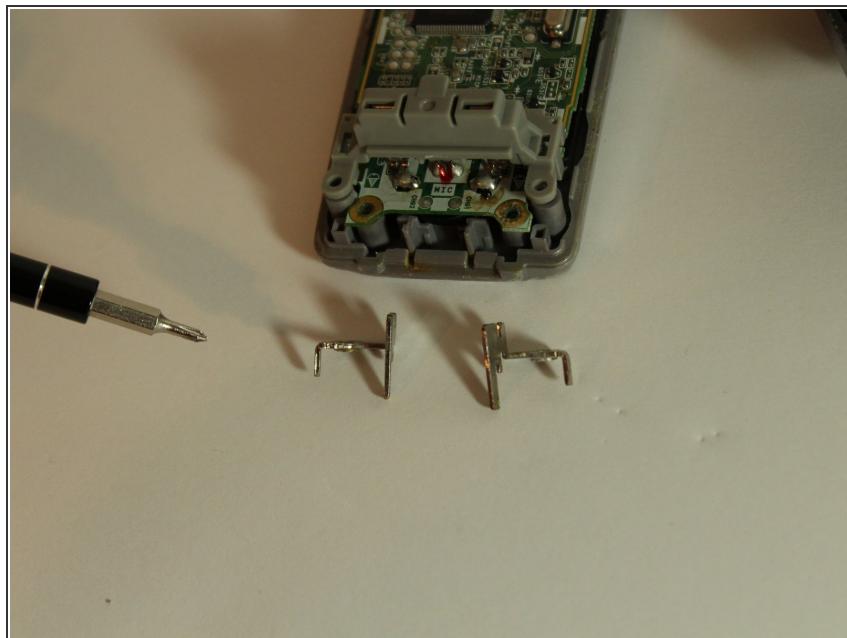


- Once the screws are out, remove the charging contacts beneath the two bottom corner screws.

Step 7



- Remove the circuit board.

Step 8

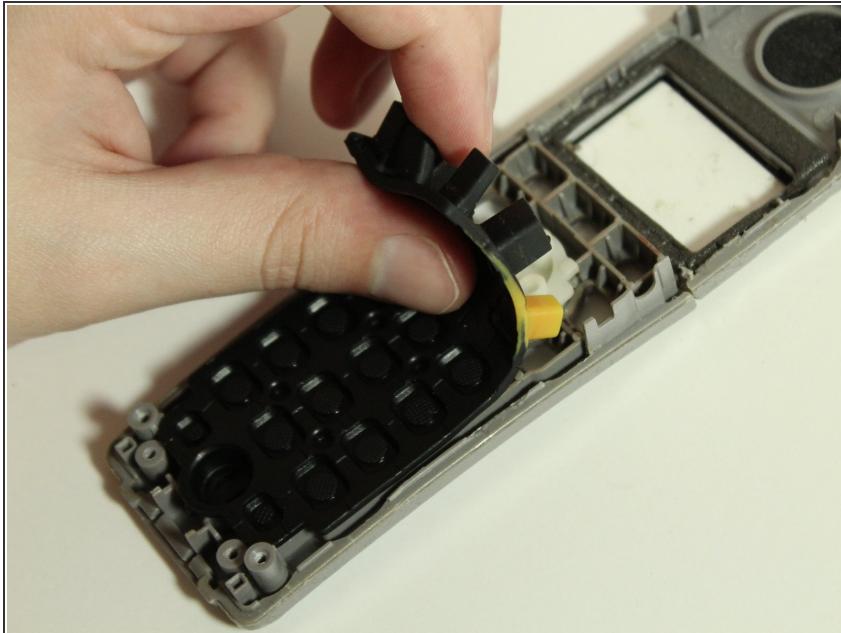

- Pull back the black silicone keypad.

To reassemble your device, follow these instructions in reverse order.