



# Panasonic LUMIX DMC-LX100 Battery Replacement

This guide will help you replace a dead or faulty battery to return power to your Panasonic LUMIX DMC-LX100 camera.

Written By: Olivia Hillman



This document was generated on 2019-09-22 02:11:25 AM (MST).

## INTRODUCTION

Are you pressing the power button but your camera stays turned off? Replacing the battery is a quick fix that should solve this problem.

## Step 1 — Battery



- Looking at the bottom of the camera, slide the OPEN/LOCK switch to the left into the OPEN position.
- *(i)* The battery housing door should swing open.

## Step 2



- Flip the inside switch up to release the battery.

## Step 3



- Grip the edge of the battery and pull it out.
- **(i)** Use a LUMIX Panasonic DMW-BLE9PP Battery Pack for replacement.

To reassemble your device, follow these instructions in reverse order.