



Panasonic Lumix DMC-F7 Battery Replacement

Replacing the old battery with a new one.

Written By: Hormoz Tarevern



INTRODUCTION


How to unlock the battery case and take out the battery.

Step 1 — Battery



- Slide the lock into the unlocked position to the right.
- *(i)* Use your finger to slide battery hatch towards the arrow sign.
- *(i)* Both battery and memory card should now be visible.

Step 2

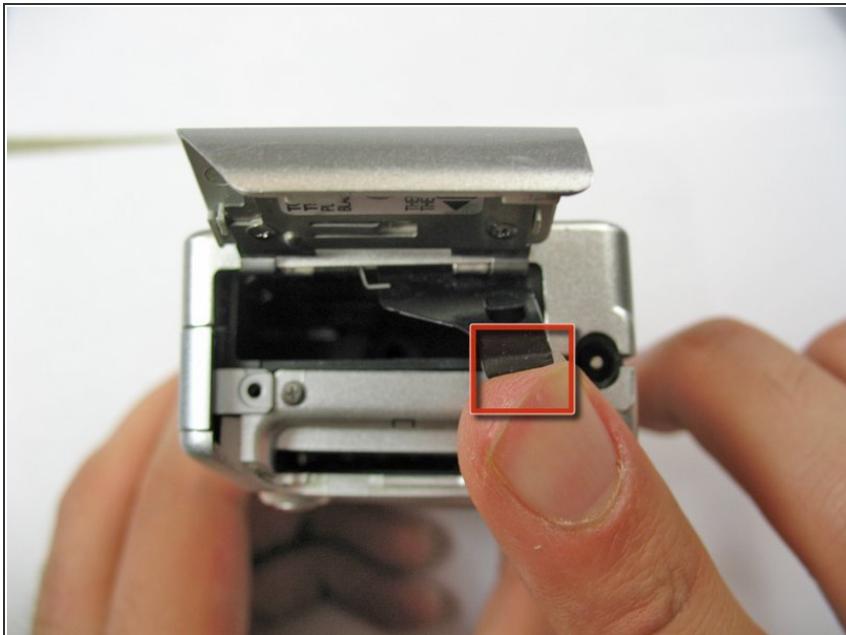

- Open battery hatch and the black cover to expose the battery compartment.
- *(i)* The camera used to create these repair guides did not have a battery and memory card.
- Pull the battery out and replace with a new one.
- *(i)* When putting the battery back in, make sure it is in the same orientation as before.
- Close the battery compartment, and make sure the lock is in the locked position.

To reassemble your device, follow these instructions in reverse order.