



Panasonic Lumix DMC-FX01 Battery Replacement

This guide shows how to remove and replace the main camera battery.

Written By: Steven



INTRODUCTION

This will help replace any dead or defective batteries.



PARTS:

- [Panasonic Lumix DMC-FX01 Compatible Battery \(1\)](#)

Step 1 — Battery



- Locate the memory card and battery card latch on the bottom of the camera.
- Slide the latch to the open position.

Step 2



- Open the battery latch, and slide the battery release lever to the right.

Step 3



- Remove the battery from the camera.

To reassemble your device, follow these instructions in reverse order.