



Panasonic Lumix DMC-FZ1000 Battery Replacement

Remove a dead battery to recharge it, or replace a faulty battery with a working one.

Written By: Robseth Taas



INTRODUCTION

You will probably replace your camera's battery more often than any other part. Just remember the steps of this tool-free replacement guide and you'll be able to recharge your camera easily.

Step 1 — Battery



- Slide the switch on the bottom of your camera from the right (LOCK) to the left (OPEN).
- *(i)* The battery door will swing open.

Step 2



- Pull down on the lever that holds the battery.
- *(i)* The battery will pop out of its casing.

Step 3



- Pull out the battery.

To reassemble your device, follow these instructions in reverse order.