



Panasonic Lumix DMC-ZS40 Battery Replacement

This guide will explain how to replace the battery for the Panasonic Lumix DMC-ZS40.


Written By: Dean Favetta



INTRODUCTION

Follow this guide if you need assistance to replace your Panasonic Lumix DMC-ZS40 battery. The battery may need to be replaced if your camera is consistently dying before its full lifespan is used up, or if it doesn't turn on at all.

Step 1 — Battery

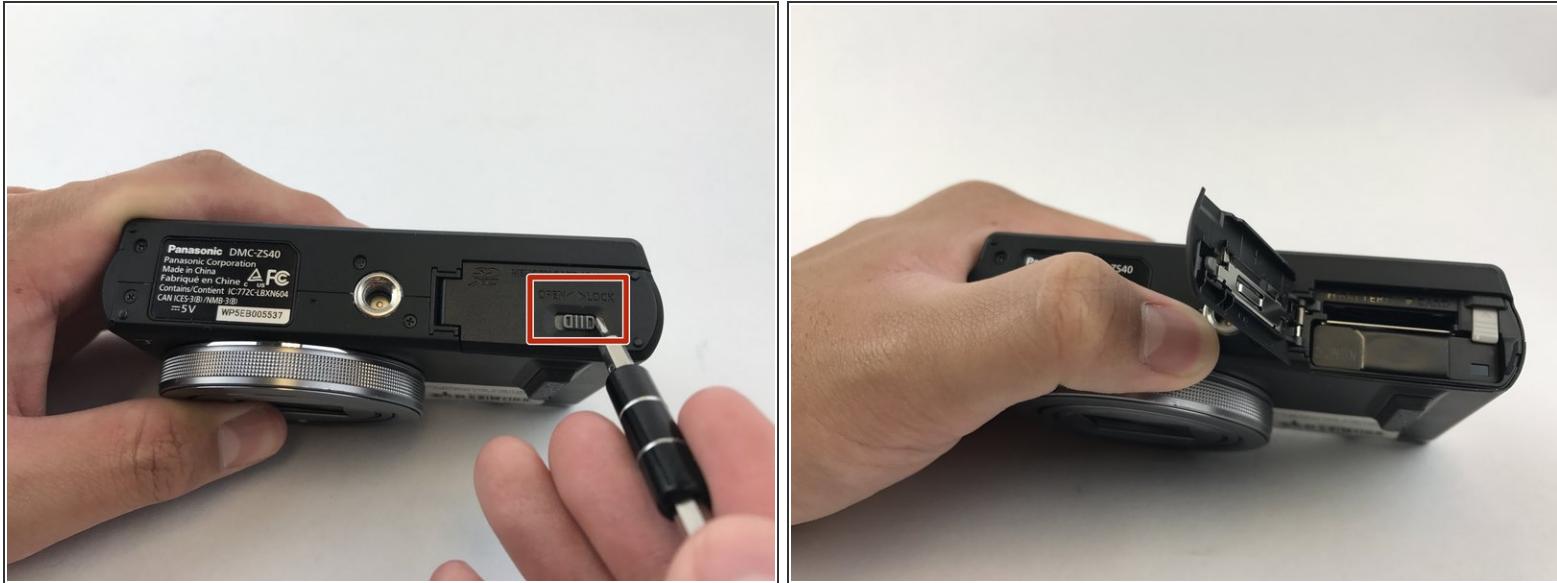


- Find the battery/memory card door on the bottom right of the camera.
- Use your finger or screw driver to slide the grey latch from the locked position to the open position. This will swing open the door.

Step 2



- Push up on the right-hand-side tab to release the battery.

Step 3

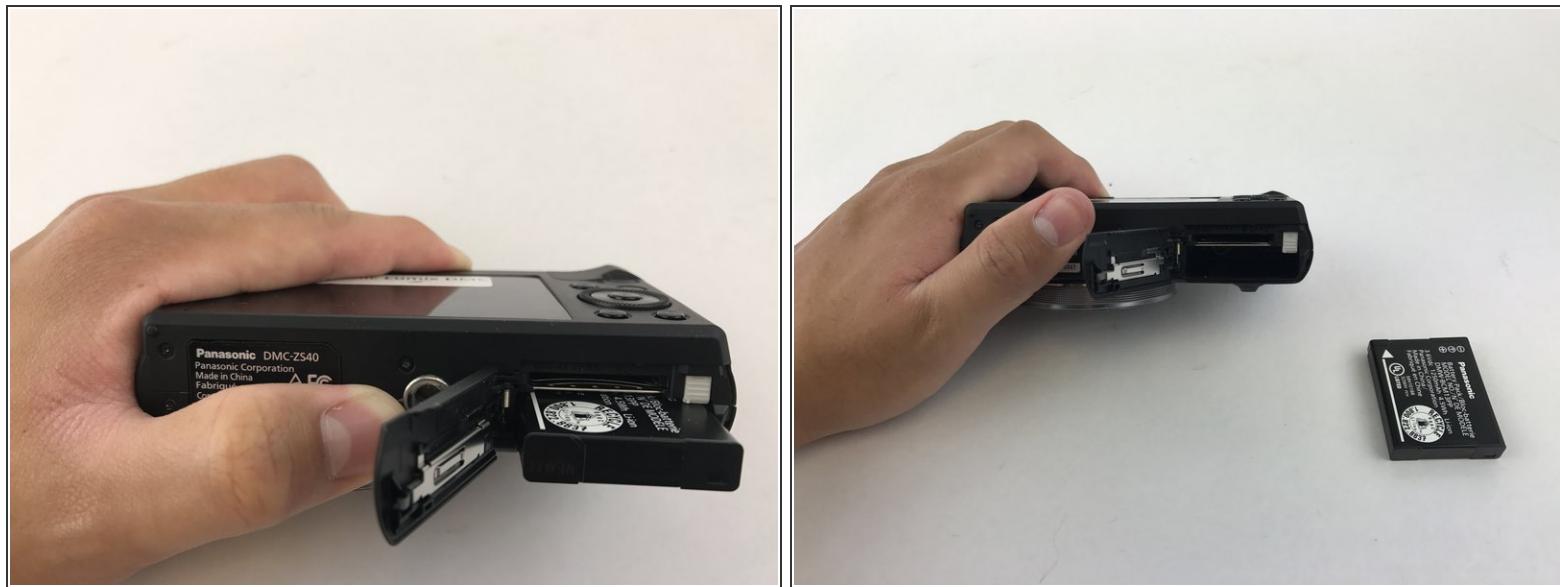

- Remove battery from camera.

Follow these instructions in reverse order to replace the battery and reassemble.