



Panasonic Lumix DMC-ZS8 Front Panel Replacement

This guide will show the user how to replace a broken or damaged front panel by detaching it and replacing it with a new one.

Written By: sampsonj49



This document was generated on 2019-09-22 02:21:03 AM (MST).

INTRODUCTION

This guide will teach you how to successfully identify and replace your camera's front panel.

TOOLS:

- Essential Electronics Toolkit (1)

Step 1 — Front Panel



- Turn the camera over so that the bottom is facing you. Using a Phillips head screwdriver, unscrew the small screw located on the bottom of the camera.

Step 2



- Carefully lift the front panel away from the camera until it is completely separated.

Step 3



- The separated front panel and camera should look like this.

To reassemble your device, follow these instructions in reverse order.