



Panasonic Lumix DMC-ZS8 Lens Replacement

This guide will show the proper steps to replacing the lens to the Panasonic DMC-ZS9 camera.

Written By: Elijah Painter



INTRODUCTION

Camera lens' play a huge role in making cameras effective. Replacing a lens is easy as 1-2-3 and only takes 10-13 minutes.

TOOLS:


- **Small Phillips Head Screwdriver** (1)
- **Spudger** (1)
(If needed)

Step 1 — Lens



- Take a Phillips Head screwdriver and remove the 2mm screws on the left and right side of the camera.

Step 2

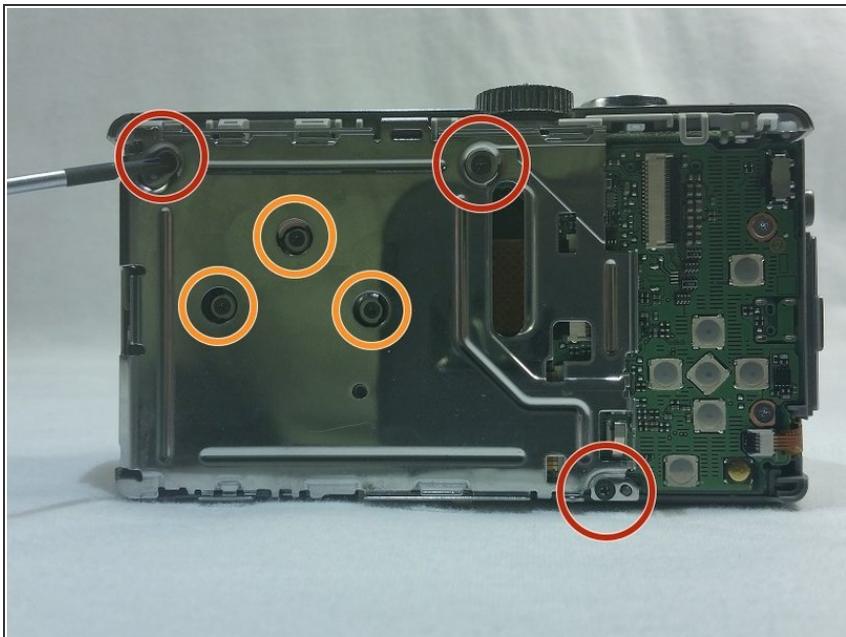


- Remove the 3 Phillips 4mm screws located on the aluminum plating inside the camera.
- Then remove the 3 Phillips 2mm screws located in the middle of the aluminum plating.

Step 3




- Lay the camera on the front side where the aluminum panel is facing up.
- Once the camera is in the right position, lift up the aluminum plating.

Step 4

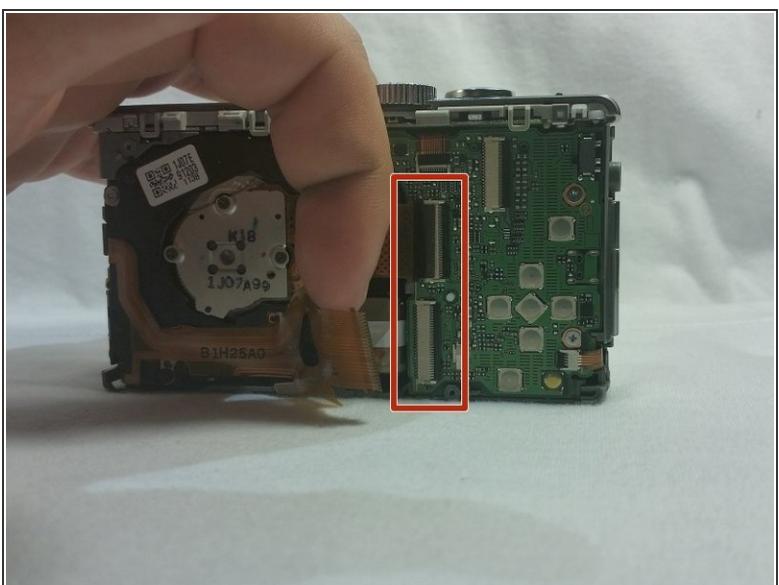

- Stand the camera up in the upright position.
- Unplug both copper wiring plugs from the motherboard.

Step 5

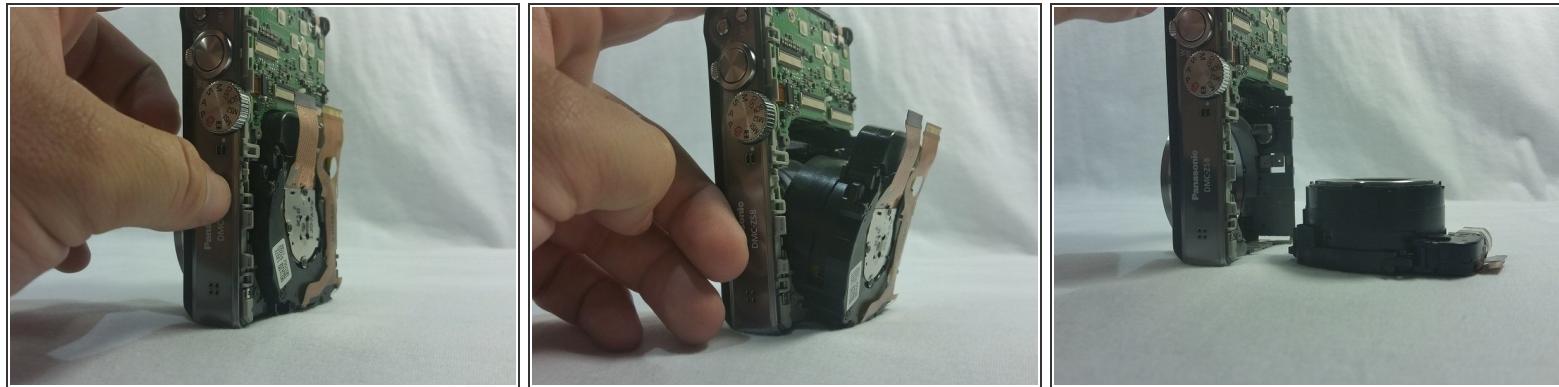

- Lift your camera into the upright position
- The camera lens should slide out. (Pry it out with a spudger or a plastic opening tool if needed)

To reassemble your device, follow these instructions in reverse order.