



# Panasonic Lumix DMC-ZS8 Screen Panel Replacement

We will be disassembling the necessary parts of the camera so we can replace the screen panel.

Written By: Trevor Meyers



## INTRODUCTION

This guide will show you how to remove all of the exterior panels of the camera in order to remove and replace the LCD screen panel.

### TOOLS:

- [Mahi Driver Kit - 48 Bit Driver Kit \(1\)](#)

## Step 1 — Screen Panel




- Remove all four screws from the side panels.

## Step 2




- Remove the two screws from the bottom of the back panel.
- Remove the back panel as shown in the second and third pictures.

## Step 3

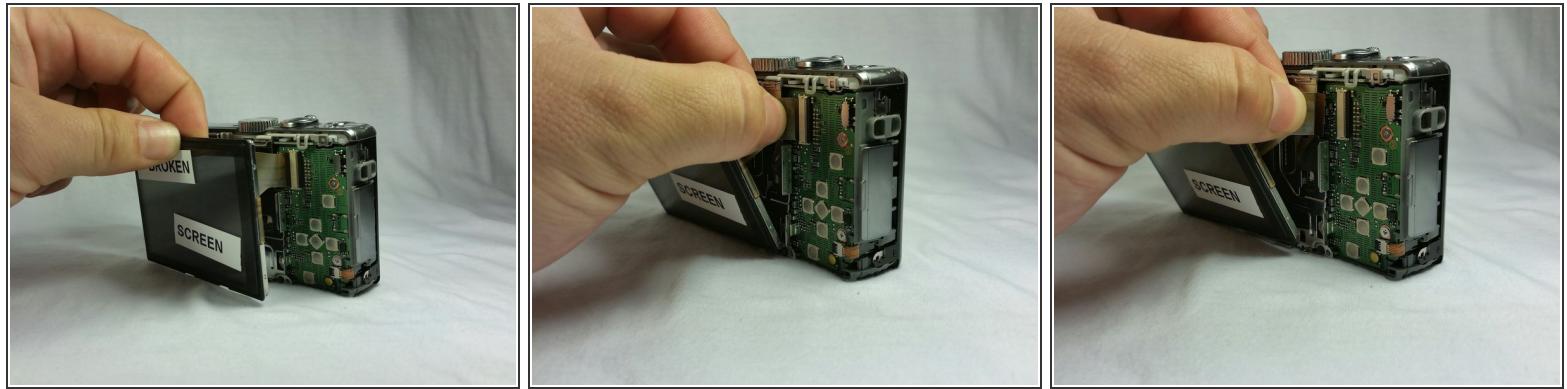

- Remove the screen from the mounting bracket.
- Slide the wiring from the board connection.

## Step 4

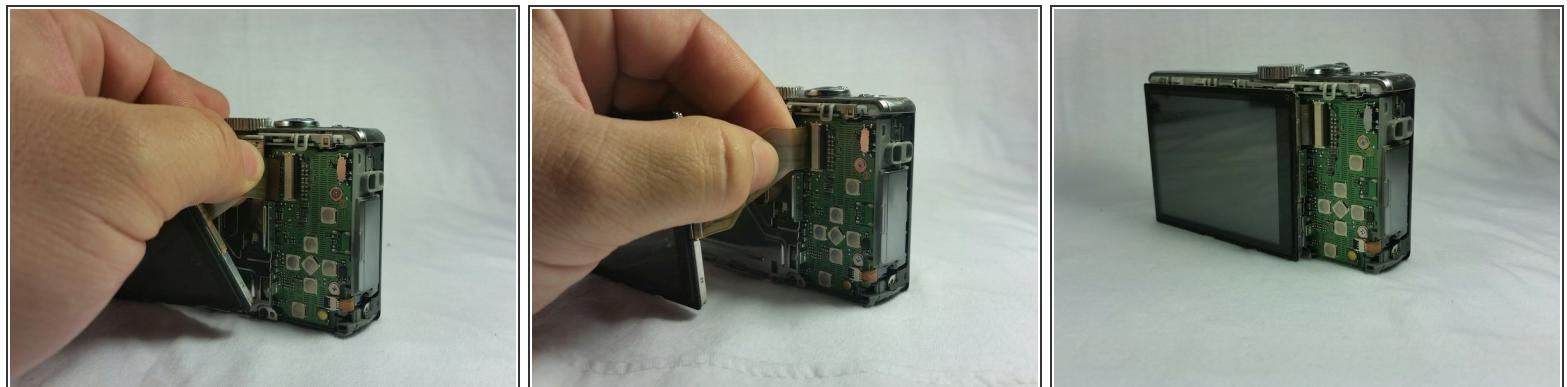

- Reconnect the new screen wiring into the motherboard as shown in the picture. Replace the new screen into the mounting bracket.

## Step 5



- Replace the front panel and install the screws on the bottom side of the camera.

## Step 6



- Replace the side panels and replace the four screws to secure the side panels.

## Step 7



- This is what your newly replaced screen should look like.

Now you have a new screen for your Panasonic DMC-ZS8.