



# Panasonic Lumx DMC-ZS19 LCD Screen Replacement

Replace your broken or dysfunctional camera LCD screen.

Written By: Patrick Thoennissen



## INTRODUCTION

This repair guide is to replace the LCD screen on your Panasonic DMC-ZS19 camera. For this repair, you will need a PH00 screwdriver and a plastic opening tool. Ensure that you remove the battery before beginning this repair, as you will be interacting with electrical components.

### TOOLS:

- [Phillips #00 Screwdriver \(1\)](#)

#### PH00

*For the screws*

- [iFixit Opening Tools \(1\)](#)

#### Wide Tip

*For prying open the shell*

### PARTS:

- [Panasonic Lumix DMC-ZS19 LCD Screen \(1\)](#)

## Step 1 — LCD Screen



- Locate the pair (2) of screws on each side of the camera and remove them. Then locate the pair (2) of screws on the bottom of the camera, located on each side of the tripod screw-in area, and remove them.

## Step 2



- Using the plastic prying tool, remove the cover of the camera that is on the same side as your LCD screen. This cover should come off relatively easily, and will expose the motherboard that the screen is connected to.

## Step 3



- Disconnect the motherboard that the LCD screen is connected to from the main motherboard.

## Step 4



- Using your hand, follow the two data-strips that connect the LCD screen to the motherboard and unclip them. Once the data-strips are unclipped, remove them from the motherboard and the screen will be free.

To reassemble your device, follow these instructions in reverse order.