



Panasonic NR B 53V1 Water Dispenser at fridge

Squeaky Water Dispenser Repair. when dispenser makes AWFUL NOISE

Written By: Schwarzstein





INTRODUCTION

How to fix squeaky water flow

TOOLS:

- Phillips #2 Screwdriver (1)

Step 1 — Panasonic NR B 53V1 Water Dispenser at fridge

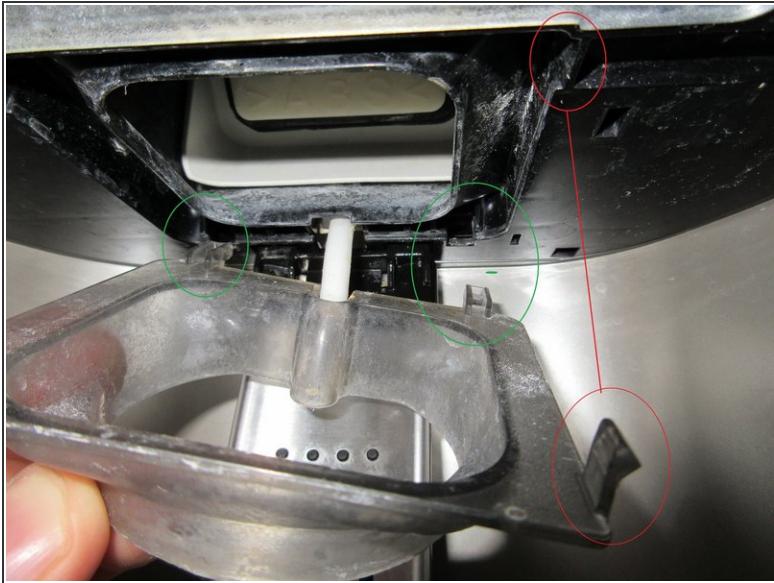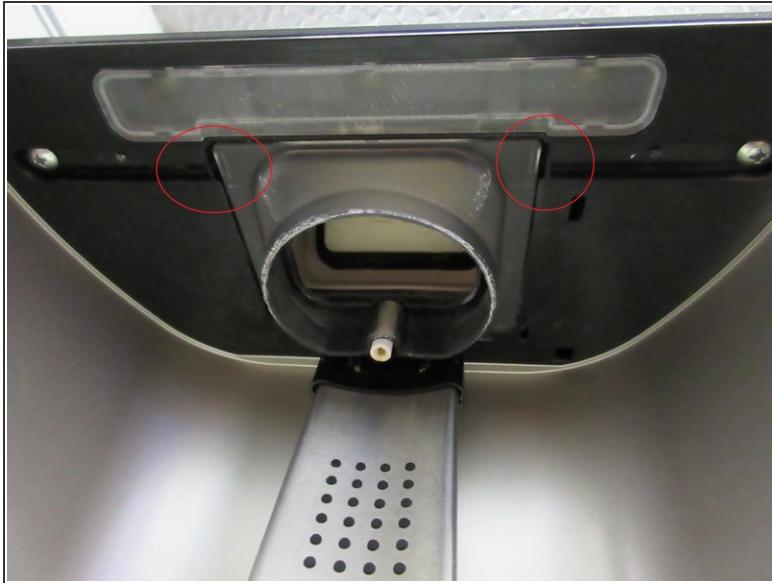

- Warning: Before working at it unplug the power. Here you can see the plastic tube from where the water comes out. It is clipped in a clear plastic shape. Open the clips and pull
- Shake it a little so the tube can get out here.
- This clear plastic is fragile,
- be careful with it or the clip may break.

Step 2



- More pictures, look.
- you can clean it with citric acid.

This document was generated on 2019-09-19 12:42:01 AM (MST).

Step 3



- How to open. First remove two PH2 screws left and right.
- PULL the complete display. Shake it a little because the flap of the ice-crusher could be frosted.
- Now pull it downwards. Now turn around and you see the plastic from the lever.

Step 4



- This is the backside: The quadratic black rubber part is a motorized flap of the ice-crusher, be careful with it, there are fragile springs, dont loose them.
- Now spray some SILICONE_SPRAY on the moving parts, i made some red circles for it. Just a little bit, also on the springs.
- TRY, move it, now the noise should gone, whole moving it.
- Thats it, reassemble it, be careful with the notches and clipse.
- done. :)

easy