



# Panasonic PV-GS9 outercasing replacement

Written By: Trevor Johnson



## INTRODUCTION

In order to repair the problems that may arise while using the Panasonic PV-GS9 you must disassemble the camcorder entirely. This will allow you to have three large pieces of the camcorder from which all the repairs can be made.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Outer Casing



- Using a plastic opening tool, remove the record/playback and record/power control knobs from the camcorder.

## Step 2

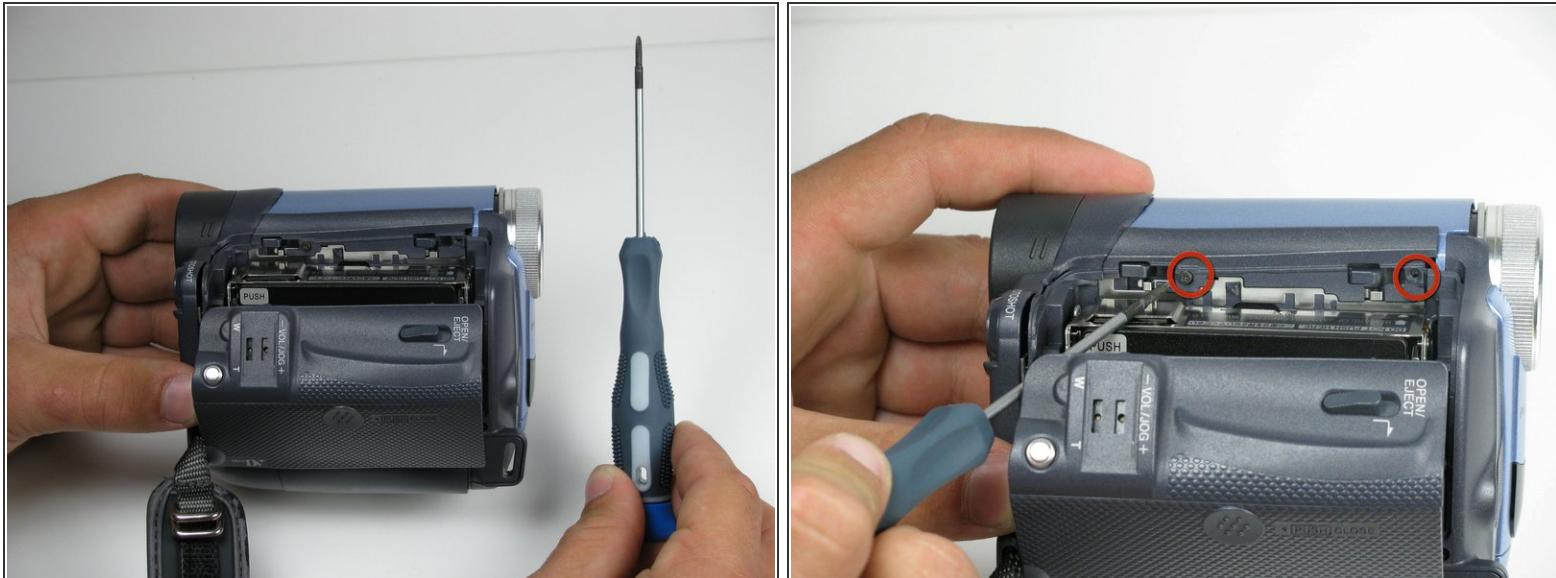

- Open the tape compartment.
- Using a #00 Phillips head screwdriver, remove the two 4.5mm screws from the camcorder.


## Step 3



- Use a plastic opening tool to remove the gray trim piece from top of the camcorder.

 Take care when removing the trim piece. The plastic parts are fragile and can break easily.

## Step 4

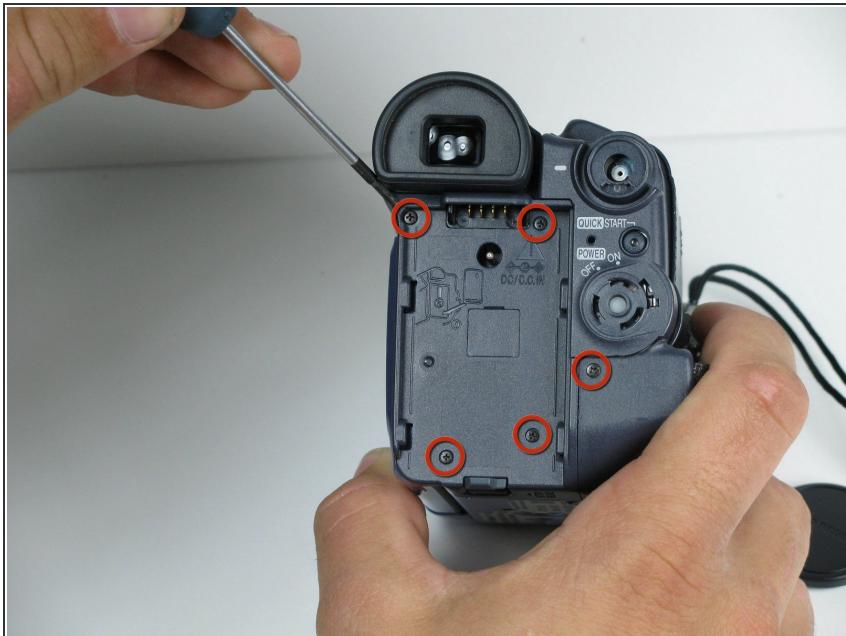

- Rotate the camcorder so that the eye piece is facing you.
- Remove the battery.
- Remove the four black 4.5mm screws, sitting behind the battery.
- Remove the 5th screw to the right of the battery dock.


 Be careful not to lose any screws whilst trying to remove them.

## Step 5



- Rotate the camcorder so that the tape compartment is facing you.
- Remove the single 4.5mm black screw above the hook for the hand strap.
  - Undoing the strap on one end may help.
- Rotate the camcorder so that the lens is facing you.
- Remove the single 4.5mm black screw from the front panel.

## Step 6

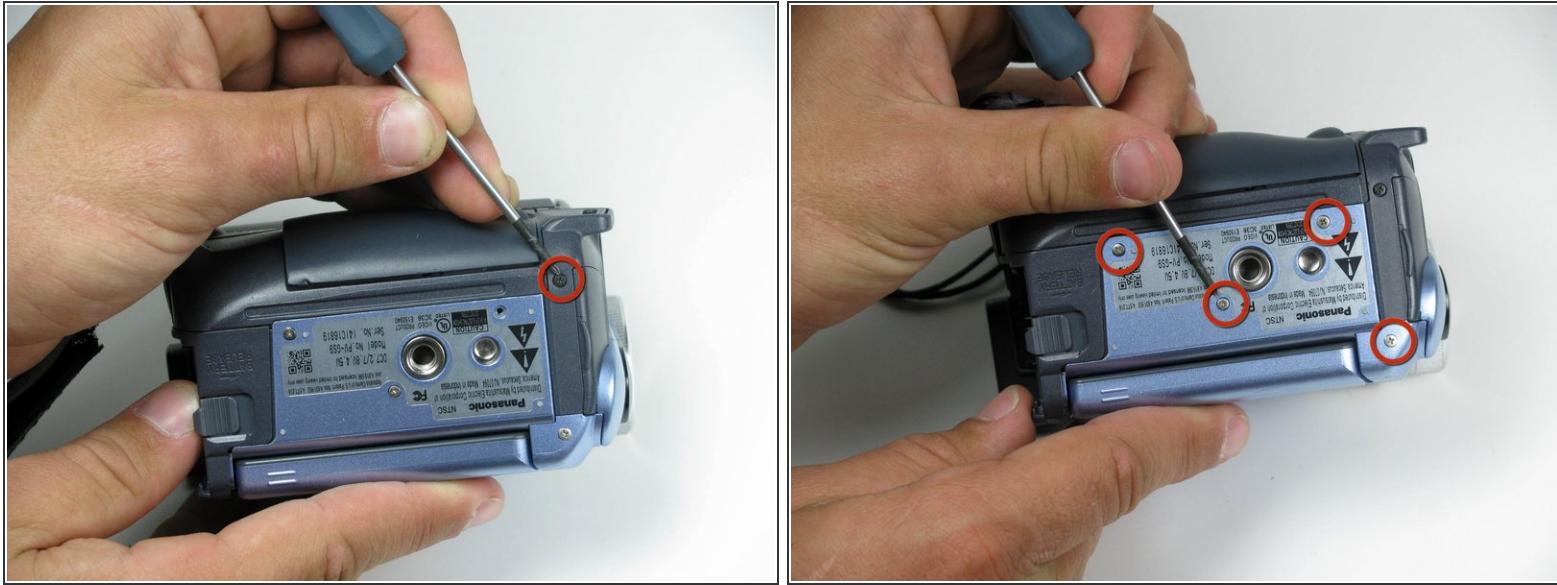

- Rotate the camcorder so that the bottom is facing towards you.
- Remove the single remaining 4.5mm black screw from the bottom.
- Remove the four silver 4.5mm screws from the body.

## Step 7



- Open the LCD screen on the side of the camcorder.
- Using a #00 screwdriver, remove the two 4.5mm silver screws located on either side of the hinge of the LCD screen.

## Step 8





**⚠** Very carefully remove the front cover from the main body of the camcorder.

- This should come apart with relative ease, however a plastic opening tool may help remove the panel.

**⚠** There is a ribbon cable attached to the front panel and the camcorder body, so be careful not to pull that off when you remove this panel.

## Step 9

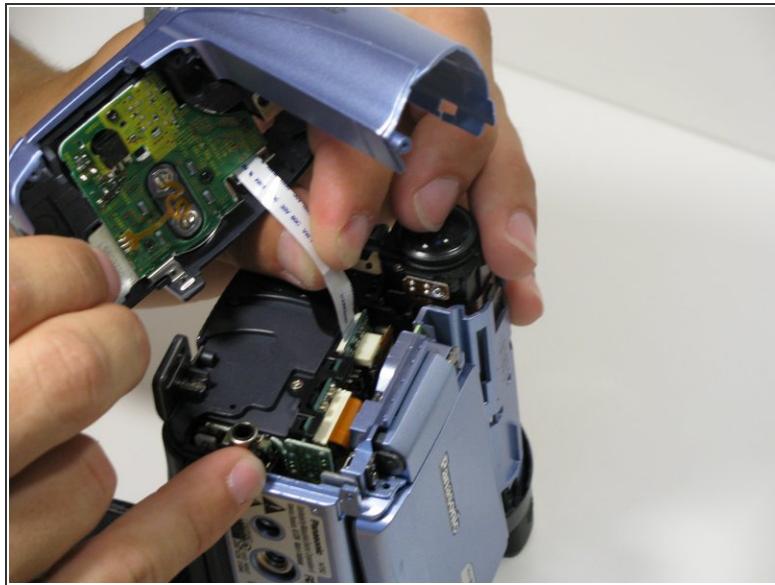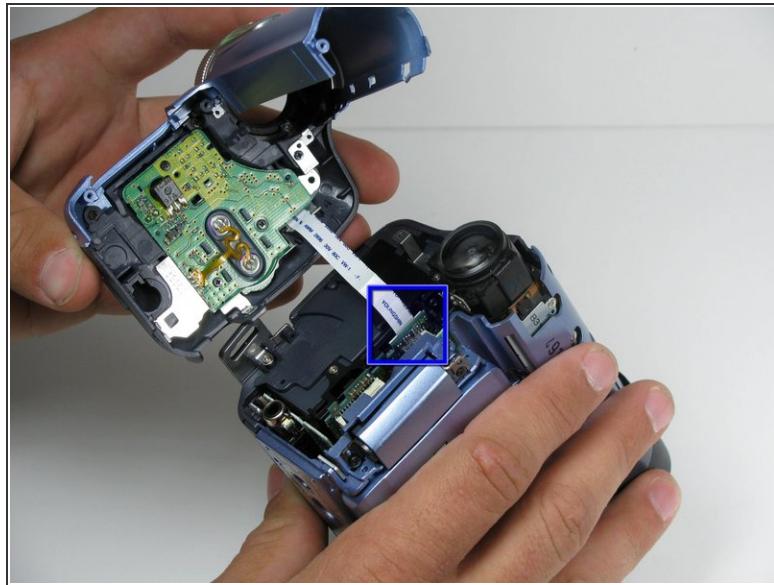

- Using your fingers, carefully pull the ribbon cable away from the logic board.

To reassemble your device, follow these instructions in reverse order.