




# Panasonic RQ-2102 Holding Handle Replacement

This guide shows one how to replace the handle on the Panasonic RQ-2102 Cassette Recorder.

Written By: Andrew Campbell

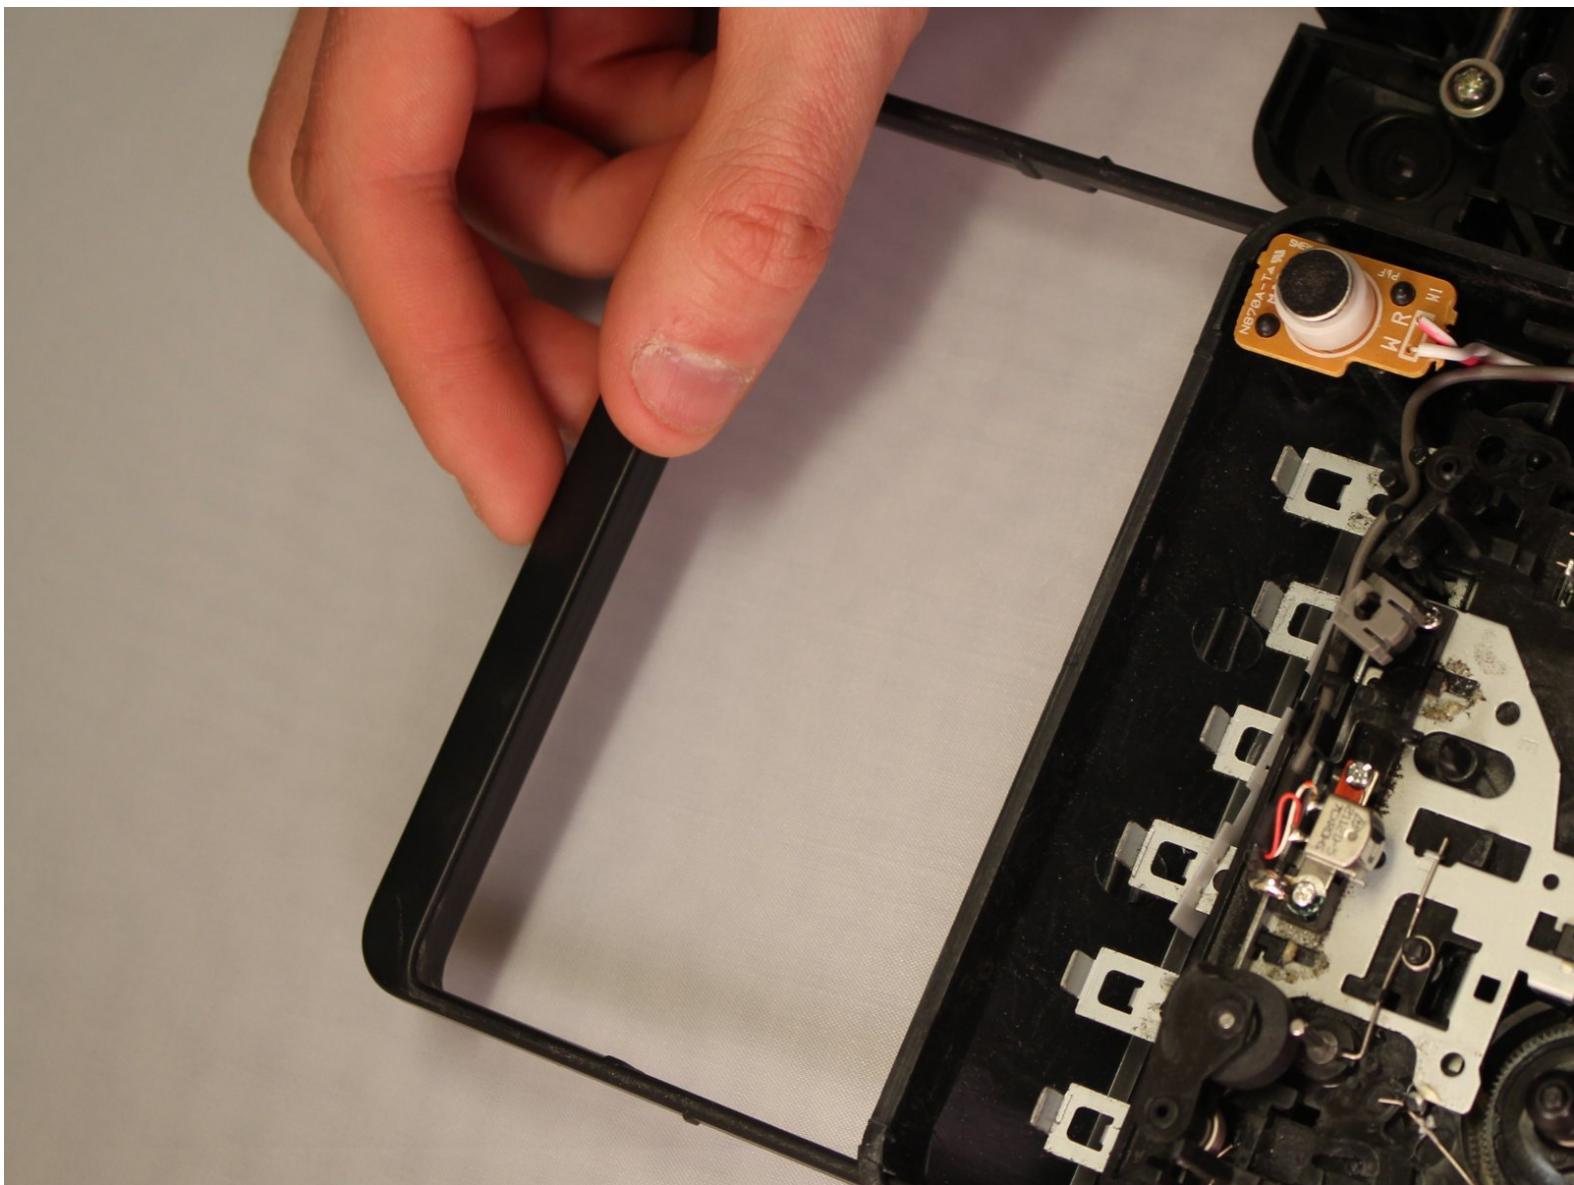

## INTRODUCTION

In this guide, you will learn how to replace the holding handle. Because the handle is a thin plastic piece, after heavy use it is more likely to break. If the handle is actually broken, then replacing it is easy. However if the two handle catches, which holds the handle in place, are broken then the entire body needs to be replaced due to them being molded to the body.

### TOOLS:

- Phillips #0 Screwdriver (1)

## Step 1 — Holding Handle





- Remove the three M5-0.8 x 12 mm Phillips #0 screws from the back of the device body
- Remove two more screws from inside the battery compartment

**⚠** Cautiously remove the back of the device body so that the cord, which connects both sides, is not damaged.

**ⓘ** [All screws are the same size]

## Step 2

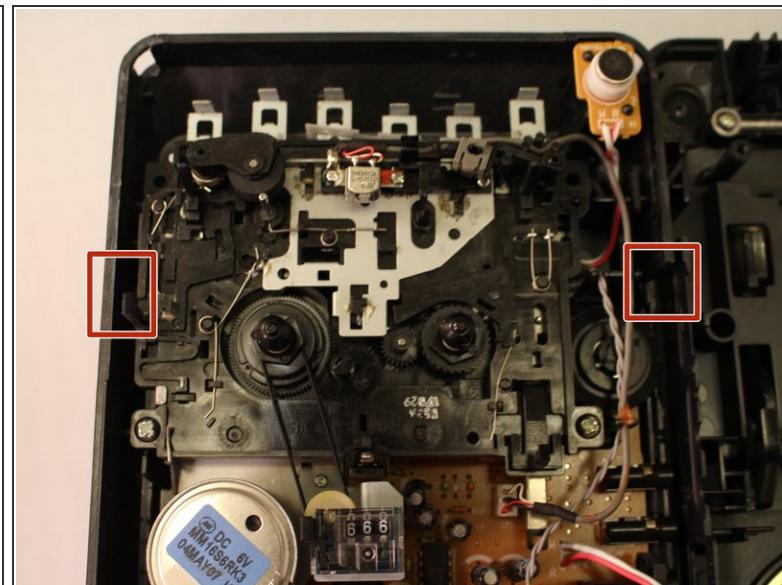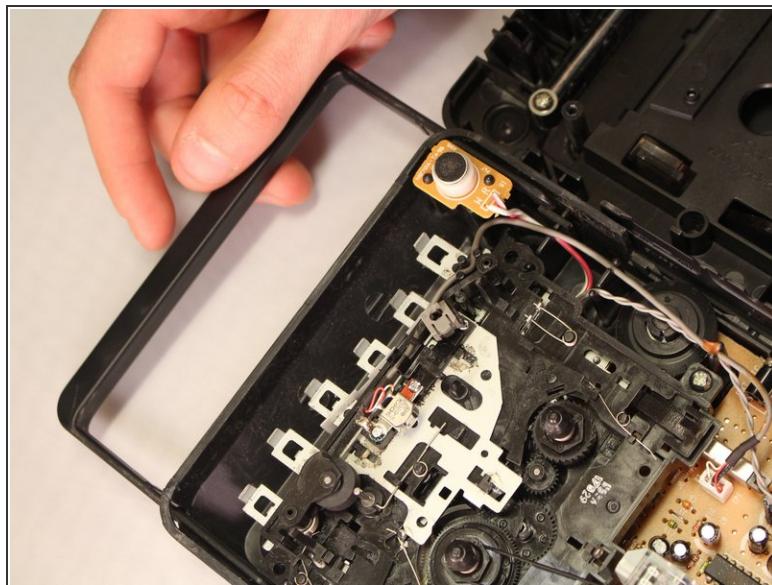

- Carefully remove the handle, making sure the handle catches on the sides are not broken
- Replace the old handle with the new one

 If the handle catches are broken, the device will need to be replaced

To reassemble your device, follow these instructions in reverse order.