



Panasonic SDR H-100 HDD Replacement

The HDD is where the memory is stored for the camcorder. Without this the videos and pictures that are taken cannot be saved.

Written By: Caleb Osborne




This document was generated on 2019-09-20 11:05:35 AM (MST).

 **TOOLS:**

- [Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Remove Bottom Screws

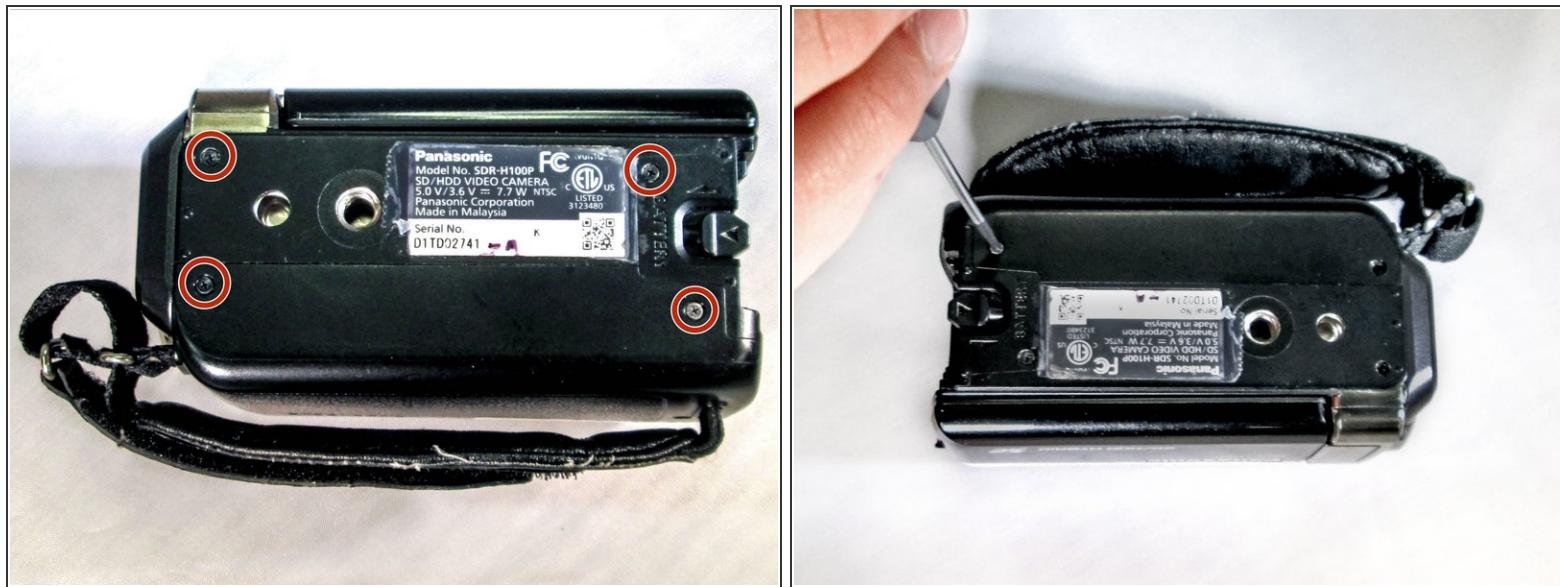


- Unscrew the four 4 mm screws on the bottom of the camcorder.
- *(i)* The screws are two different colors: three black, one silver.

Step 2 — Remove Side Screws



- Unscrew the three 6 mm screws on the handstrap-side of the camcorder.

Step 3 — Remove DC Input Terminal Screws

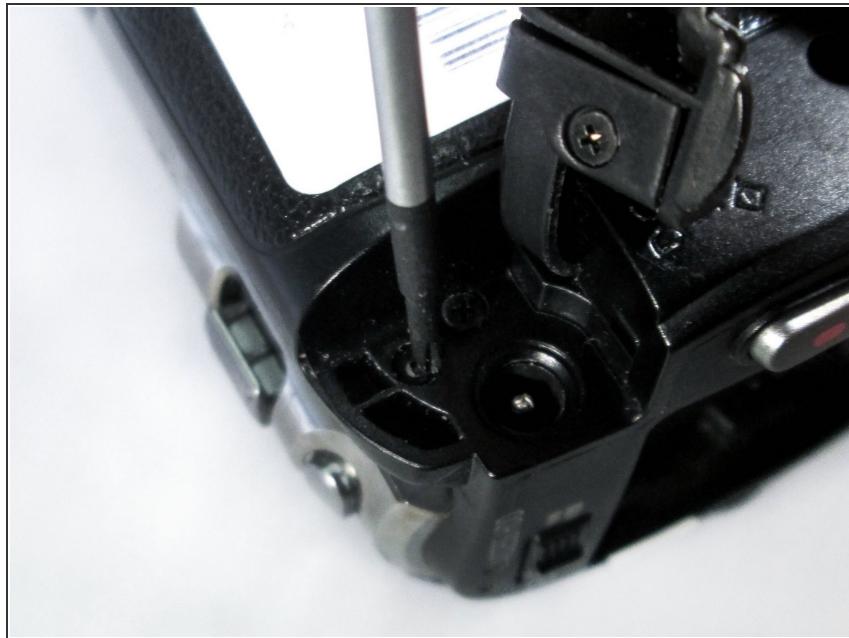

- Pull the charging port (DC input terminal) cover back and remove the 4 mm screw located next to the input terminal.

Step 4 — Remove LCD Monitor Screws




- Unscrew the two black 4 mm screws underneath the LCD Monitor.
 - One screw is located by the hinge of the LCD Monitor. The second is close to the upper-back corner of the camcorder body.

Step 5 — Detach Casing from Body



- Pull the casing under the hand strap directly outward until casing detaches from camcorder
- ⚠ Detach gently so the ribbon cable is not damaged!

Step 6 — Detach Ribbon Cable from Body

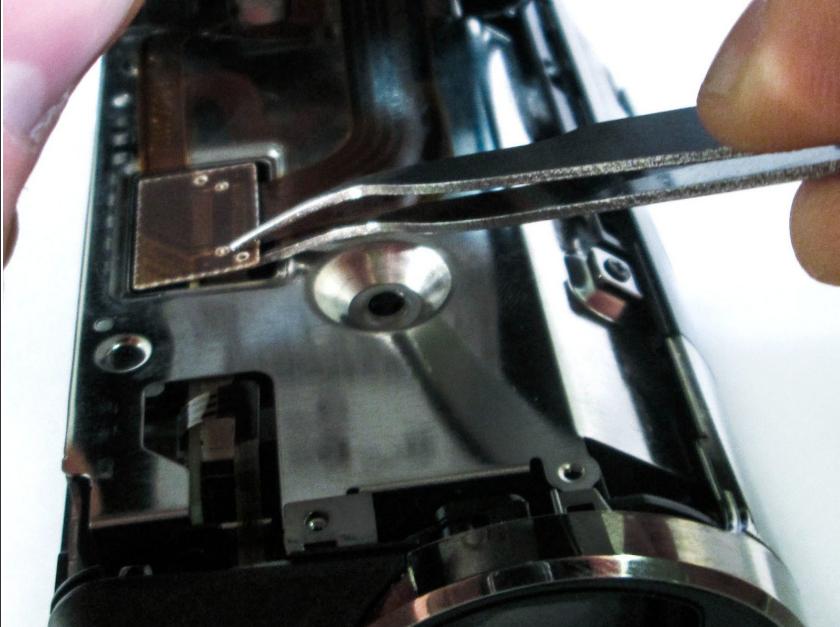


- Use tweezers to grab the ribbon cable at the connection point and slowly lift up until the connection is separated.
- ⓘ This point connects the HDD to the motherboard.

Step 7 — HDD



- On the casing with the HDD, unscrew the two silver 4 mm screws on the upper interior.

Step 8

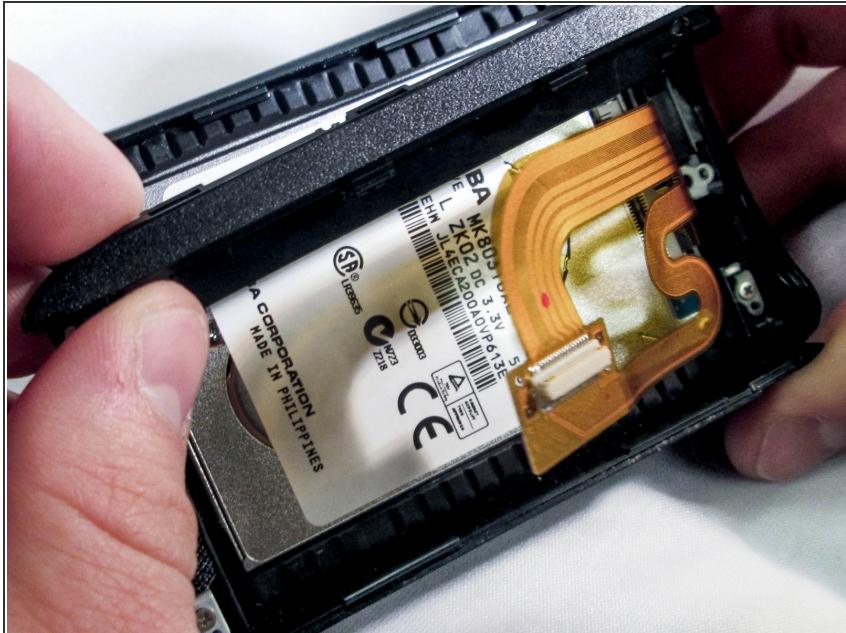

- Pull the plastic black brace where the screws were attached gently with your hand to gain access to the HDD.

(i) The black brace will be able to come apart from the camcorder.

Step 9



- Pry under the HDD gently with a plastic opening tool, and the HDD should easily come out of the casing.

Step 10



- The HDD is now out (The HDD is ready to be replaced).

To reassemble your device, follow these instructions in reverse order.