


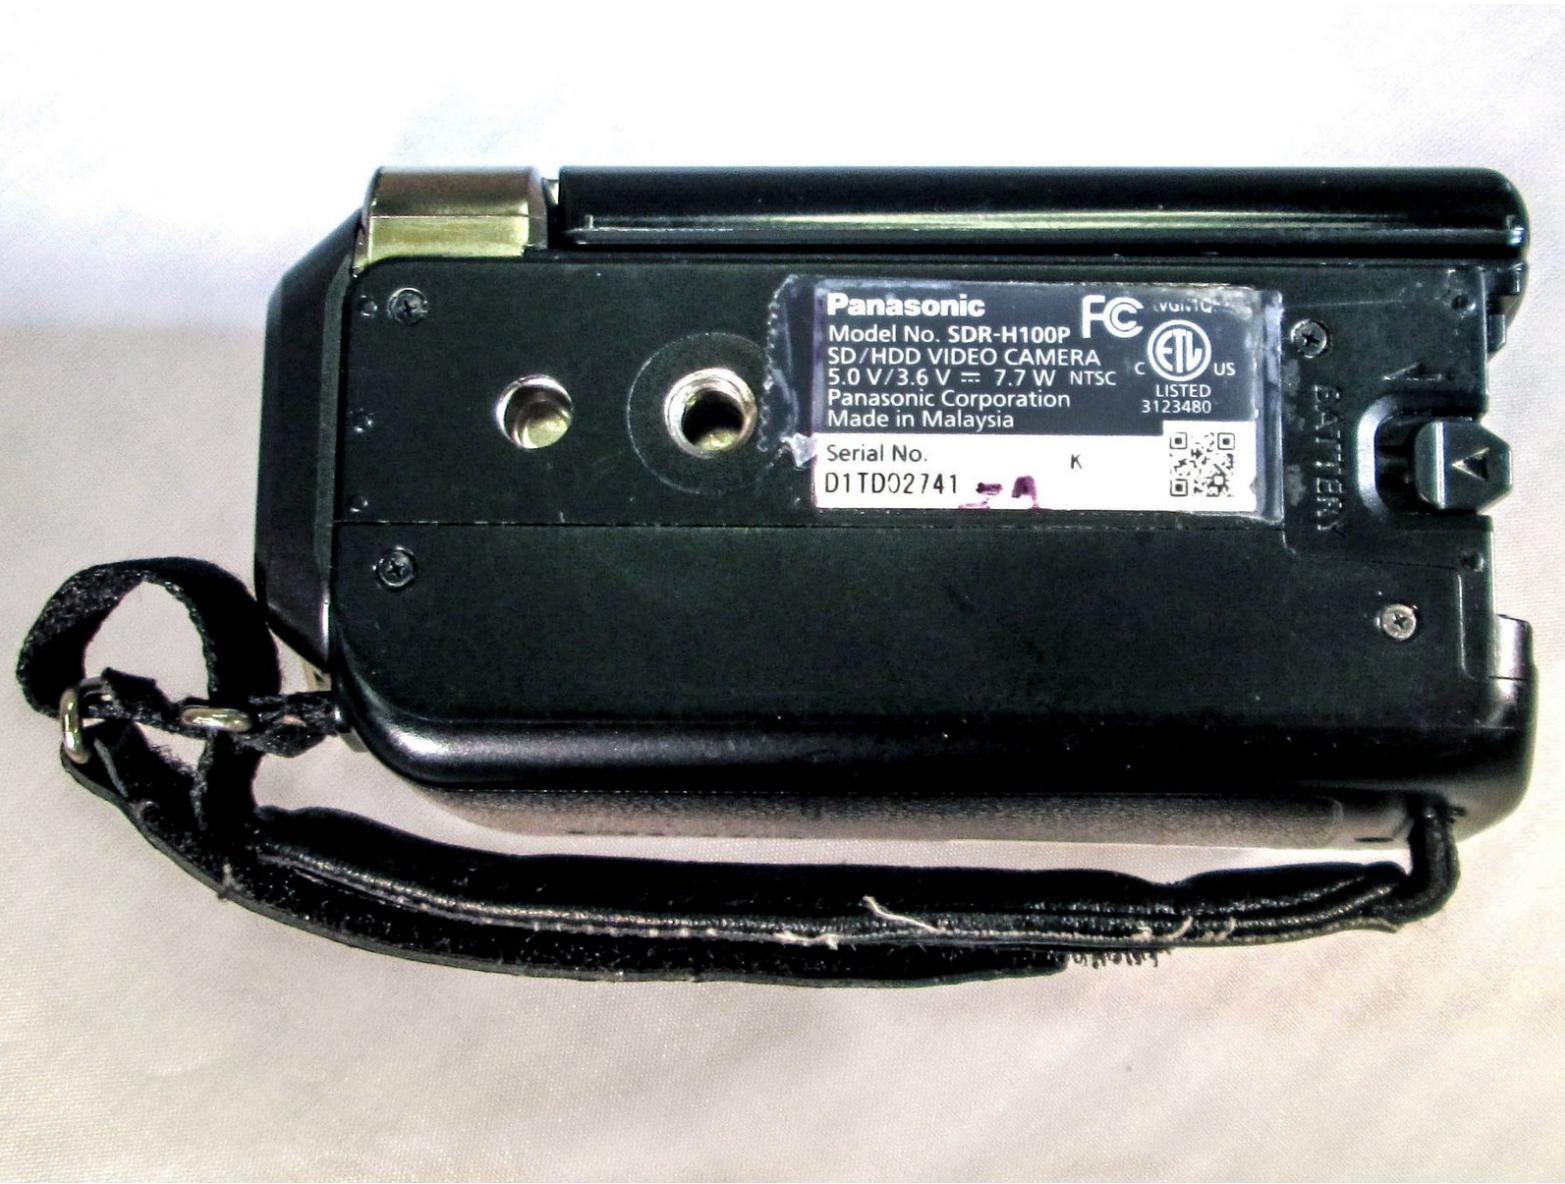

Panasonic SDR H-100 Upper Cover Replacement

This is the first prerequisite for to get to the other parts of the device that commonly break and need to be replaced.

Written By: Caleb Osborne




This document was generated on 2019-09-30 08:11:07 AM (MST).

 **TOOLS:**

- [Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Remove Bottom Screws

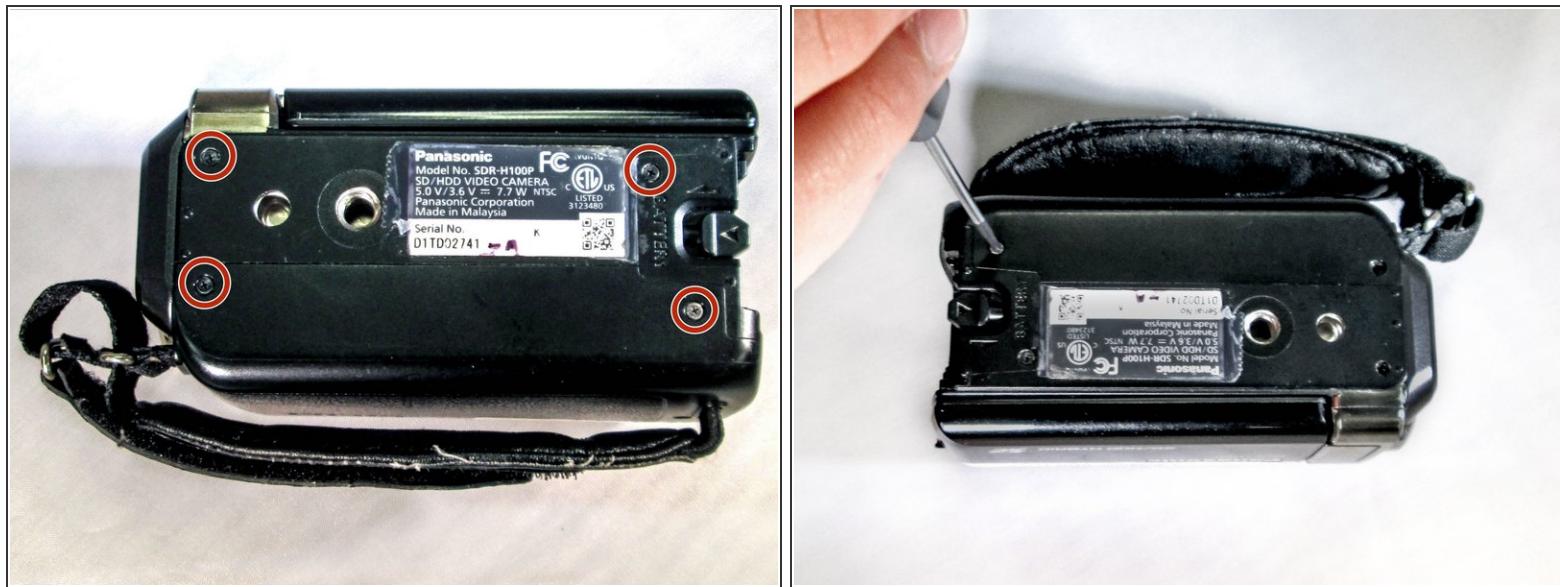


- Unscrew the four 4 mm screws on the bottom of the camcorder.
- *(i)* The screws are two different colors: three black, one silver.

Step 2 — Remove Side Screws



- Unscrew the three 6 mm screws on the handstrap-side of the camcorder.

Step 3 — Remove DC Input Terminal Screws

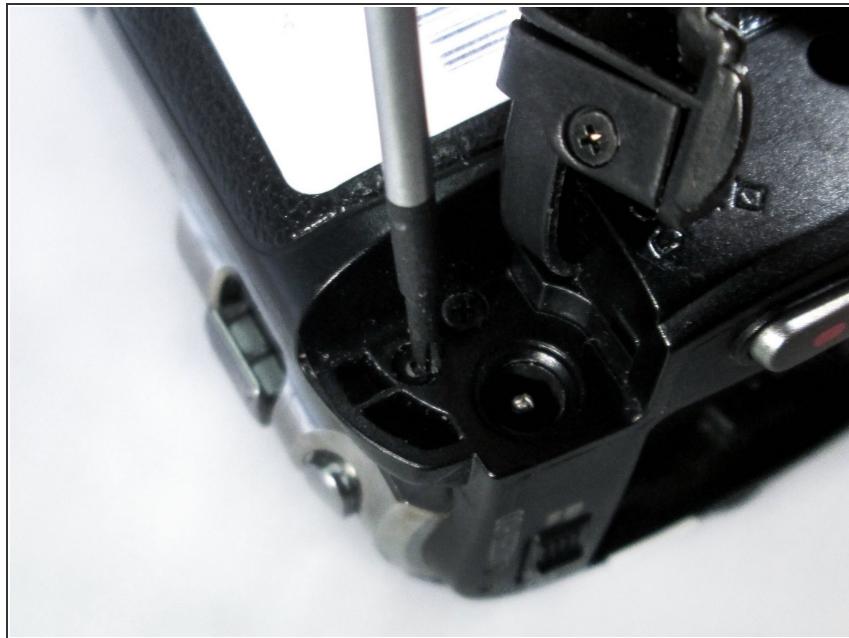

- Pull the charging port (DC input terminal) cover back and remove the 4 mm screw located next to the input terminal.

Step 4 — Remove LCD Monitor Screws




- Unscrew the two black 4 mm screws underneath the LCD Monitor.
 - One screw is located by the hinge of the LCD Monitor. The second is close to the upper-back corner of the camcorder body.

Step 5 — Detach Casing from Body



- Pull the casing under the hand strap directly outward until casing detaches from camcorder
- ⚠ Detach gently so the ribbon cable is not damaged!

Step 6 — Detach Ribbon Cable from Body

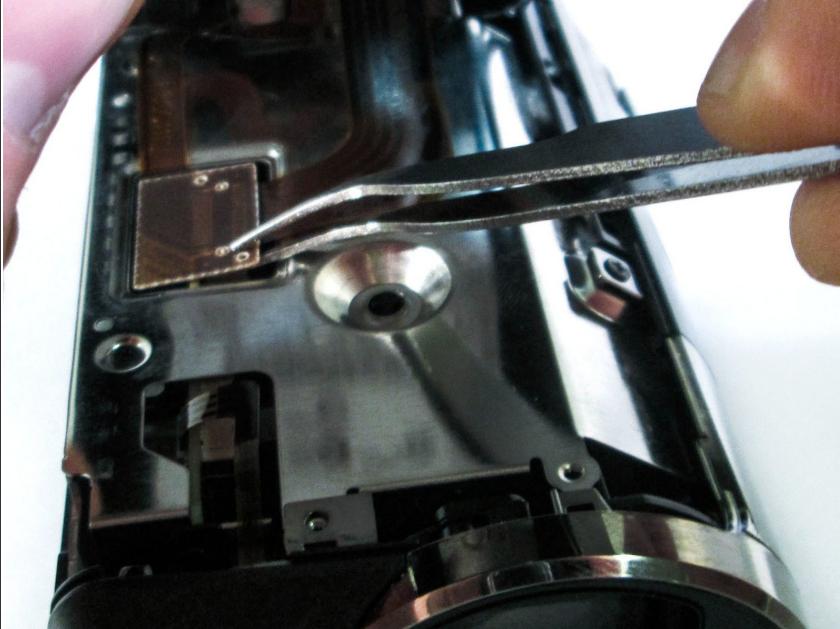

- Use tweezers to grab the ribbon cable at the connection point and slowly lift up until the connection is separated.
- ⓘ This point connects the HDD to the motherboard.

To reassemble your device, follow these instructions in reverse order.