




Panasonic Toughbook CF-29 Optical Drive Replacement

Written By: Clint Kirsop

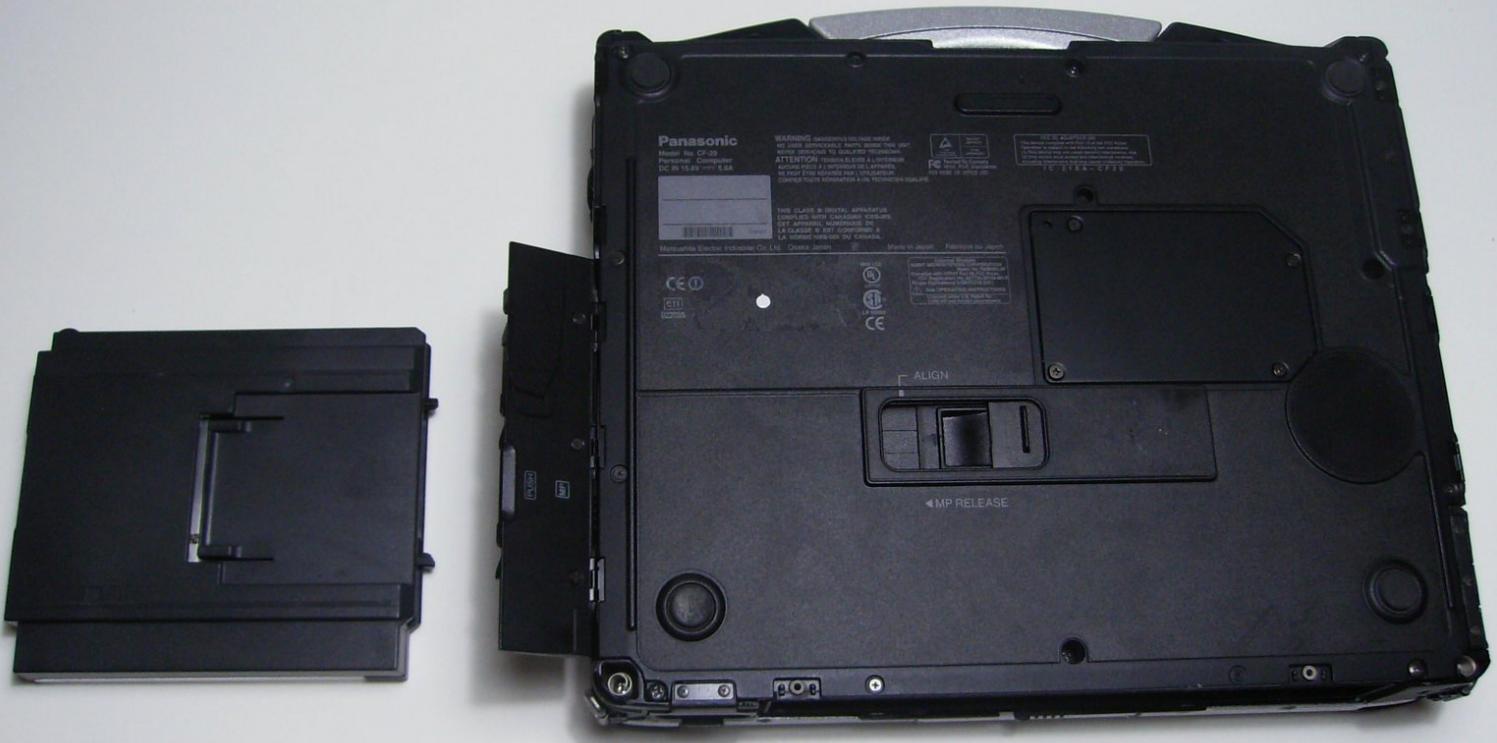

INTRODUCTION

The purpose of this guide is to show how to properly remove the optical drive.

Step 1 — Battery




- Locate the bay door for the battery on the left side of the laptop.

Step 2



- Slide the latch to the right and then down to unlock it.
- Pull out the battery.

Step 3 — Optical Drive

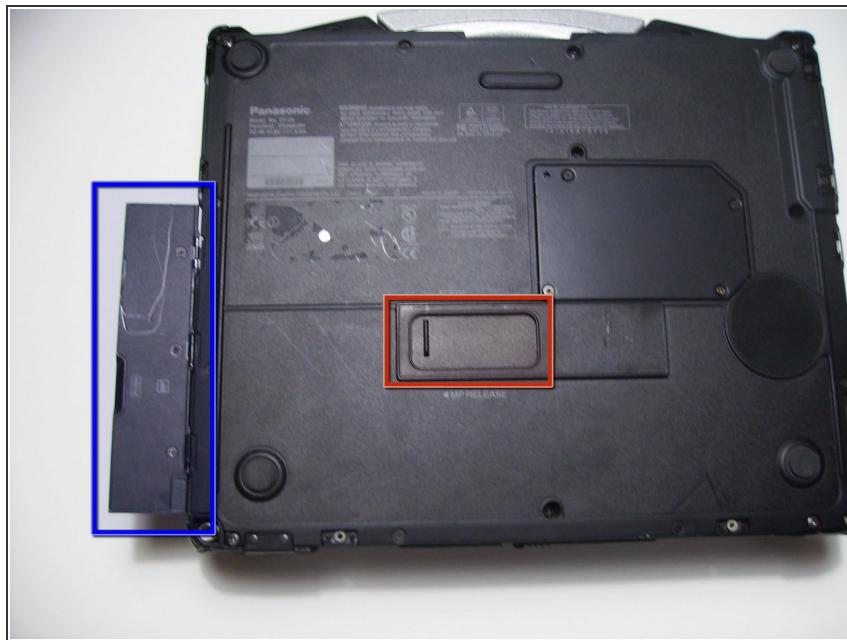

- Flip the device upside down with the handle facing away from you.
- Open the optical drive bay by sliding its latch to the right.
- Locate optical drive release mechanism on the bottom of the laptop.

Step 4



- Slide the latch cover to the right.

Step 5



- Push the exposed switch to the left to eject the optical drive.

To reassemble your device, follow these instructions in reverse order.