



# Panasonic Toughbook CF-53 Battery Replacement

Step by step instructions on how to replace the battery in a Panasonic Toughbook CF-53.

Written By: Gage Russello



## INTRODUCTION

One common point of failure in laptops is the battery. This component can suffer a range of issues from completely dying, holding a significantly lower charge than it did originally, or even not outputting the correct voltage. The Panasonic Toughbook CF-53 utilizes a quick release battery to allow users to swap batteries when needed.

## Step 1 — Battery



- Orient the laptop on its side so that the plastic battery cover is facing upward.
- Push down on the battery cover and remove it by sliding the cover down. This may take some force, but the cover should pop up with a soft click.

## Step 2



- Use the battery release slider to release the battery latch.

## Step 3



- Use the blue tab to pull the battery out of the battery compartment. Make sure to keep the battery latch tab depressed while doing so.

To reassemble your device, follow these instructions in reverse order.