



Panasonic VDR-D220 DVD Disk Latch Replacement

Trouble shooting the disk ejection issues. Replacing the disk.

Written By: Tianyi Luo



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Disk Latch



- The DVD's door can be opened by pressing the top-left of the DVD's door.
- If this doesn't work, you may need to manually eject.
- Use the plastic spudger with light force to carefully pry open the door.
- Open the disk ejection slot gently.

Step 2



- Remove the two 5mm screws on the top-right corner of the disk slot using Phillips #0 screwdriver.

Step 3



- Carefully remove the chip.
- The disk is completely replaced/removed.

To reassemble your device, follow these instructions in reverse order.