



Pantech Matrix Battery Replacement

This guide provides step-by-step instructions on how to properly replace the battery of the Pantech Matrix C740.

Written By: Zeel Patel



INTRODUCTION

The battery of Pantech Matrix C740 functions as the power source for the device; however, faulty functioning of the battery may cause the device to either not power on or cause complications in the device functioning. Therefore, this guide serves as an aid in the replacement of the battery for the Pantech Matrix C740.

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Phone Orientation



- Place phone with screen side facing toward you.

Step 2 — Phone Orientation



- Flip phone over so screen side is now facing down.

Step 3 — Remove Back Cover



- Gently slide the backside phone cover off exposing the battery underneath.

Step 4 — Lift Battery



- Carefully lift the battery up from where the spudger is pointed.

Step 5 — Remove Battery



- Remove the battery from its dock.

To reassemble your device, follow these instructions in reverse order.