




Pantech Matrix Camera Button Replacement

This guide provides step-by-step instructions on how to properly replace the camera button of the Pantech Matrix C740.

Written By: Zeel Patel

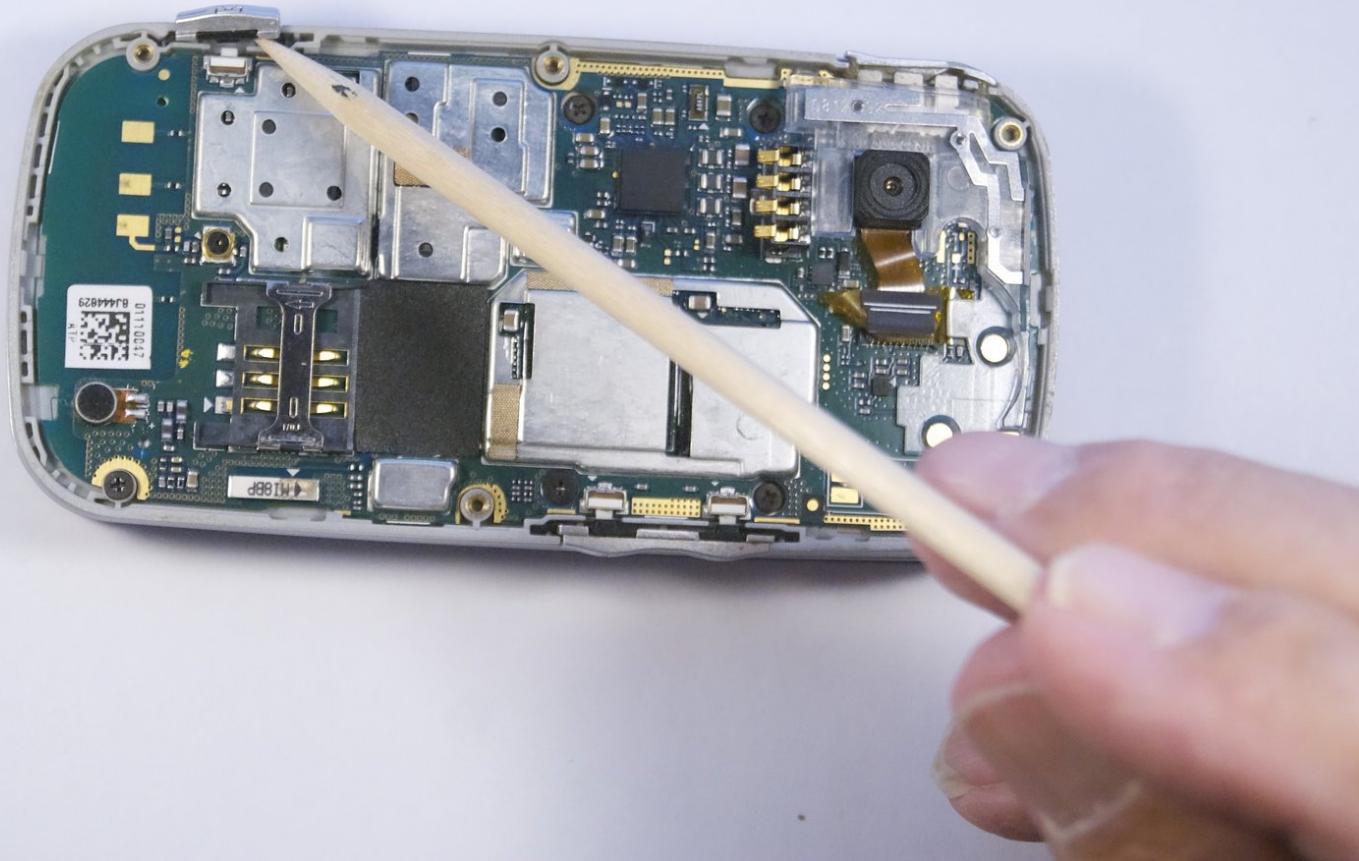

INTRODUCTION

The camera button of Pantech Matrix C740 functions as the mechanism by which the camera is activated; however, faulty functioning of the camera button may cause the device to not allow picture-taking. Therefore, this guide serves as an aid in the replacement of the camera button for the Pantech Matrix C740.

TOOLS:

- [Spudger](#) (1)
- [Polypus](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Phone Orientation



- Place phone with screen side facing toward you.

Step 2 — Phone Orientation



- Flip phone over so screen side is now facing down.

Step 3 — Remove Back Cover



- Gently slide the backside phone cover off exposing the battery underneath.

Step 4 — Lift Battery



- Carefully lift the battery up from where the spudger is pointed.

Step 5 — Remove Battery



- Remove the battery from its dock.

Step 6 — Slide SIM Card Out



- Slide the SIM Card out of its dock.

Step 7 — Remove Phone Screws




- Use a Phillips screwdriver to remove the four 2mm Phillips #000 screws from each corner of the device.

Step 8 — Identify and Remove Phone Casing




- Rotate the phone so the base is facing you.
- Use spudger to separate phone casing and inside as shown.
- Remove the casing carefully and set aside.

Step 9 — Remove Camera Screws

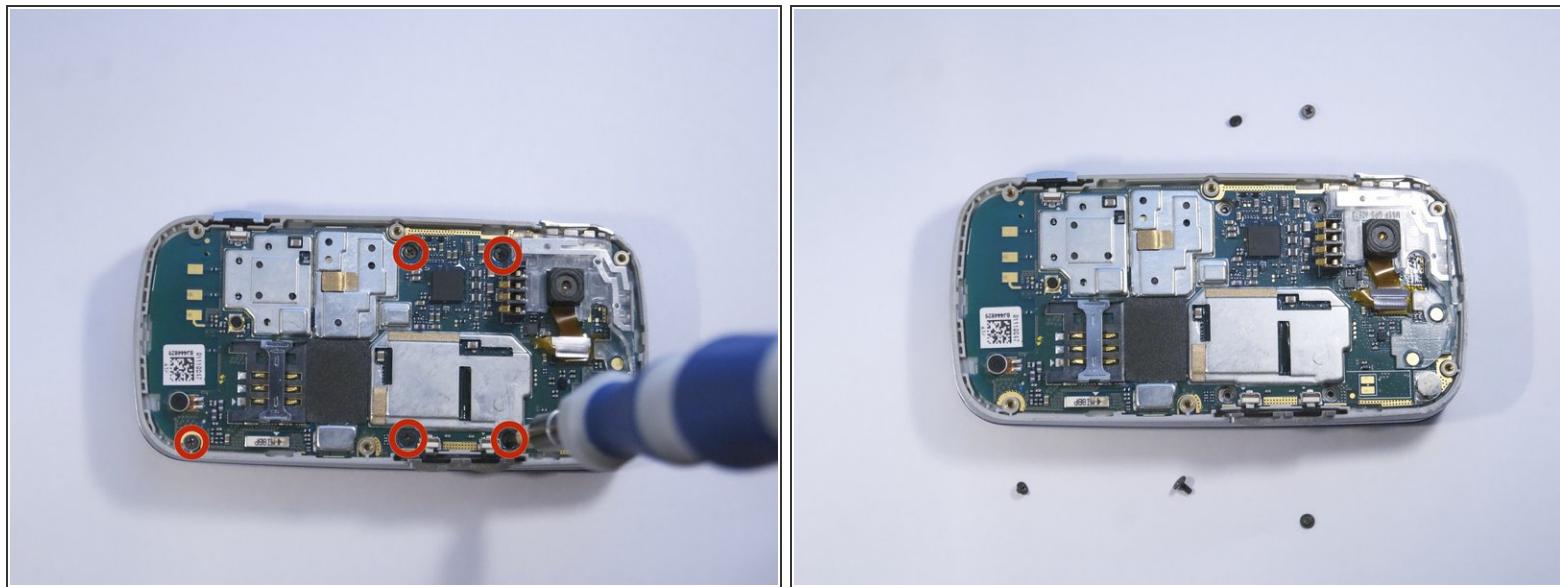

- Place phone with exposed motherboard facing you.
- Use a Phillips screwdriver to remove the five 2mm Phillips #000 screws holding the camera in place.

Step 10 — Identify and Remove Camera Button

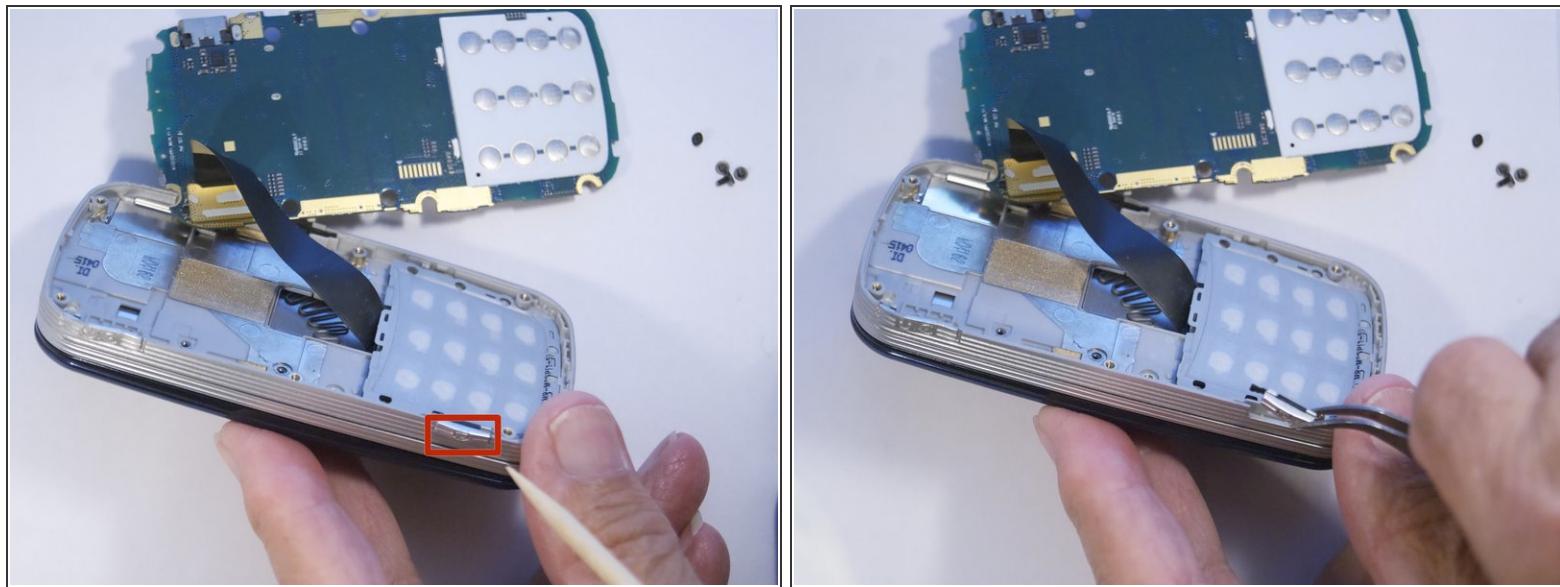

- Carefully remove the motherboard to expose the camera button.
- Grasp the camera button with a polypus and pull gently to remove the camera button.

To reassemble your device, follow these instructions in reverse order.