



# Pantech Matrix MicroSD Card Replacement

This guide provides step-by-step instructions on how to properly replace the microSD card of the Pantech Matrix C740.

Written By: Zeel Patel



## INTRODUCTION

The microSD card of Pantech Matrix C740 functions as an additional storage unit for the device; however, due to either faulty functioning of the microSD card or the full capacity of storage on the card being attained this may cause the device to not store an additional data. Therefore, this guide serves as an aid in the replacement of the microSD card for the Pantech Matrix C740.

### TOOLS:

- [Spudger \(1\)](#)

## Step 1 — Phone Orientation



- Position phone with base facing you.

## Step 2 — Lift MicroSD Card Cover



- Lift the MicroSD card cover up from where the spudger is pointed.

## Step 3 — Remove MicroSD Card



- Remove MicroSD card from exposed slot.

To reassemble your device, follow these instructions in reverse order.