




# Pantech Matrix Speaker Replacement

This guide provides step-by-step instructions on how to properly replace the speaker of the Pantech Matrix C740.

Written By: Zeel Patel

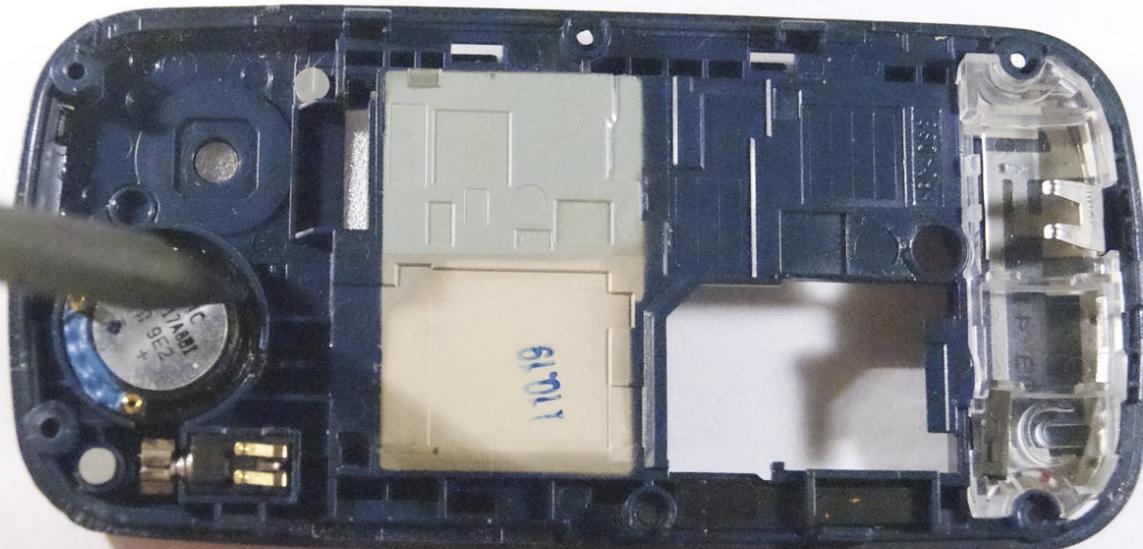

## INTRODUCTION

The speaker of Pantech Matrix C740 functions as the mechanism to allow for hearing whether from calls or videos watched using the Internet; however, faulty functioning of the speaker may cause the device to either not allow sound to be heard at all or not clearly. Therefore, this guide serves as an aid in the replacement of the speaker for the Pantech Matrix C740.

### TOOLS:

- [Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Phone Orientation



- Place phone with screen side facing toward you.

## Step 2 — Phone Orientation



- Flip phone over so screen side is now facing down.

## Step 3 — Remove Back Cover



- Gently slide the backside phone cover off exposing the battery underneath.

## Step 4 — Lift Battery



- Carefully lift the battery up from where the spudger is pointed.

## Step 5 — Remove Battery




- Remove the battery from its dock.

## Step 6 — Slide SIM Card Out



- Slide the SIM Card out of its dock.

## Step 7 — Remove Phone Screws

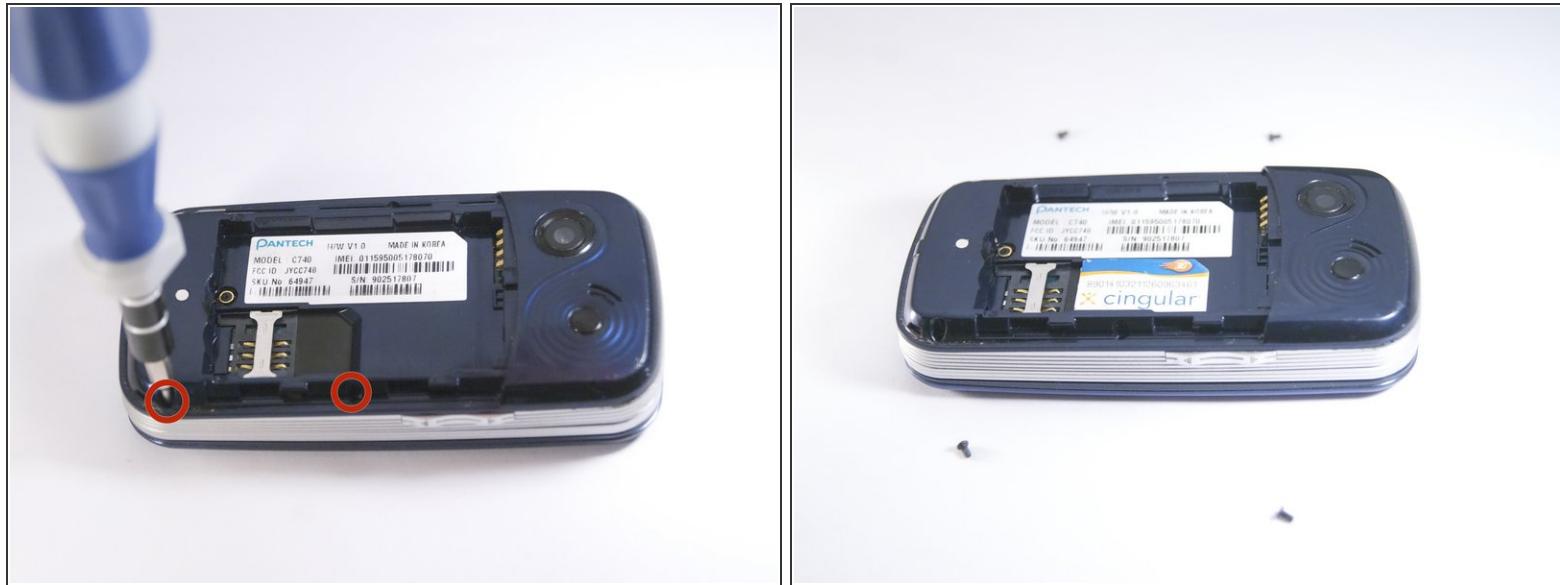

- Use a Phillips screwdriver to remove the four 2mm Phillips #000 screws from each corner of the device.

## Step 8 — Remove Phone Casing



- Rotate the phone so the base is facing you.
- Use spudger to separate phone casing and inside as shown.
- Remove the casing carefully and set aside the rest of the phone.

## Step 9 — Remove Phone Speaker



- Place the spudger in the notch on the side of the speaker as shown.
- Use the spudger to gently pry the speaker loose from its dock.
- Remove the speaker fully from the phone.

To reassemble your device, follow these instructions in reverse order.