




Pentax Optio WG-2 LCD Screen Replacement

Replace the LCD screen of your Pentax Optio WG-2.

Written By: Matthew Bessette

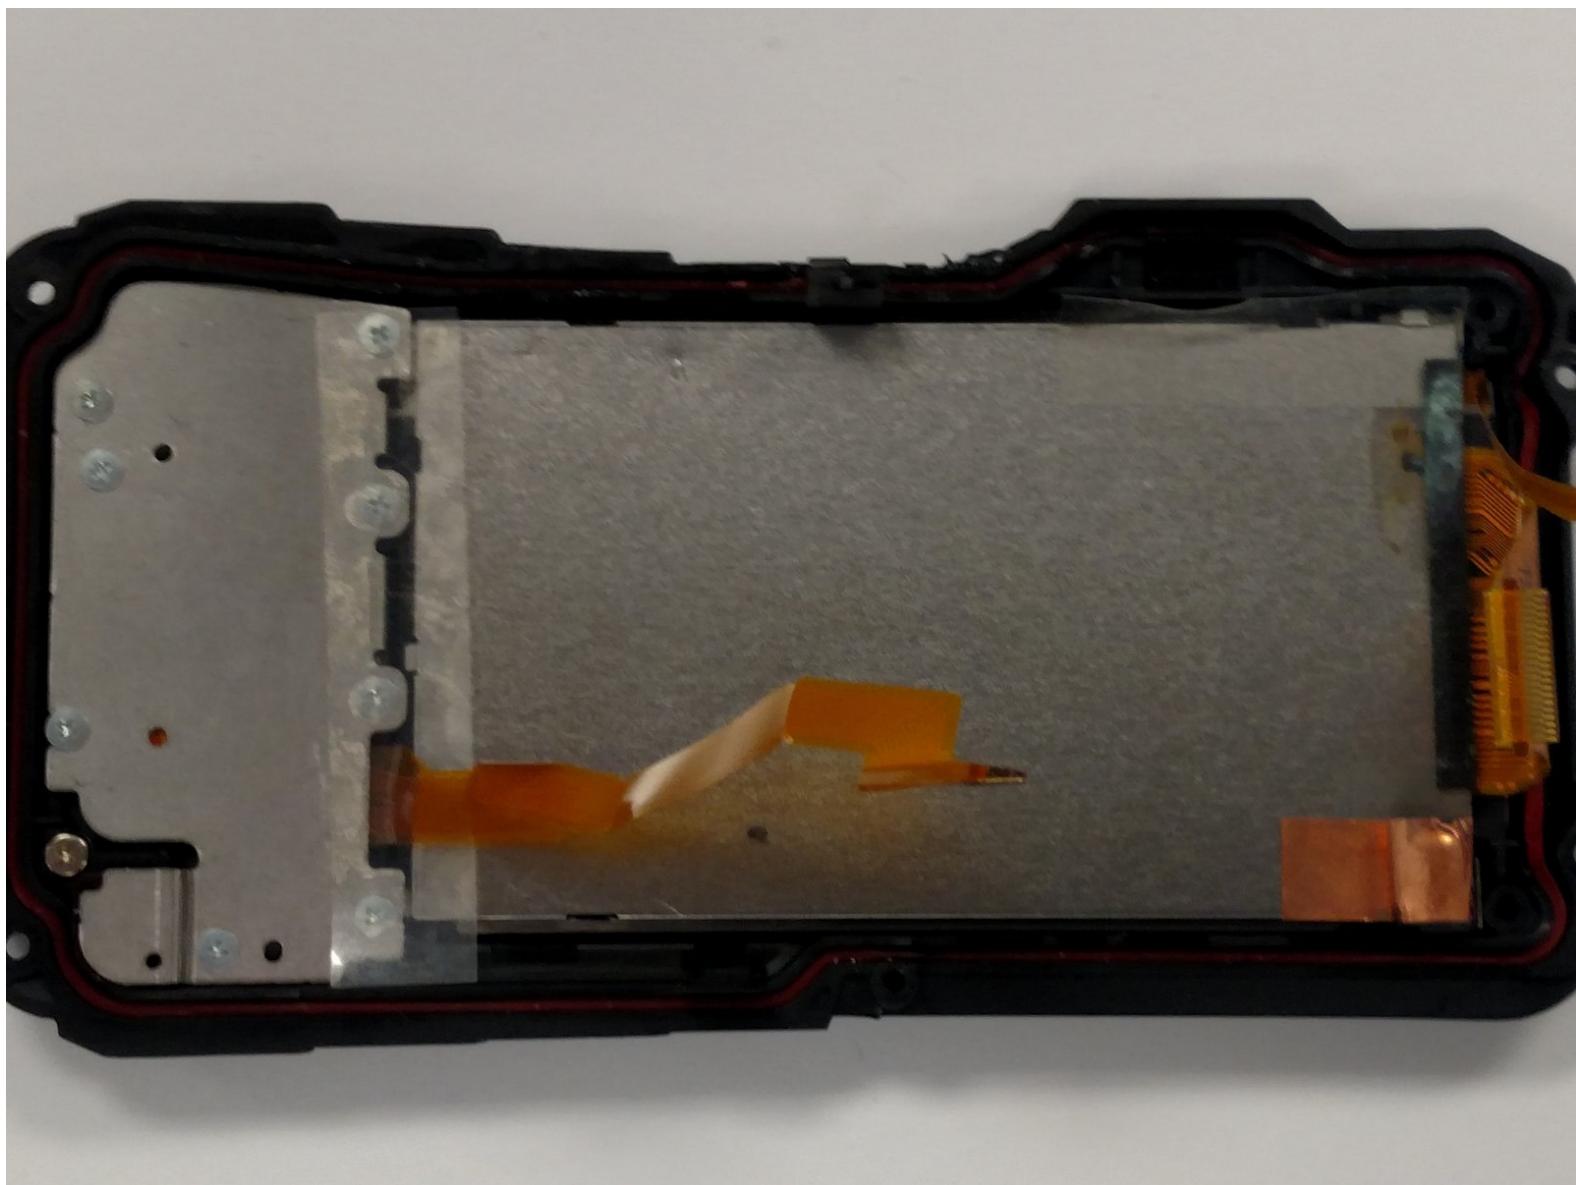

INTRODUCTION

Use this guide to replace the LCD viewing screen on the back of the Pentax Optio WG-2.

TOOLS:

- [Spudger \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [JIS Driver Set \(1\)](#)
- [Tweezers \(1\)](#)

Step 1 — Back Case



- Remove all four 1 mm JIS #00 screws from the back of the camera.

Step 2



- Use your finger to peel the grip off the top of the camera.
- For best results, start from the right side of the camera, opposite the buttons.


 Once the grip is removed, you will most likely lose the water-tight seal.

Step 3



- Use the tweezers to remove the two buttons from the top of the camera.
- *(i)* The buttons may fall out while removing the grip.

Step 4

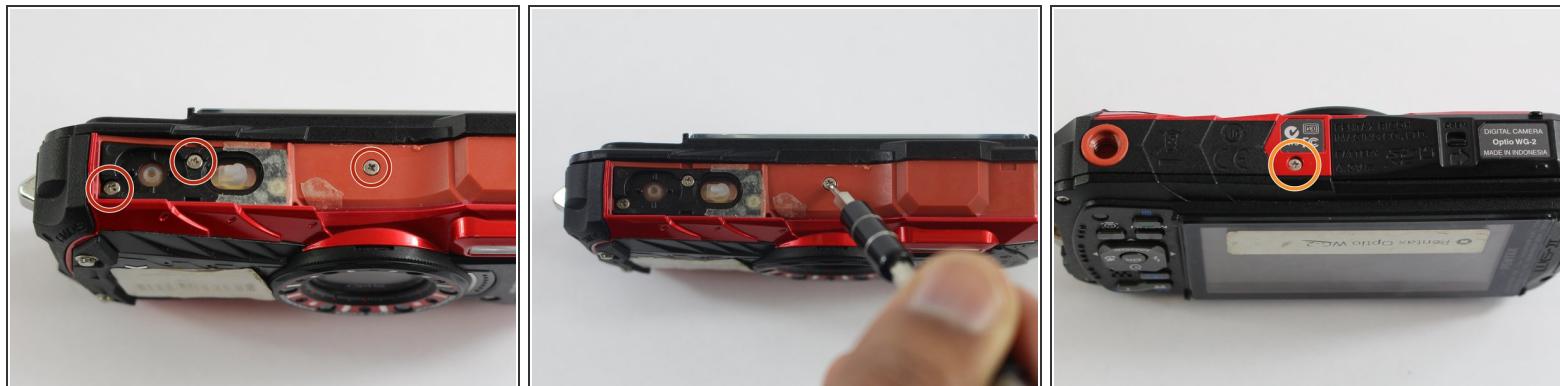

- Remove the three 1 mm JIS #000 screws from the top.
- Remove the 1 mm JIS #000 screw from the bottom.


Step 5



- Carefully separate the back and the front of the camera.



⚠ There are three ribbon cables connecting the two boards. Be careful not to tear them.

Step 6

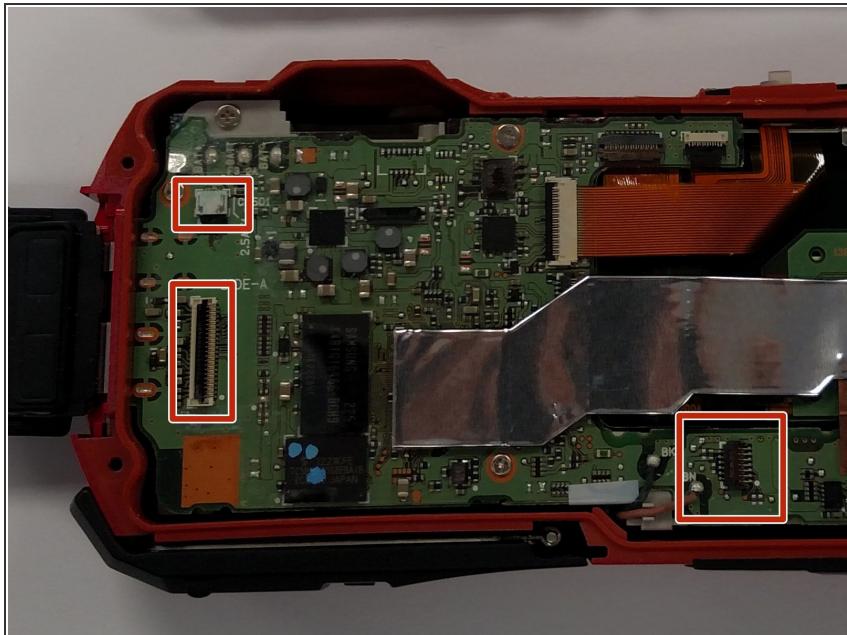


- Use the tip of a spudger to flip up the small retaining flaps on the ribbon cable ZIF connectors.
- Carefully pull the ribbon cables out of their sockets.

Step 7 — LCD Screen

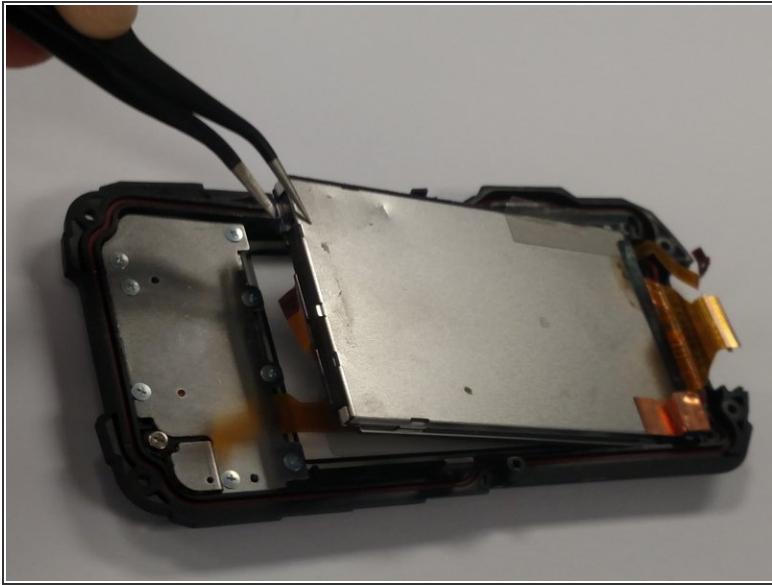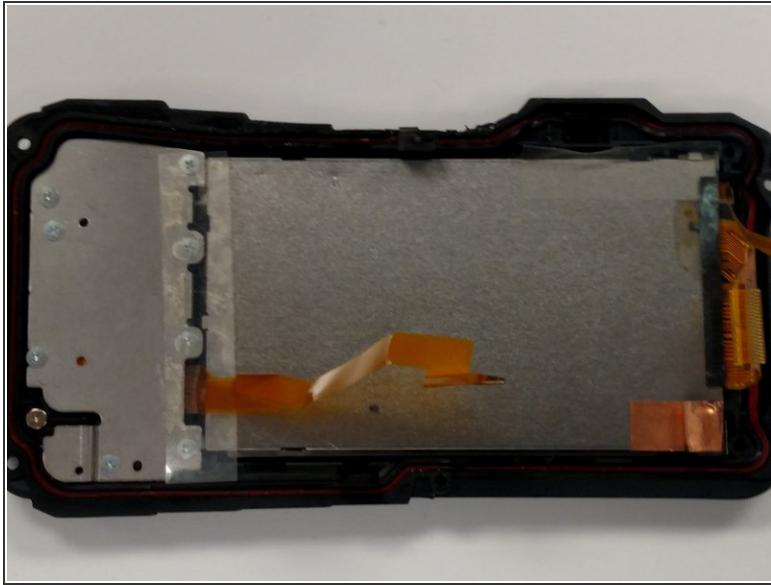

- Carefully remove the clear tape covering the screws and the ribbon cable.
- ⚠ Be careful not to tear the ribbon cable when removing the tape.
- We want to remove the larger silver panel (right). The best way to do this is to slightly bend the cover backwards and use the tweezers to grab a corner and slowly lift the screen up and out.

Step 8

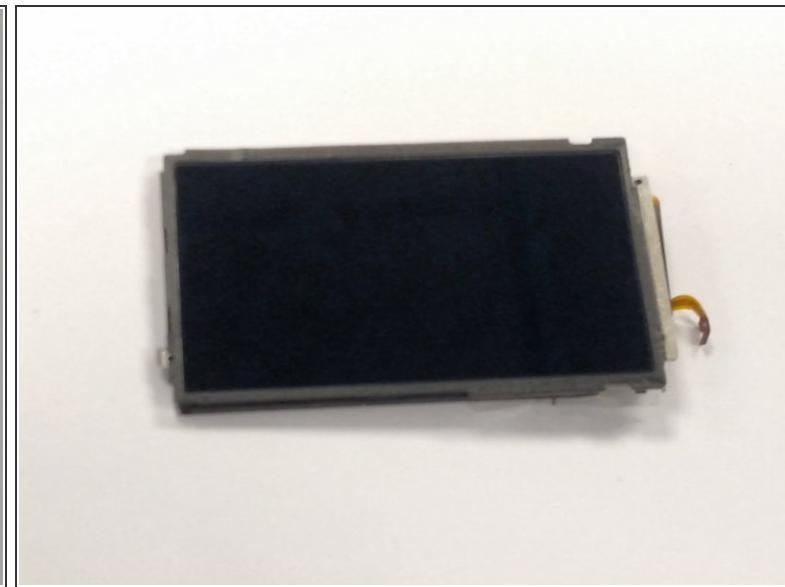

- Once the screen is removed you should have two pieces as seen in the picture.
- The screen is the silver rectangle in the top of the picture or the component seen in picture two.

To reassemble your device, follow these instructions in reverse order.