




# Pentax Optio WG-2 Memory Card Replacement

If your screen is not displaying anything, a faulty memory card may be the issue. Use this guide to replace the memory card of your Pentax Optio WG-2.

Written By: Chris Gudiel

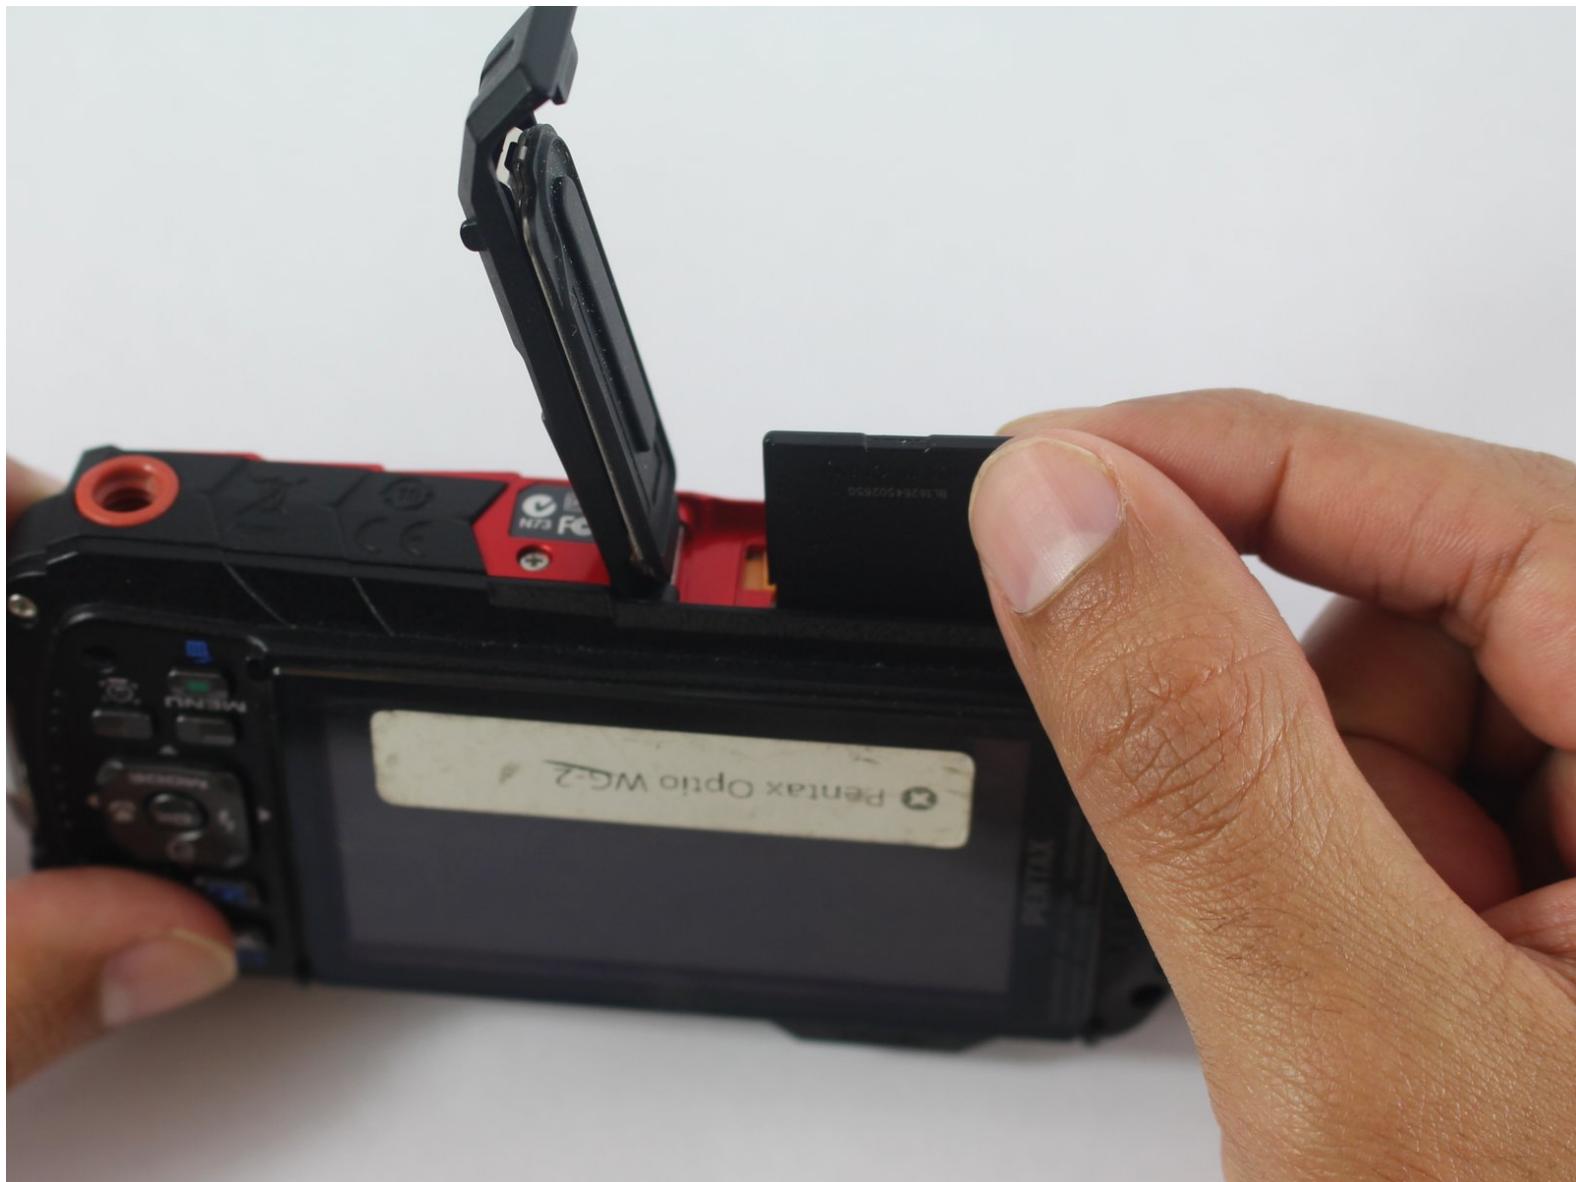

## INTRODUCTION

The Pentax Optio WG-2 uses SD memory cards. If your screen is not displaying anything, a faulty memory card may be the issue. Use this guide to replace the memory card of your Pentax Optio WG-2.

## Step 1 — Memory Card



! Make sure the camera is turned off before removing or inserting the SD Memory Card.

- Press the lock lever (small tab) in an upward direction towards the word open.
- Slide the cover away from the camera.
- Lift the cover up to gain access to the memory card.

## Step 2



- To remove the SD Memory Card, push it in once and then pull it out.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-22 02:24:56 AM (MST).

