



Pentax Optio WG-2 Shutter and Power Button Replacement

Replace the power and shutter buttons of your Pentax Optio WG-2.

Written By: Matthew Bessette



INTRODUCTION

Use this guide to replace the power and shutter buttons of the Pentax Optio WG-2.

TOOLS:

- **Tweezers** (1)
- **Spudger** (1)

Step 1 — Shutter and Power Button



- Use your finger to peel the grip off the top of the camera.
- For best results, start from the right side of the camera, opposite from the buttons.

 Once the grip is removed, you will most likely lose the water-tight seal.

Step 2



- Use the tweezers to remove the two buttons from the top of the camera.

 The buttons may fall out while removing the grip.

To reassemble your device, follow these instructions in reverse order.