



Pentax Optio WG-3 GPS Shutter and Power Button Replacement

These following instructions will walk you through how to replace the power and shutter button on your device.

Written By: Allison Merdian



This document was generated on 2019-09-18 10:07:15 PM (MST).

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)


Step 1 — Shutter and Power Button



- Peel the lining back on the top of the camera.

(i) The lining is glued down to the device, you will have to peel the lining back using tweezers. After you are finished with your work you will have to use glue or adhesive to re-stick the lining back to the device.

Step 2

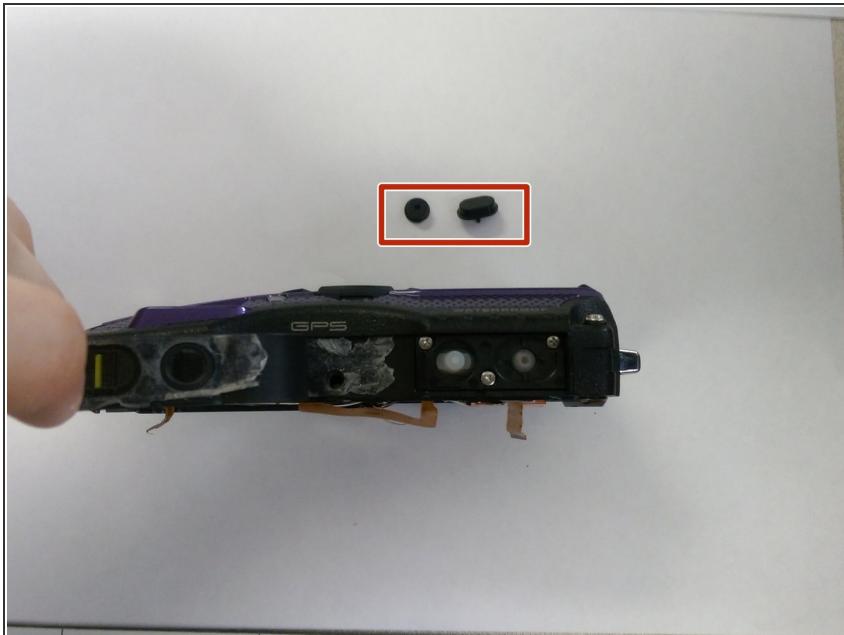


- Using tweezers pull straight up to remove the 2 rubber button toppers

Step 3



- Remove the 3, 2 mm screws under the rubber buttons.

Step 4

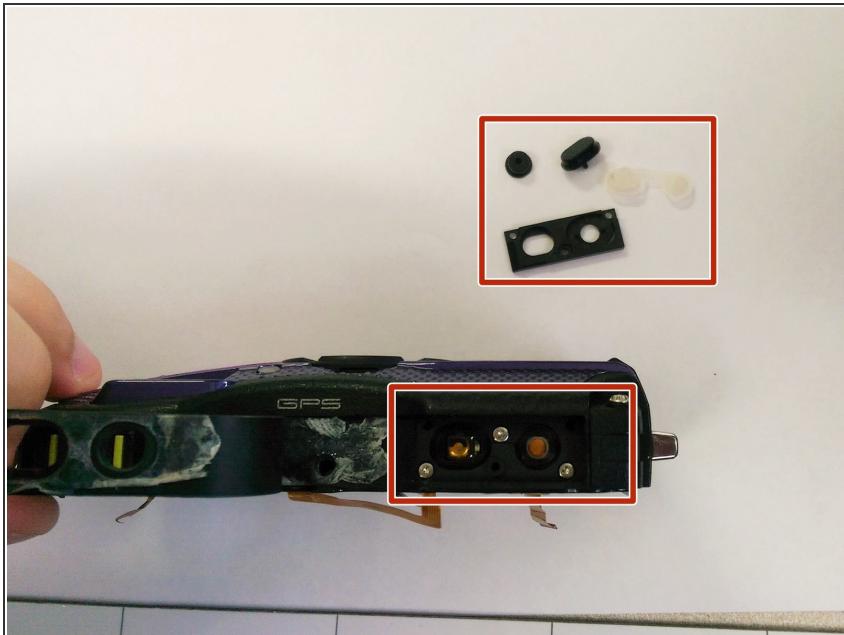

- Replace the shutter/power button or button component.

To reassemble your device, follow these instructions in reverse order.