



# Pentax Optio WP Battery and SD Card Replacement

This guide aids in the removal and replacement of the Pentax Optio WP battery and SD card.

Written By: Olivia Nixon



## INTRODUCTION


The battery may need to be removed in order to charge it, replace it, or to make any further repairs to the camera. The SD card may need to be removed to retrieve information or to make further repairs to the camera. Follow this guide to do either.

## Step 1 — Battery and SD Card



- ⓘ The camera used to make this manual does not contain a battery or SD card
- Orient the camera so you are looking at the bottom and the battery compartment is on the right hand side.

## Step 2

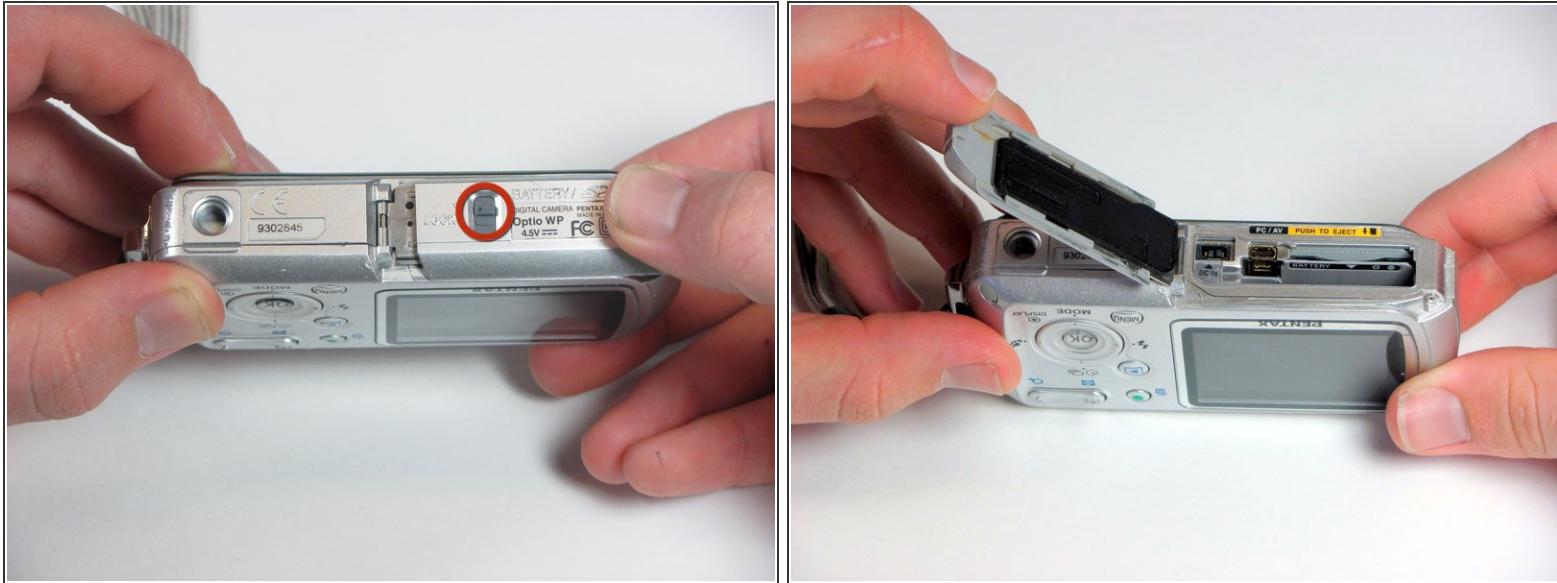

- Unlock the battery compartment by sliding the lock switch to the unlock position (away from the arrow).
- Firmly push the battery cover to the right and swing open.
- The battery will be located in the larger bottom slot. Slide the plastic orange tab to remove the battery.
- The SD card will be located in the smaller, top slot. Push the SD card directly in to hear a small clicking sound. Then pull out the SD card.

To reassemble your device, follow these instructions in reverse order.