



# Pentax PZ-10 Button Replacement

This is a guide to replace the top buttons of the camera.

Written By: Jonathan Diaz



## INTRODUCTION

Button replacement may be necessary if the shutter button sticks or no longer activates shutter due to wear.

### TOOLS:


- [Tweezers \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

## Step 1 — Top Cover



ⓘ The top cover is one piece encasing the top of the device except the shutter release button and flash.

## Step 2 — Removing Upper Right Housing Screw

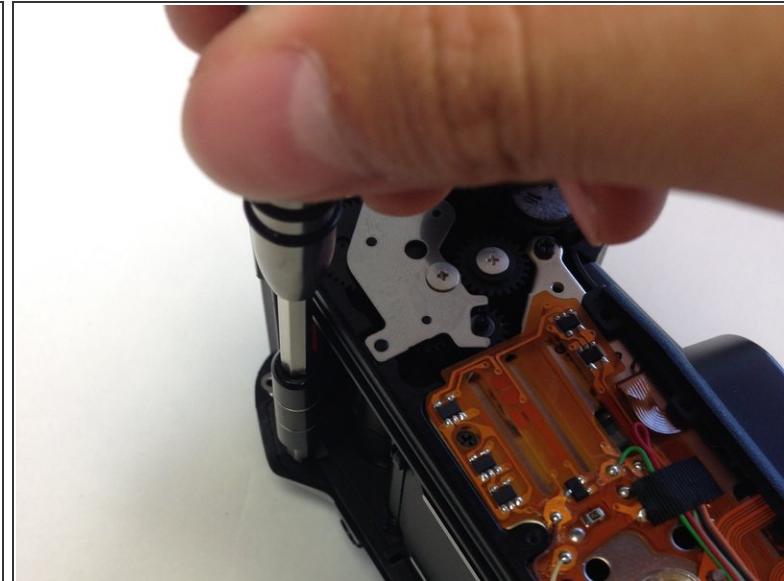

ⓘ With the camera lens face down, locate the screw under the overhanging piece of the top casing on the right side of the back panel.

- Using the J0 screwdriver, remove the 6.3 mm screw.

## Step 3 — Removing Screw in Battery Compartment



- ① Locate the next screw by holding the camera upside down with the battery compartment empty and face up.
- Remove the 6.3 mm screw using a J0 screwdriver.

## Step 4 — Removing Screw Under Flash Bulb



*(i)* The next screw is found in the overhanging piece just above the lens.

- With the top of the camera facing down, remove the 3.4 mm screw with a J0 screwdriver.

## Step 5 — Pulling Off the Top Cover



- Gently pull off the top cover with your hands by pulling on the tab on the left of the camera.

## Step 6 — Locate Rubber Tabs



- Gently remove the beige rubber tabs from under the casing by pulling each down using tweezers.

## Step 7



- Remove the 3 buttons by pushing them from under the casing out through the top.
- ➡ Each button is slotted differently, so pay attention to the orientation of each piece.

## Step 8 — Buttons



- The buttons are now free to be replaced or cleaned.

To reassemble your device, follow these instructions in reverse order.