



# Petzl E03 050 Headlamp Light Bulb Replacement Guide

This guide will explain the steps necessary to replace the 3V incandescent light bulb within a Petzl E03 050 headlamp.

Written By: Carla



## INTRODUCTION

Is your light bulb burned out or producing dim light? You might need to replace the light bulb. Replacing the light bulb is necessary for the headlamp's primary function.

## Step 1 — Check For Spare Bulb



- Check for a spare bulb in the spare bulb compartment located on the back of the battery housing (found behind the mount assembly). If no spare bulb is found in the spare bulb compartment you will need to purchase a replacement 3V incandescent bulb from a reputable retailer

## Step 2 — Loosen the Lens Piece



- Turn the lens piece counterclockwise (left) until it is fully extended.

## Step 3 — Remove the Lens Piece



- Remove the lens piece by firmly pulling it away from the battery housing.

## Step 4 — Remove the Lightbulb



- Turn the bulb counterclockwise (left) until it becomes free. Safely discard the old bulb.

## Step 5 — Install the New Lightbulb



- Install the new bulb by inserting it into the socket.

## Step 6 — Rotate Replacement Light Bulb



- Rotate the bulb clockwise (right) until it is firmly fixed in place.

## Step 7 — Re-attach the Lens Piece



- Press the lens piece onto the front of the battery housing.

## Step 8 — Tighten the Lens Piece



- Turn the lens piece clockwise (right) to the "On" position. If the light fails to illuminate after turning the lens

piece to the “On” position you may have to [replace the batteries](#).