




# Philips DC320 37 Headphone or Power Jack Replacement

This guide outlines how to remove and install the headphone or power jack for the Philips DC320/37.

Written By: Graham Rolph

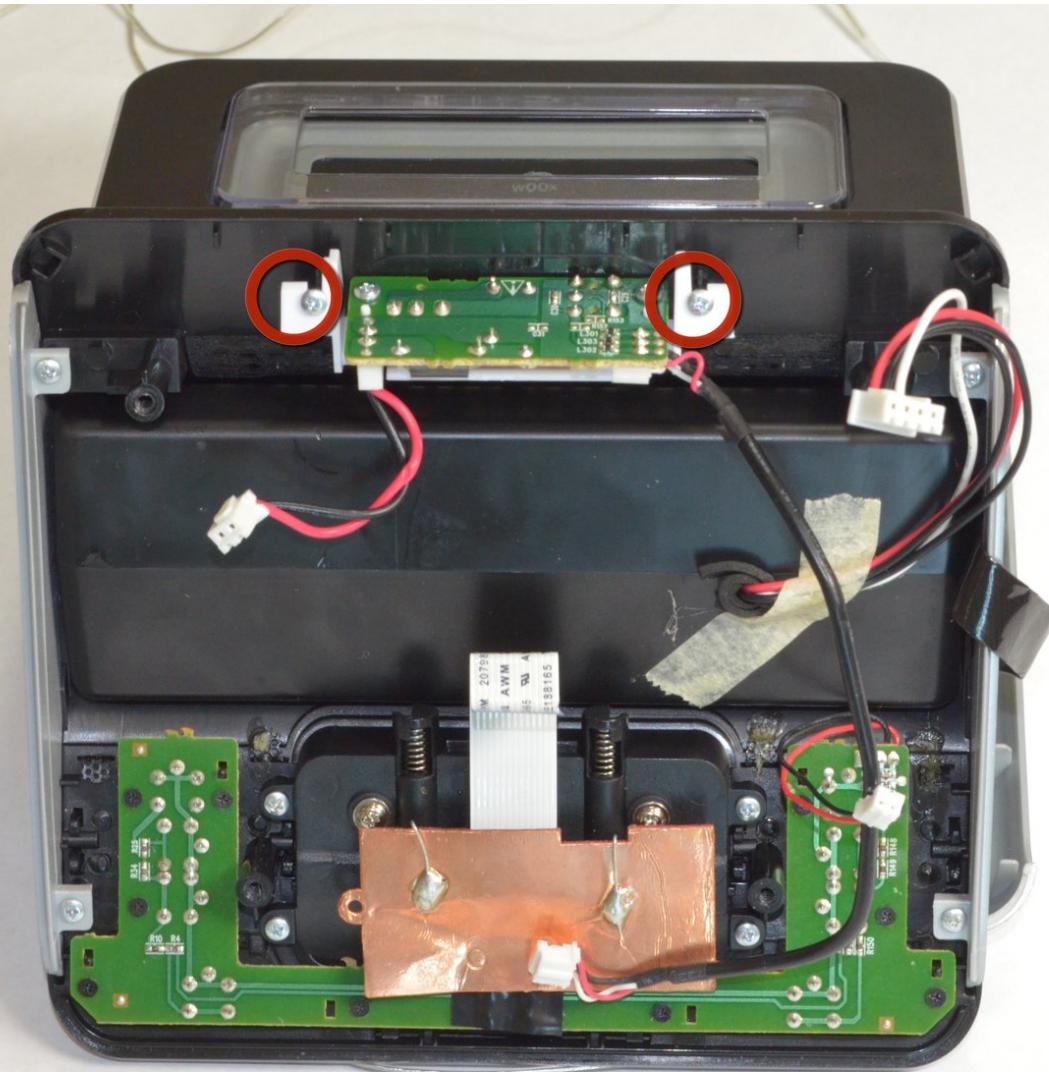

## INTRODUCTION

Follow the procedure outlined in this guide to remove and install a broken audio or power jack.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #2 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Bottom Panel



- Pry off the four white feet with the pointed end of the spudger

## Step 2



- Unscrew the four 15.5 mm Phillips #2 screws that hold the bottom panel to the dock.


## Step 3



- Use the flat end of the spudger to pry the lid off from the two connectors holding it to the body of the dock.

 The connectors on the panel are fragile and may break.

## Step 4

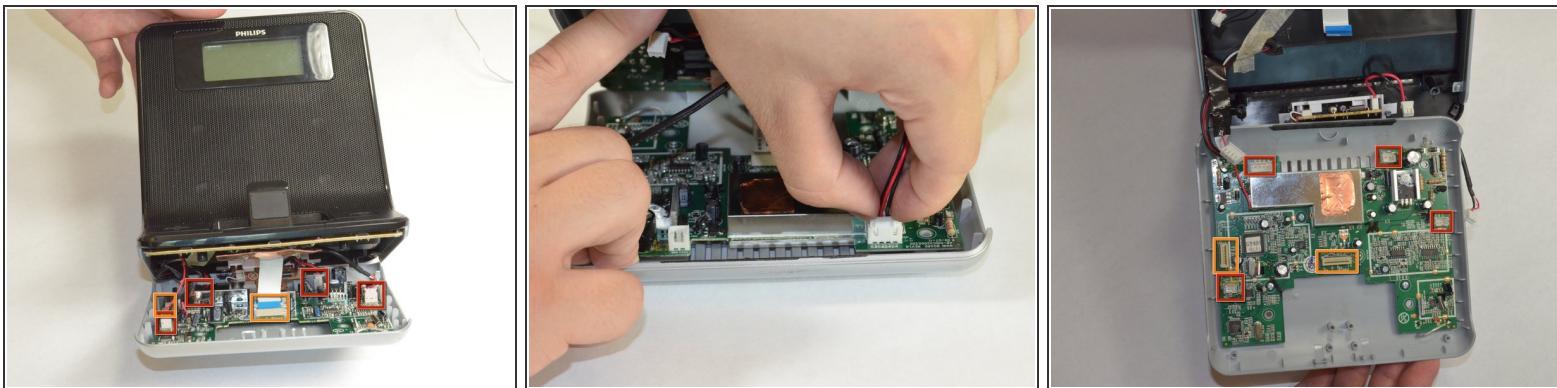

- Carefully pull up and out the four electrical connectors and the two ribbon connectors connecting the bottom panel and the dock.
  - Electrical Connectors
  - Ribbon Connectors

 The cables do not have a lot of slack in them. Be careful not to break the connectors.


 One wire is soldered onto the bottom panel. Be careful not to break this bond.

## Step 5 — Headphone or Power Jack




- Unscrew the two 5 mm Phillips #00 screws attaching white support bracket to the body of the device.

## Step 6

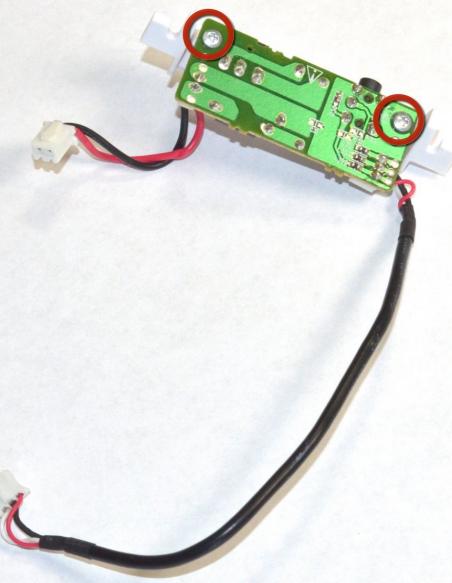

- Unscrew the two 5 mm Phillips #00 screws from green Headphone/Power electronics board to detach from white support bracket.

## Step 7

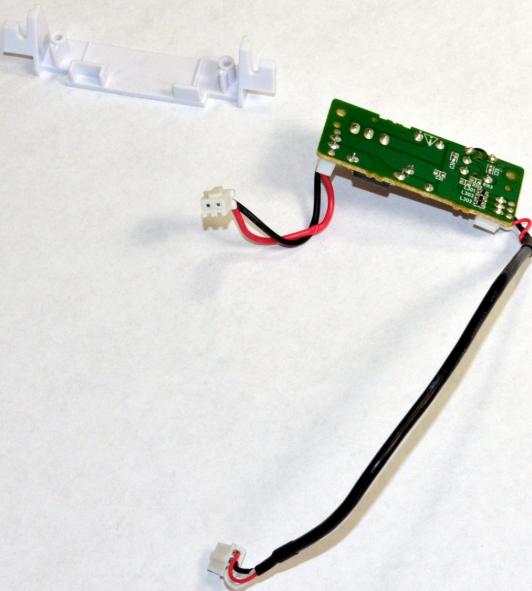

- Separate the white support bracket from the headphone/power electronics board.

To reassemble your device, follow these instructions in reverse order.