



# Philips Norelco BeardTrimmer 3100 Blade Replacement

Removing the blades on the Philips Norelco 3100 BeardTrimmer.

Written By: Darren Chu



## INTRODUCTION

If the blades of your beard trimmer are not working properly, there could be too much hair/dirt between the blades or the blade may have become worn out over time. The blade may need replacement. By following the steps in this guide you will have a new blade installed in no time.

### TOOLS:

- Tweezers (1)

## Step 1 — Blade




- Remove the comb from the head of the trimmer.

## Step 2




- Place thumb underneath the blade; push upward to pop the blade off.

## Step 3

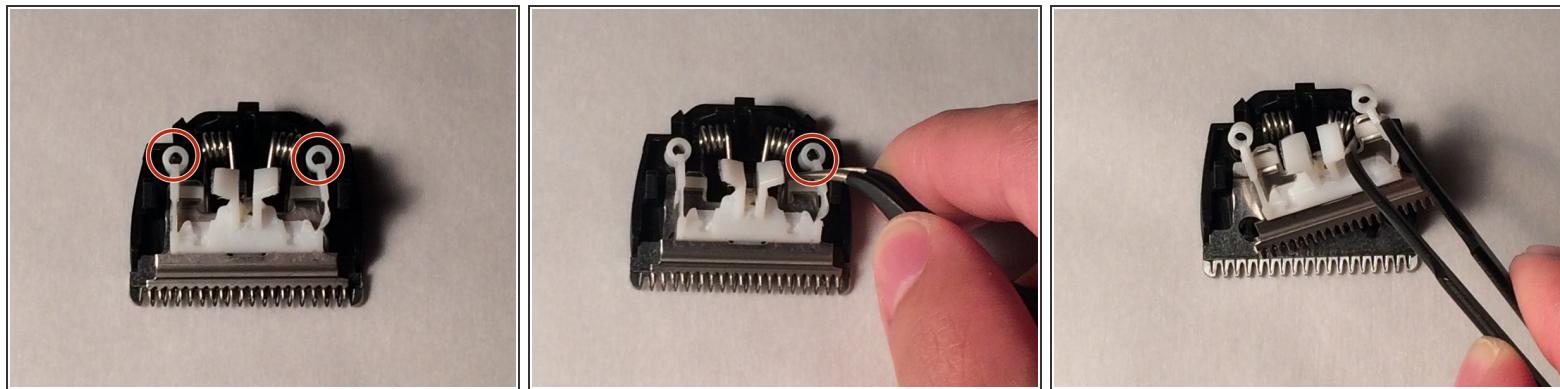


- Grab the plastic arms with the tweezers and pull them apart from the base.

## Step 4

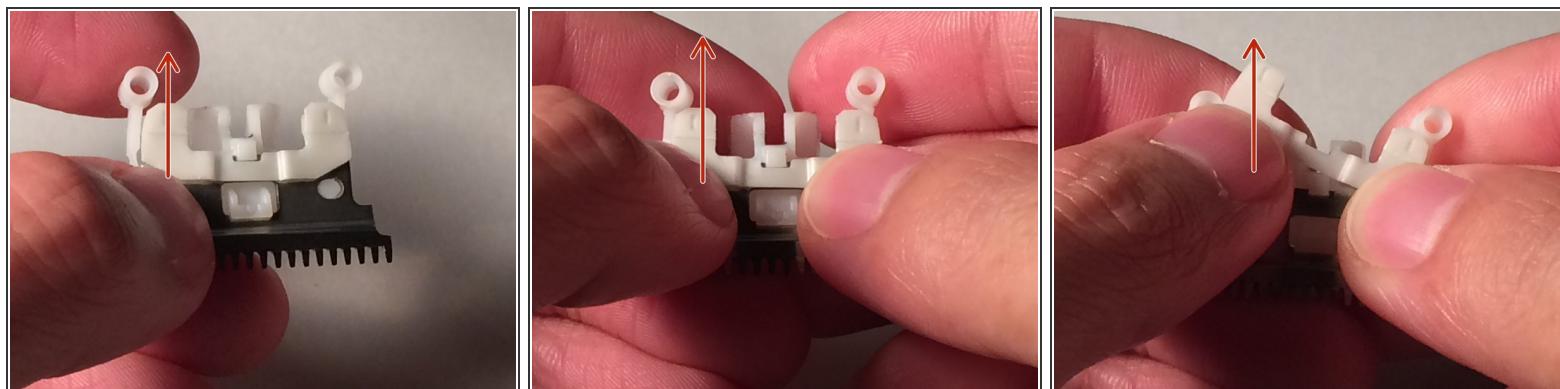


- Remove the plastic casing from the underside of the blade.

## Step 5

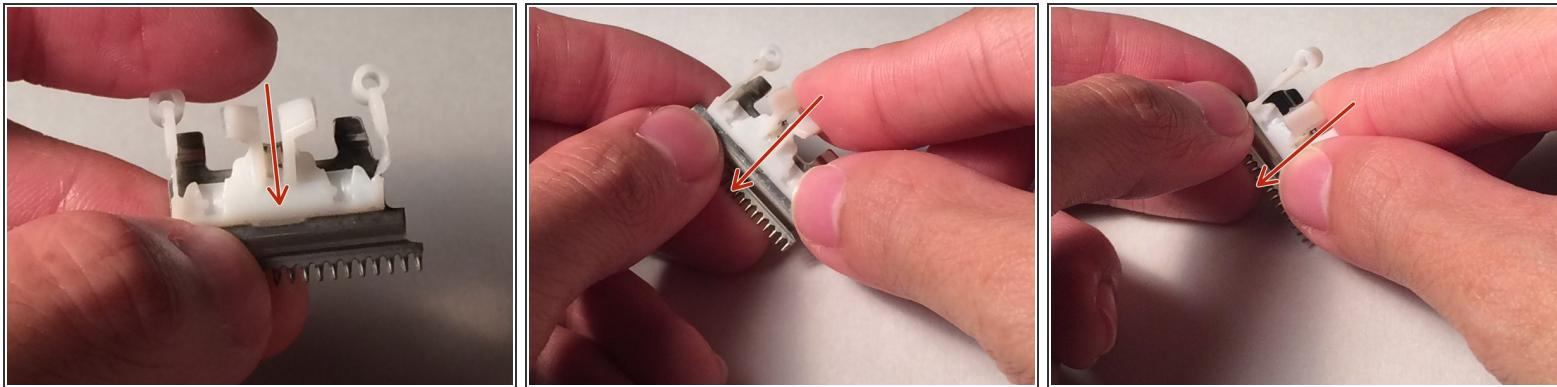


- Remove the last plastic casing from the front side of the blade.

## Step 6

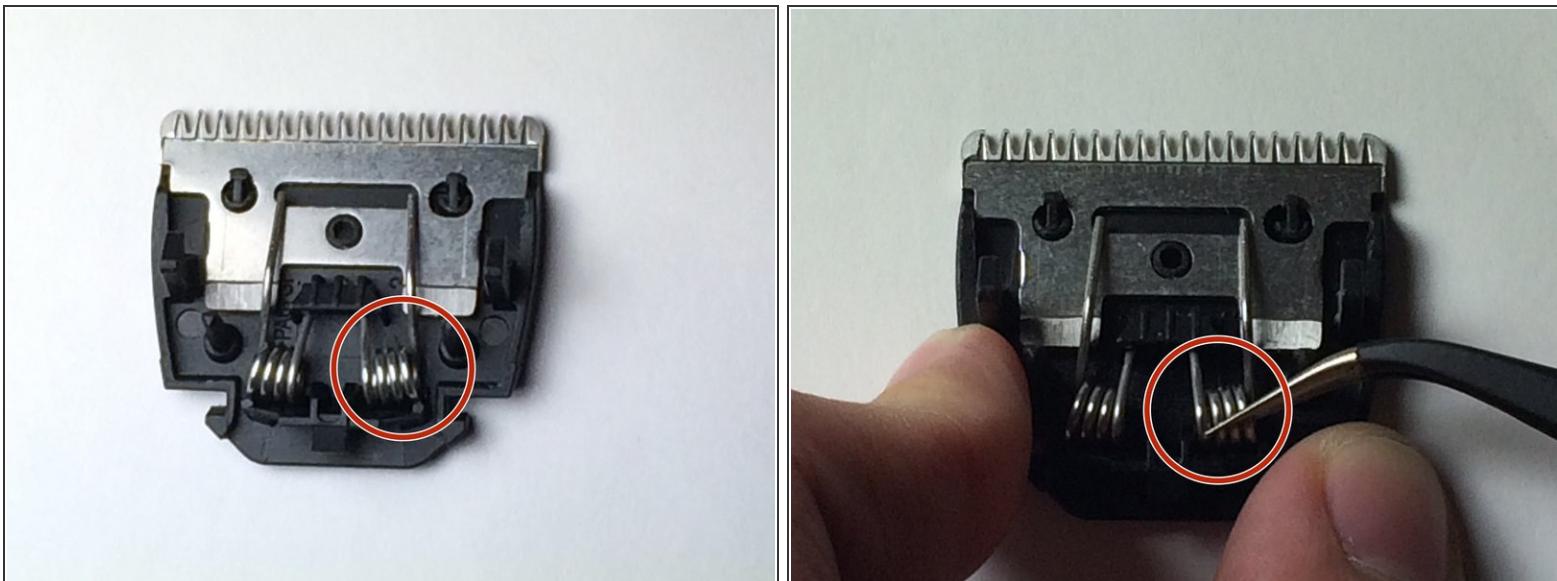

- Pull the spring off from the base with the tweezers.

## Step 7

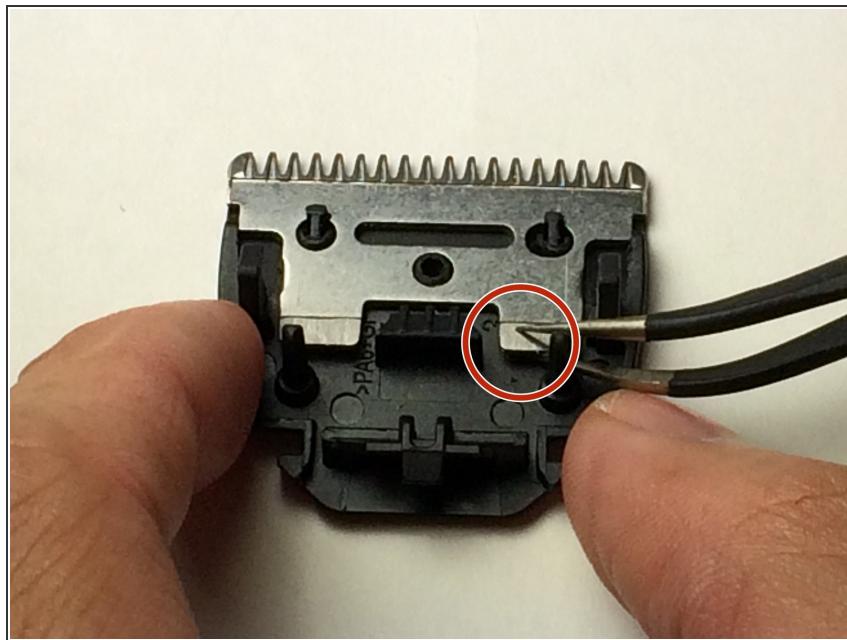

- Pull the blade apart from the base with the tweezers.

To reassemble your device, follow these instructions in reverse order.