



# Philips Norelco BeardTrimmer 3100 Zoom Lock Precision Notch Replacement

Replacing the zoom lock precision notch of the zoom lock ring

Written By: ilan



## INTRODUCTION

If the beard comb does not move, there may be a problem with the inside of the zoom lock ring, and the zoom lock precision notch may need to be replaced. Follow this guide to replace the zoom lock precision notch.

### TOOLS:

- Metal Spudger (1)

## Step 1 — Front and Back Panels




- Remove the comb from the top of the trimmer.

## Step 2




- Place your thumb underneath the blade and push upward to remove it.

## Step 3

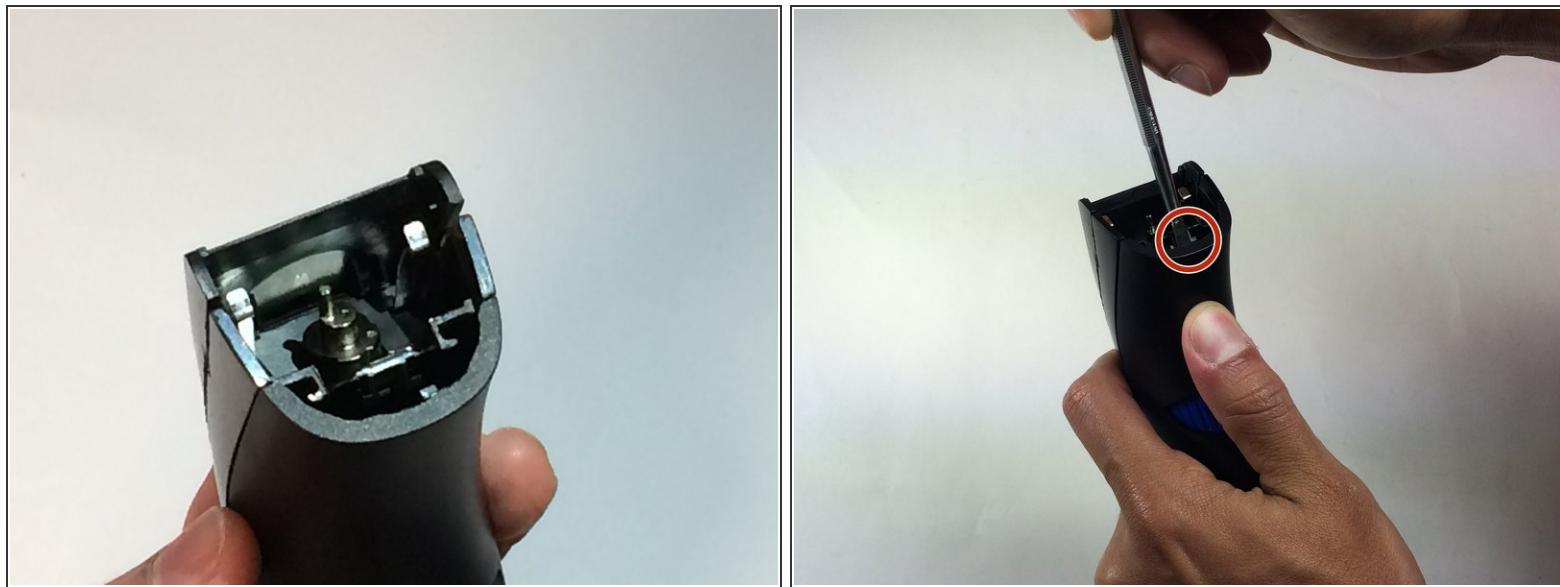

- Hold trimmer towards you as shown in the diagram.
- Insert your prying tool/metal spudger into the marked area.

## Step 4

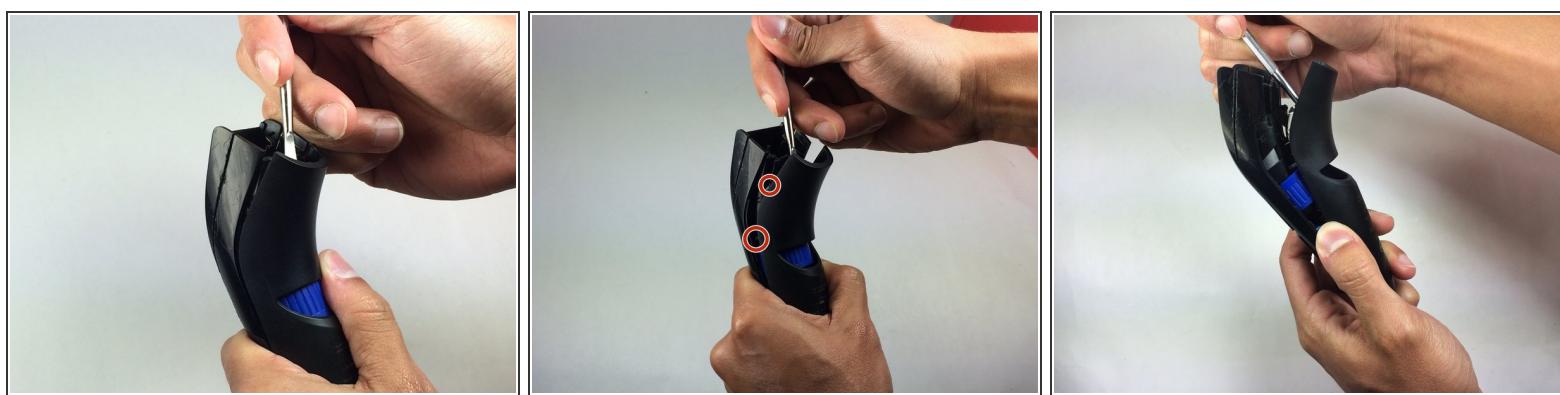

- Apply gentle pressure and begin prying open the back panel.
- Separate the panel one notch at a time. Listen carefully as you're prying the panel apart and notice each individual notch release.

## Step 5



- Pull the trimmer apart using your hands once the panel is at least halfway apart.
- Pull the wires attached to the battery off of the power connectors before completely removing the back panel.

## Step 6




- Hold the trimmer towards you.
- Place the metal spudger tool in the marked area.

## Step 7




- Apply gentle pressure and begin prying the front panel.
- Separate the front panel one notch at a time.

## Step 8

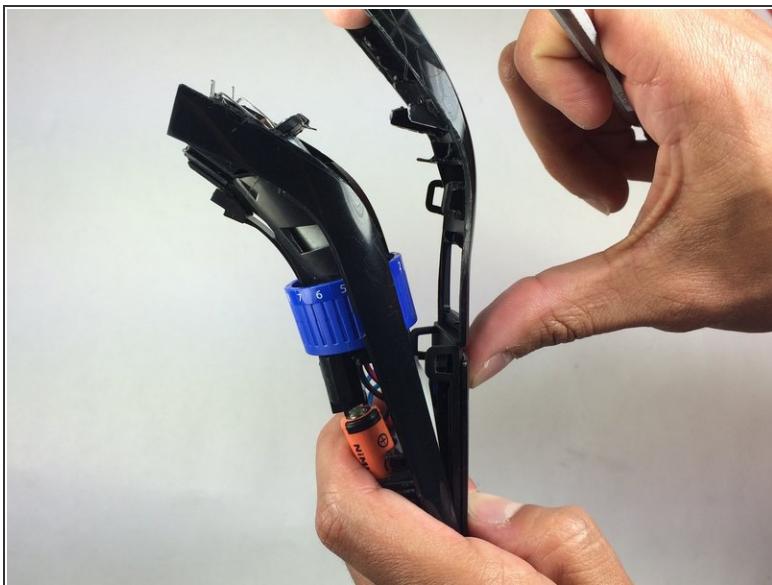


- Pull the trimmer apart using your hands once the panel is at least halfway apart.

## Step 9 — Zoom Lock Precision Notch

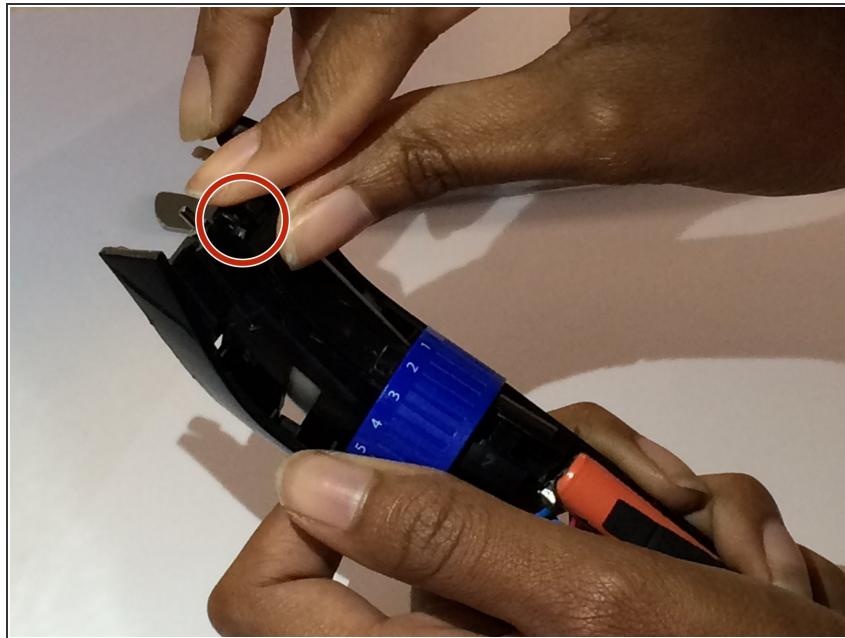


- Locate the zoom lock precision notch in the back panel of the Beardtrimmer

## Step 10

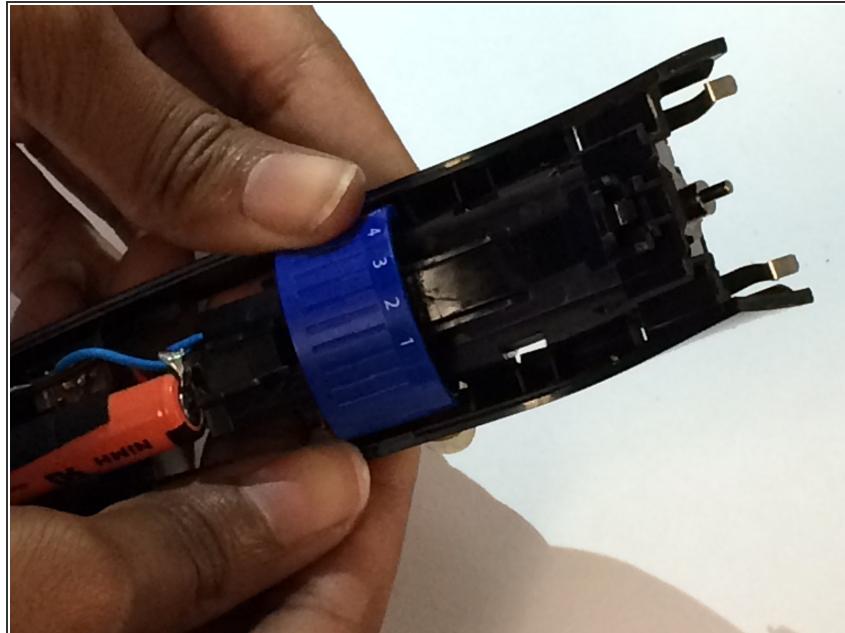

- Set the zoom lock wheel to the lowest setting

## Step 11

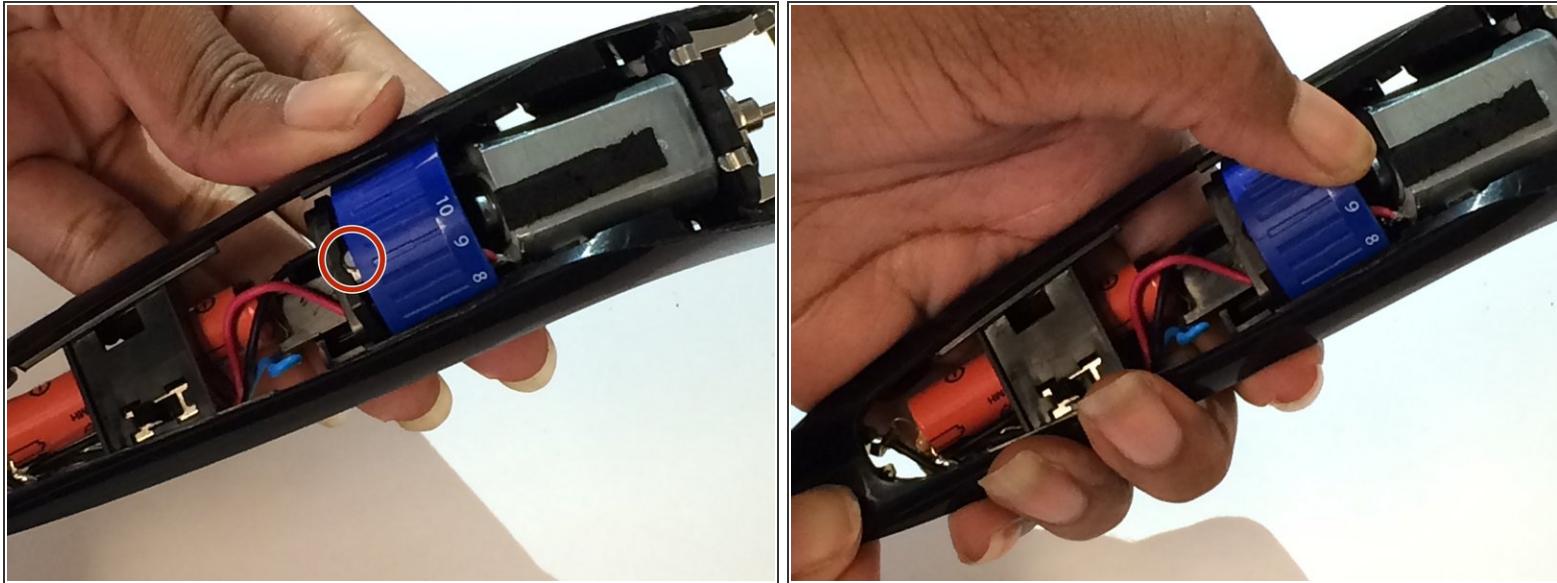

- Rotate the trimmer so that the motor is facing you.
- Now gently push down the zoom lock wheel until the white button is not showing.

## Step 12



- Rotate the beardtrimmer again so that the battery is facing you.
- With the help of the metal spudger, apply gentle pressure on top of the wheel to remove the zoom lock precision notch .

To reassemble your device, follow these instructions in reverse order.