




Philips Satinelle Gear Replacement

This guide will show how to replace the Gear that turns the tweezers of the Philips Satinelle.

Written By: Nathan Christian

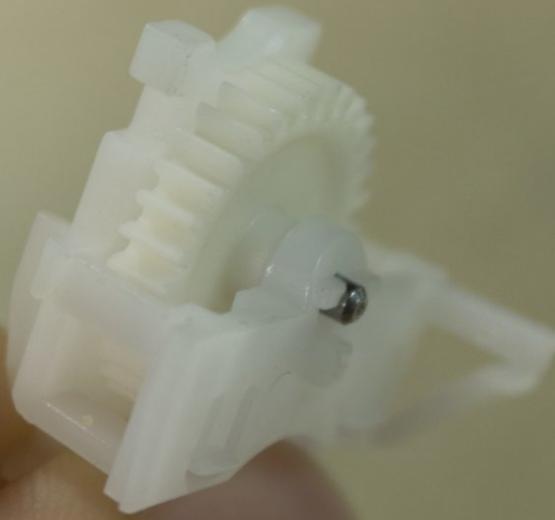

INTRODUCTION

Use this guide if you need to replace the gear that turns the tweezers of your Philips Satinelle.

TOOLS:


- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Large Needle Nose Pliers \(1\)](#)

Step 1 — Philips Satinelle Disassembly



- Unplug the device and remove the purple guard.
- Remove the head by pressing the right side of the head (with the device facing away from you).
- You will hear a 'click' and the head will become dislodged from the body of the device.

Step 2

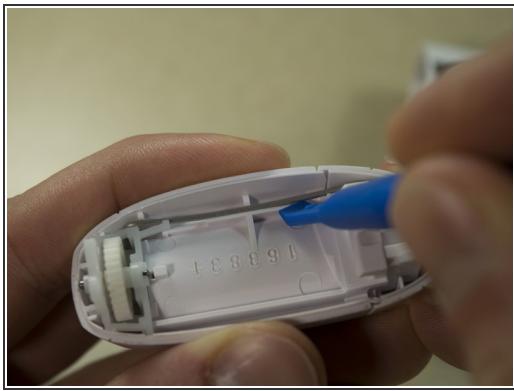

- While wearing safety glasses, use a plastic opening tool to pry from right to left to pry out the tensor clip.
- Be careful not to lose the clip. It will likely fly off when it releases.

Step 3




- The left side will swing down.
- Remove the Tweezers.

Step 4




- Remove the plastic component that swings down.
- Use fingernails to lift clips from stubs.

Step 5

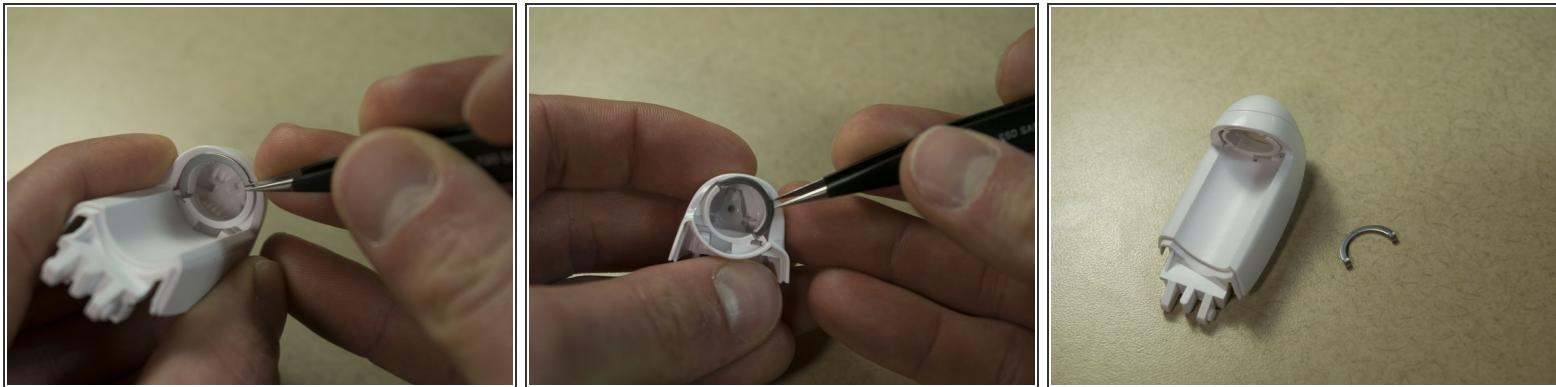


- Using Needle Nose pliers remove metal roller track on both sides of the Tweezers Head.

Step 6

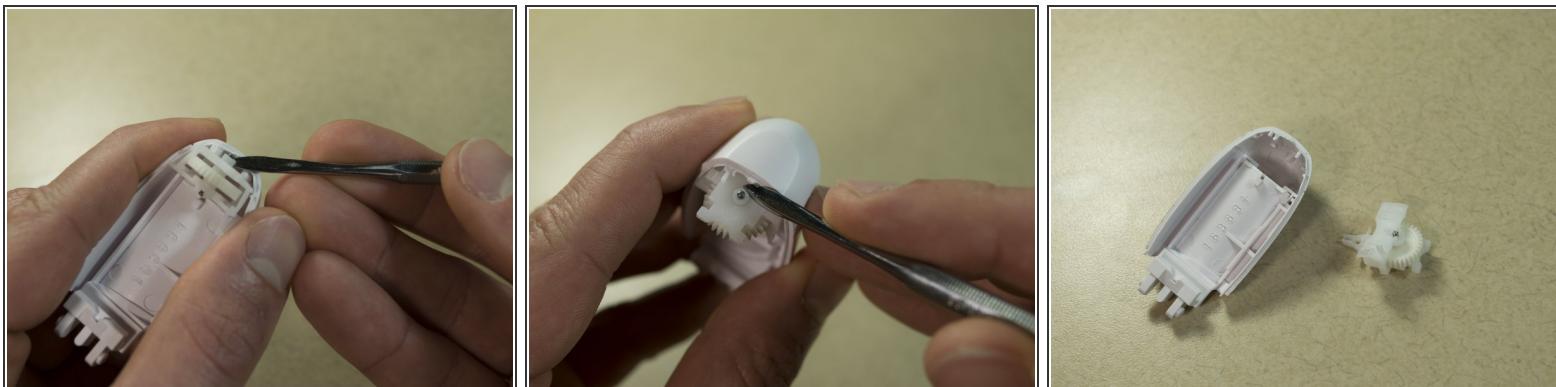


- Use a spudger to pry the gear housing unit from the base.

Step 7

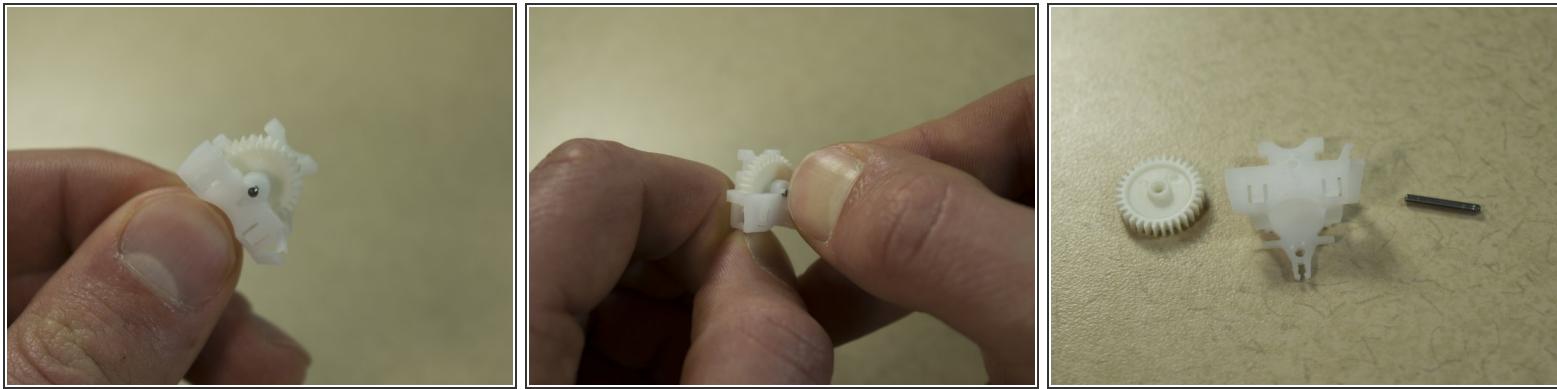

- Use your thumbnail and a pair of needle nose pliers to push out the gear housing retention pin.

Step 8 — Gear Replacement

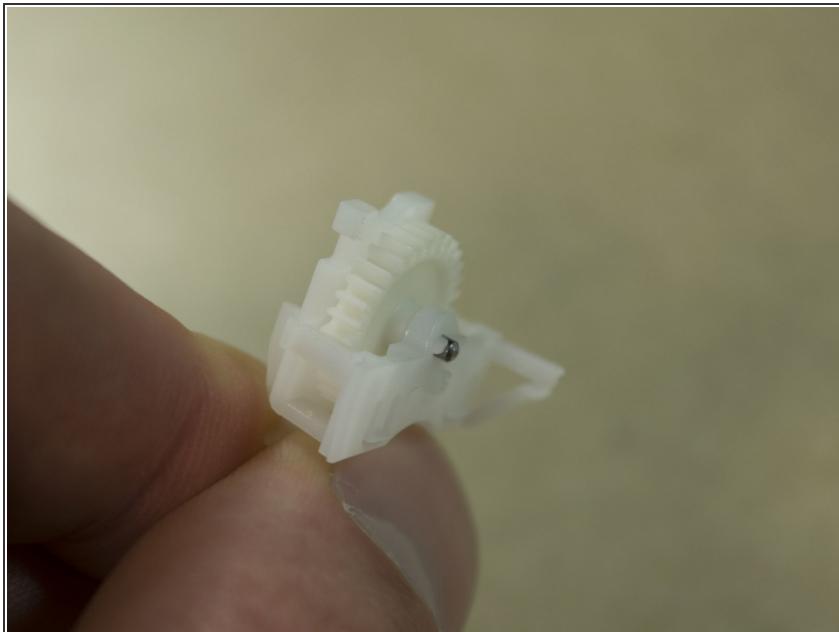

- Replace the gear and re-insert the pin.
- Ensure that pin is protruding slightly, it should not be flush.

To reassemble your device, follow these instructions in reverse order.