


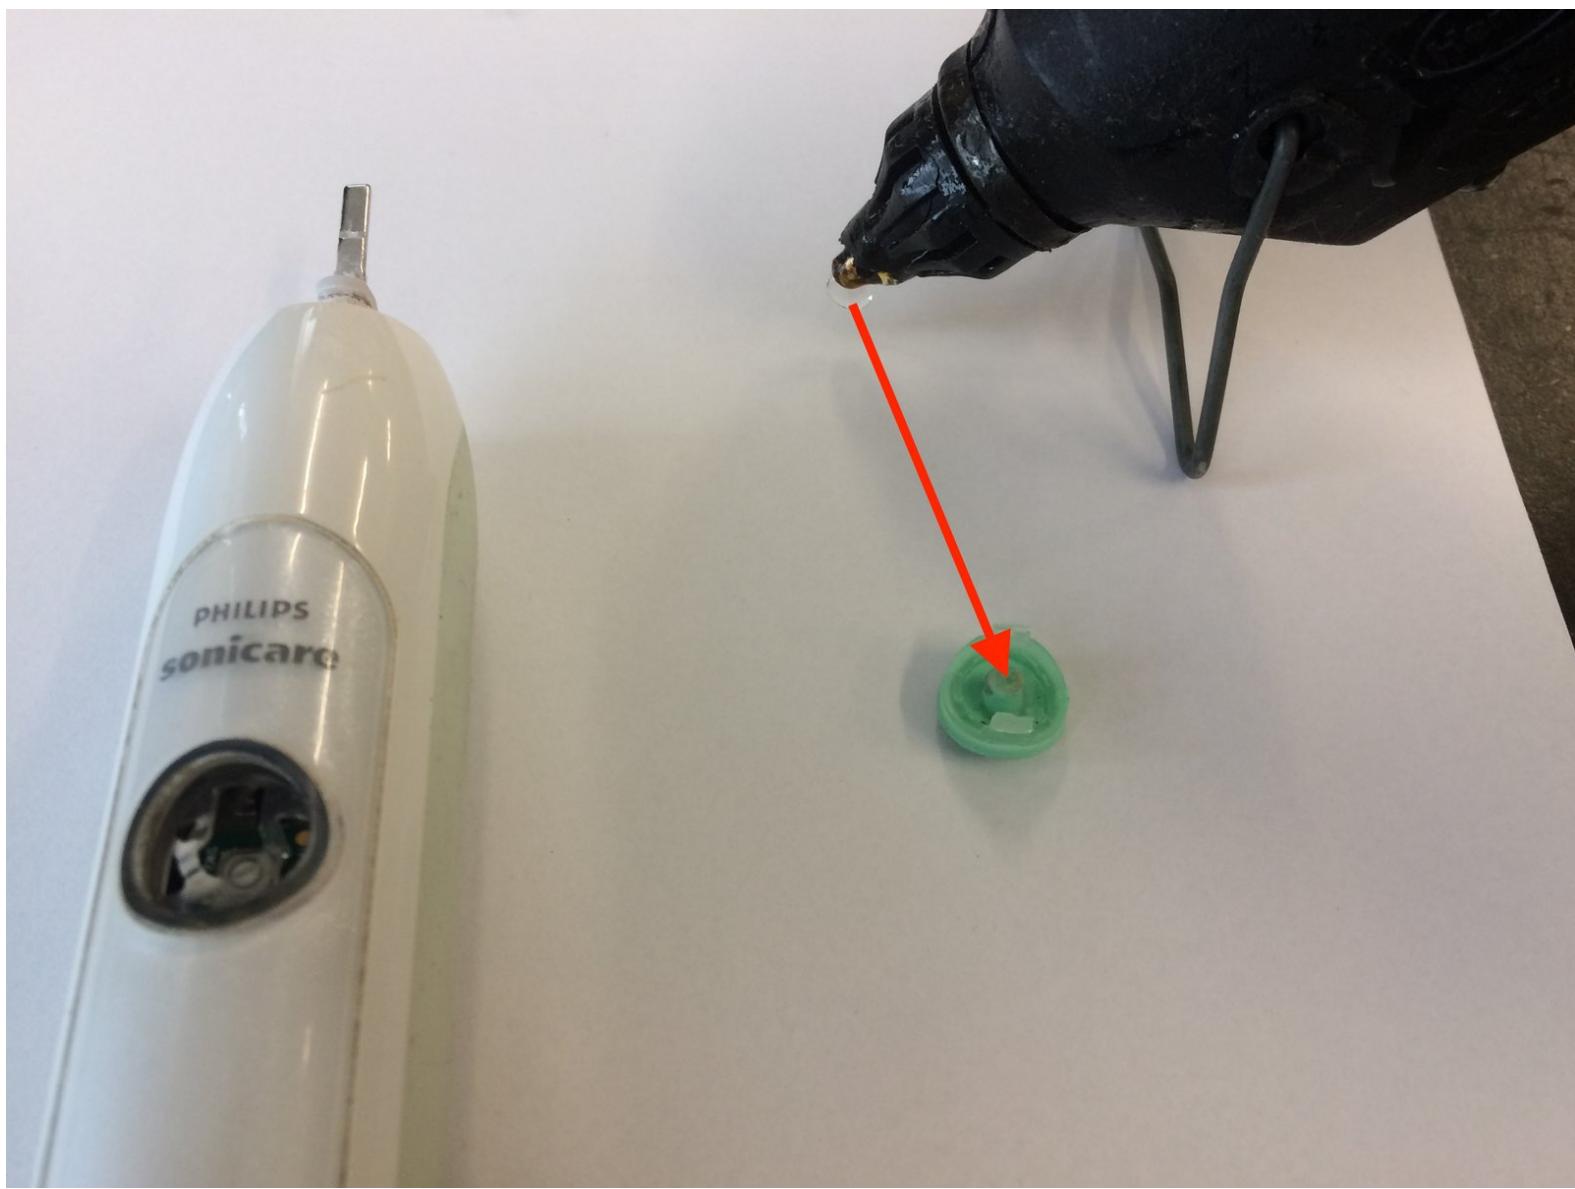

Philips Sonicare HX6711 HealthyWhite 710 ON/OFF Button Repair

Fixing the ON/OFF Button. After some years in use toothbrush is not turning on at all or only if the button is pressed very hard.

Written By: Konzentrat



This document was generated on 2019-09-18 01:43:55 PM (MST).

INTRODUCTION

Fixing the ON/OFF Button. After some years in use toothbrush is not turning on at all or only if the button is pressed very hard.

TOOLS:

- 1.5 mm Flathead Screwdriver (1)
- New Item (1)

Step 1 — Remove rubber and place hotglue on it



- Gently remove the rubber-button with a small screwdriver and place a small drop of hotglue on the rubber. Let the glue cool down and put the rubber back in place.

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.